



# ThinkSystem ST650 V2 Maintenance Manual



**Machine Types:** 7Z74 and 7Z75

## **Note**

Before using this information and the product it supports, be sure to read and understand the safety information and the safety instructions, which are available at:

[http://thinksystem.lenovofiles.com/help/topic/safety\\_documentation/pdf\\_files.html](http://thinksystem.lenovofiles.com/help/topic/safety_documentation/pdf_files.html)

In addition, ensure that you are familiar with the terms and conditions of the Lenovo warranty for your server, which can be found at:

<http://datacentersupport.lenovo.com/warrantylookup>

**Tenth Edition (June 2022)**

**© Copyright Lenovo 2020, 2022.**

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration (GSA) contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

---

# Contents

<b>Contents</b> . . . . .	<b>i</b>	Installation Guidelines . . . . .	59
<b>Safety</b> . . . . .	<b>v</b>	Safety inspection checklist . . . . .	60
Safety inspection checklist . . . . .	vi	System reliability guidelines . . . . .	61
<b>Chapter 1. Introduction</b> . . . . .	<b>1</b>	Working inside the server with the power on . . . . .	61
Server form factor . . . . .	1	Handling static-sensitive devices . . . . .	62
Specifications . . . . .	1	2.5-inch hot-swap drive backplane replacement . . . . .	62
Particulate contamination . . . . .	8	Remove a 2.5-inch hot-swap drive backplane . . . . .	62
Firmware updates . . . . .	9	Install a 2.5-inch hot-swap drive backplane . . . . .	64
Tech Tips . . . . .	13	2.5-inch drive replacement from 3.5-inch drive bay . . . . .	65
Security advisories . . . . .	13	Remove a 2.5-inch drive from a 3.5-inch drive bay . . . . .	66
Power on the server . . . . .	13	Install a 2.5-inch drive into a 3.5-inch drive bay . . . . .	67
Power off the server . . . . .	13	3.5-inch hot-swap drive backplane replacement . . . . .	69
<b>Chapter 2. Server components</b> . . . . .	<b>15</b>	Remove a 3.5-inch hot-swap drive backplane . . . . .	69
Front view . . . . .	16	Install a 3.5-inch hot-swap drive backplane . . . . .	70
Front panel . . . . .	21	3.5-inch simple-swap drive backplate replacement . . . . .	71
Rear view . . . . .	24	Remove a 3.5-inch simple-swap drive backplate . . . . .	71
Rear view LEDs . . . . .	26	Install a 3.5-inch simple-swap drive backplate . . . . .	73
External LCD diagnostics handset . . . . .	27	A2/L4 GPU air duct replacement . . . . .	74
System board components . . . . .	33	Remove an A2/L4 GPU air duct . . . . .	75
System board LEDs . . . . .	35	Install an A2/L4 GPU air duct . . . . .	76
System board switches . . . . .	36	Air baffle replacement . . . . .	77
Server locks . . . . .	38	Remove the air baffle . . . . .	77
Backplates and backplanes . . . . .	39	Install the air baffle . . . . .	79
2.5-inch drive backplanes . . . . .	39	CMOS battery (CR2032) replacement . . . . .	81
3.5-inch drive backplanes . . . . .	40	Remove the CMOS battery (CR2032) . . . . .	81
3.5-inch drive backplate . . . . .	41	Install the CMOS battery (CR2032) . . . . .	83
Power distribution board connectors . . . . .	41	Drive replacement . . . . .	85
Parts list . . . . .	42	Remove a simple-swap drive . . . . .	85
Power cords . . . . .	47	Install a simple-swap drive . . . . .	86
<b>Chapter 3. Internal cable routing</b> . . . . .	<b>49</b>	Remove a hot-swap drive . . . . .	88
Backplane and backplate cable routing . . . . .	50	Install a hot-swap drive . . . . .	89
Front panel cable routing . . . . .	50	EIA brackets replacement . . . . .	91
Front USB cable routing . . . . .	51	Remove the EIA brackets . . . . .	91
GPU cable routing . . . . .	52	Install the EIA brackets . . . . .	93
Internal CFF RAID adapter cable routing . . . . .	52	Expansion drive cage replacement . . . . .	95
M.2 boot adapter cable routing . . . . .	53	Remove the expansion drive cage . . . . .	95
Optical drive cable routing . . . . .	54	Install the expansion drive cage . . . . .	96
PCIe slot 8 cable routing . . . . .	54	Fan and fan cage replacement . . . . .	97
Power distribution board cable routing . . . . .	55	Remove a hot-swap fan . . . . .	97
Tape drive cable routing . . . . .	56	Install a hot-swap fan . . . . .	99
<b>Chapter 4. Hardware replacement procedures</b> . . . . .	<b>59</b>		

Remove the fan cage assembly . . . . .	100	Remove the 5.25-inch drive bay adapter assembly . . . . .	157
Install the fan cage assembly . . . . .	101	Install the 5.25-inch drive bay adapter assembly . . . . .	160
Flash power module replacement . . . . .	103	PCIe adapter holder replacement . . . . .	164
Remove a flash power module . . . . .	103	Remove a PCIe adapter holder . . . . .	164
Install a flash power module . . . . .	105	Install a PCIe adapter holder . . . . .	165
Foot stands replacement . . . . .	106	PCIe adapter replacement. . . . .	166
Remove the foot stands . . . . .	107	Remove a PCIe adapter . . . . .	167
Install the foot stands . . . . .	108	Install a PCIe adapter . . . . .	168
Front bezel replacement . . . . .	109	Power distribution board replacement . . . . .	170
Remove the front bezel . . . . .	109	Remove the power distribution board . . . . .	170
Install the front bezel . . . . .	111	Install the power distribution board . . . . .	171
Front panel board assembly replacement. . . . .	112	Power distribution board cover replacement . . . . .	173
Remove the front panel board assembly . . . . .	112	Remove the power distribution board cover . . . . .	173
Install the front panel board assembly . . . . .	113	Install the power distribution board cover . . . . .	175
Full-length GPU adapter replacement . . . . .	115	Power supply unit replacement. . . . .	176
Remove a full-length GPU adapter . . . . .	115	Remove a hot-swap power supply. . . . .	177
Install a full-length GPU adapter . . . . .	117	Install the hot-swap power supply . . . . .	180
GPU filler replacement . . . . .	118	Processor and heat sink replacement . . . . .	183
Remove a GPU filler . . . . .	118	Remove a processor and heat sink . . . . .	183
Install a GPU filler . . . . .	120	Separate the processor from carrier and heat sink. . . . .	187
Heat sink Torx T30 nut replacement . . . . .	121	Install a processor and heat sink . . . . .	189
Remove a heat sink Torx T30 nut . . . . .	121	Front door replacement. . . . .	194
Install a heat sink Torx T30 nut . . . . .	123	Remove the security door . . . . .	195
Internal CFF adapter replacement. . . . .	125	Install the security door . . . . .	196
Remove the internal CFF adapter . . . . .	125	Server cover replacement . . . . .	197
Install the internal CFF adapter . . . . .	127	Remove the server cover . . . . .	197
Intrusion switch replacement . . . . .	129	Install the server cover . . . . .	199
Remove the intrusion switch . . . . .	129	System board replacement (trained technician only) . . . . .	200
Install the intrusion switch . . . . .	131	Remove the system board . . . . .	200
M.2 boot adapter replacement . . . . .	133	Install the system board . . . . .	203
Remove the M.2 boot adapter . . . . .	133	Update the machine type and serial number . . . . .	206
Install the M.2 boot adapter . . . . .	134	Enable TPM/TCM . . . . .	208
M.2 drive replacement . . . . .	136	Enable UEFI Secure Boot . . . . .	210
Remove an M.2 drive . . . . .	136	T4 filler replacement . . . . .	211
Adjust the retainer on the M.2 boot adapter . . . . .	137	Remove a T4 filler . . . . .	211
Install an M.2 drive . . . . .	138	Install a T4 filler . . . . .	212
Memory module replacement . . . . .	140	Complete the parts replacement . . . . .	214
Remove a memory module . . . . .	140		
Install a memory module . . . . .	142		
NVLink bridge replacement . . . . .	144		
Remove an NVLink bridge . . . . .	144		
Install an NVLink bridge . . . . .	146		
Optical drive cage replacement. . . . .	147		
Remove the optical drive cage . . . . .	147		
Install the optical drive cage . . . . .	148		
Optical drive or tape drive replacement . . . . .	150		
Remove an optical drive or a tape drive. . . . .	150		
Install an optical drive or a tape drive. . . . .	153		
		<b>Chapter 5. Problem determination . . . . .</b>	<b>215</b>
		Event logs . . . . .	215
		Light path diagnostics . . . . .	217
		General problem determination procedures . . . . .	217
		Resolving suspected power problems . . . . .	217
		Resolving suspected Ethernet controller problems . . . . .	218

---

Troubleshooting by symptom . . . . .	218
Hard disk drive problems . . . . .	219
Fan problems . . . . .	221
Intermittent problems . . . . .	221
Keyboard, mouse, KVM switch or USB-device problems . . . . .	222
Memory problems . . . . .	223
Monitor and video problems . . . . .	228
Network problems . . . . .	229
Observable problems . . . . .	229
Optional-device problems . . . . .	232
Power on and power off problems . . . . .	234
Processor problems . . . . .	235
Serial-device problems . . . . .	236
Software problems . . . . .	236

**Appendix A. Hardware  
disassembling for recycle . . . . . .239**

Disassemble the server for chassis recycle . . . . .	239
--	-----

**Appendix B. Getting help and  
technical assistance . . . . . .241**

Before you call . . . . .	241
Collecting service data . . . . .	242
Contacting Support . . . . .	243

**Appendix C. Notices. . . . . .245**

Trademarks . . . . .	246
Important notes . . . . .	246
Electronic emission notices . . . . .	246
Taiwan Region BSMI RoHS declaration . . . . .	247
Taiwan Region import and export contact information . . . . .	247

**Index . . . . . .249**



---

## Safety

Before installing this product, read the Safety Information.

قبل تركيب هذا المنتج، يجب قراءة الملاحظات الأمنية

Antes de instalar este produto, leia as Informações de Segurança.

在安装本产品之前，请仔细阅读 Safety Information（安全信息）。

安裝本產品之前，請先閱讀「安全資訊」。

Prije instalacije ovog produkta obavezno pročitajte Sigurnosne Upute.

Před instalací tohoto produktu si přečtěte příručku bezpečnostních instrukcí.

Læs sikkerhedsforskrifterne, før du installerer dette produkt.

Lees voordat u dit product installeert eerst de veiligheidsvoorschriften.

Ennen kuin asennat tämän tuotteen, lue turvaohjeet kohdasta Safety Information.

Avant d'installer ce produit, lisez les consignes de sécurité.

Vor der Installation dieses Produkts die Sicherheitshinweise lesen.

Πριν εγκαταστήσετε το προϊόν αυτό, διαβάστε τις πληροφορίες ασφάλειας (safety information).

לפני שתתקינו מוצר זה, קראו את הוראות הבטיחות.

A termék telepítése előtt olvassa el a Biztonsági előírásokat!

Prima di installare questo prodotto, leggere le Informazioni sulla Sicurezza.

製品の設置の前に、安全情報をお読みください。

본 제품을 설치하기 전에 안전 정보를 읽으십시오.

Пред да се инсталира овој продукт, прочитајте информацијата за безбедност.



Les sikkerhetsinformasjonen (Safety Information) før du installerer dette produktet.

Przed zainstalowaniem tego produktu, należy zapoznać się z książką "Informacje dotyczące bezpieczeństwa" (Safety Information).

Antes de instalar este produto, leia as Informações sobre Segurança.

Перед установкой продукта прочтите инструкции по технике безопасности.

Pred inštaláciou tohto zariadenia si pečítajte Bezpečnostné predpisy.

Pred namestitvijo tega proizvoda preberite Varnostne informacije.

Antes de instalar este producto, lea la información de seguridad.

Läs säkerhetsinformationen innan du installerar den här produkten.

ཐོན་ཁུངས་འདི་བདེ་སྤྱོད་མ་བྱས་གོང་། སྐྱོར་གྱི་ཡིད་གཟབ་  
བྱ་འདྲ་མིན་ཡོད་པའི་འོད་ཟེར་བལྟ་དགོས།

Bu ürünü kurmadan önce güvenlik bilgilerini okuyun.

مەزكۇر مەھسۇلاتنى ئورنىتىشتىن بۇرۇن بىخەتەرلىك ئۇچۇرلىرىنى ئوقۇپ چىقىڭ.

Youq mwngz yungh canjbinj neix gaxgonq, itdingh aeu doeg aen  
canjbinj soengq cungj vahgangj ancien siusik.

---

## Safety inspection checklist

Use the information in this section to identify potentially unsafe conditions with your server. As each machine was designed and built, required safety items were installed to protect users and service technicians from injury.

### Notes:

1. The product is not suitable for use at visual display workplaces according to §2 of the Workplace Regulations.
2. The set-up of the server is made in the server room only.

### CAUTION:

**This equipment must be installed or serviced by trained personnel, as defined by the NEC, IEC 62368-1 & IEC 60950-1, the standard for Safety of Electronic Equipment within the Field of Audio/Video, Information Technology and Communication Technology. Lenovo assumes you are qualified in the servicing of equipment and trained in recognizing hazards energy levels in products. Access to the equipment is by the use of a tool, lock and key, or other means of security, and is controlled by the authority responsible for the location.**

**Important:** Electrical grounding of the server is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Use the following checklist to verify that there are no potentially unsafe conditions:

1. Make sure that the power is off and the power cord is disconnected.
2. Check the power cord.
  - Make sure that the third-wire ground connector is in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
  - Make sure that the power cord is the correct type.

To view the power cords that are available for the server:

- a. Go to:



<http://dcsc.lenovo.com/#/>

- b. Click **Preconfigured Model** or **Configure to order**.
- c. Enter the machine type and model for your server to display the configurator page.
- d. Click **Power → Power Cables** to see all line cords.
  - Make sure that the insulation is not frayed or worn.
3. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
4. Check inside the server for any obvious unsafe conditions, such as metal filings, contamination, water or other liquid, or signs of fire or smoke damage.
5. Check for worn, frayed, or pinched cables.
6. Make sure that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.



---

## Chapter 1. Introduction

The ThinkSystem ST650 V2 server is a 4U tower server designed for performance and expansion for various IT workloads. With the modular design, the server is flexible to be customized for maximum storage capacity or high storage density with selectable input/output options and tiered system management.

Performance, ease of use, reliability, and expansion capabilities were key considerations in the design of the server. These design features make it possible for you to customize the system hardware to meet your needs today and provide flexible expansion capabilities for the future.

The server comes with a limited warranty. For details about the warranty, see:

For details about your specific warranty, see: <http://datacentersupport.lenovo.com/warrantylookup>

---

### Server form factor

The ThinkSystem ST650 V2 server is designed to support both tower and rack form factors.

You can change the server from tower form factor to rack form factor by installing the tower to rack conversion kit. For instructions on how to install the tower to rack conversion kit, refer to “Install the tower to rack conversion kit” in the *ThinkSystem ST650 V2 Setup Guide*.

---

### Specifications

Table 1. Specifications

Specification	Description
<b>Dimension</b>	4U server <ul style="list-style-type: none"><li>• Height:<ul style="list-style-type: none"><li>– Without foot stand: 448 mm (17.64 inches)</li><li>– With foot stand: 461.4 mm (18.17 inches)</li></ul></li><li>• Width:<ul style="list-style-type: none"><li>– Without foot stand: 174.2 mm (6.86 inches)</li><li>– With foot stand: 247.4 mm (9.74 inches)</li></ul></li><li>• Depth:<ul style="list-style-type: none"><li>– Without security door: 710.8 mm (27.98 inches)</li><li>– With security door: 733.8 mm (28.89 inches)</li></ul></li></ul>
<b>Weight (depending on the configuration)</b>	<ul style="list-style-type: none"><li>• 2.5-inch drive configuration:<ul style="list-style-type: none"><li>– Maximum: 39.28 kg (86.60 lb)</li></ul></li><li>• 3.5-inch drive configuration:<ul style="list-style-type: none"><li>– Maximum: 46.23 kg (101.92 lb)</li></ul></li></ul>

Table 1. Specifications (continued)

Specification	Description
<p><b>Processor</b></p>	<p>Supports multi-core Intel Xeon processors, with integrated memory controller and Intel Mesh UPI (Ultra Path Interconnect) topology.</p> <ul style="list-style-type: none"> <li>• Supports up to two 250W processors</li> <li>• Designed for the LGA 4189 socket</li> <li>• Scalable up to 52 cores (with two processors installed)</li> <li>• Supports up to 4 UPI links at 11.2 GT/s</li> </ul> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Only two-socket type CPUs are supported in two CPU configurations.</li> <li>• UPI function is only available when two or more processors are installed.</li> </ul> <p>For a list of supported processors, see:  <a href="https://serverproven.lenovo.com/">https://serverproven.lenovo.com/</a></p>
<p><b>Memory</b></p>	<p>See “Memory module installation order” in <i>Setup Guide</i> for detailed information about memory configuration and setup.</p> <ul style="list-style-type: none"> <li>• Minimum: 16 GB</li> <li>• Maximum: <ul style="list-style-type: none"> <li>– 2048 GB using registered DIMMs (RDIMMs)</li> <li>– 3072 GB using registered DIMMs (RDIMMs) and Persistent Memory Modules (PMEM)</li> </ul> </li> <li>• Slots: thirty-two DIMM slots</li> <li>• Supports: <ul style="list-style-type: none"> <li>– 16 GB, 32 GB, 64 GB TruDDR4 3200 MHz RDIMM</li> <li>– 128 GB TruDDR4 3200 MHz 3DS RDIMM</li> <li>– 128 GB Persistent Memory Modules (PMEM)</li> </ul> </li> </ul> <p>For a list of supported memory modules, see:  <a href="https://serverproven.lenovo.com/">https://serverproven.lenovo.com/</a></p>
<p><b>Drive bays (varies by model)</b></p>	<p>Drive bays and drives supported by your server vary by model.</p> <ul style="list-style-type: none"> <li>• Storage drive bays: <ul style="list-style-type: none"> <li>– Server models with 3.5-inch simple-swap drive bays <ul style="list-style-type: none"> <li>– Supports up to twelve SATA drives</li> </ul> </li> <li>– Server models with 3.5-inch hot-swap drive bays <ul style="list-style-type: none"> <li>– Supports up to sixteen SAS/SATA drives</li> <li>– Supports up to eight SAS/SATA drives and eight NVMe drives</li> </ul> </li> <li>– Server models with 2.5-inch hot-swap drive bays <ul style="list-style-type: none"> <li>– Supports up to thirty-two SAS/SATA drives</li> <li>– Supports up to sixteen SAS/SATA drives and sixteen NVMe drives</li> </ul> </li> </ul> </li> <li>• Optical drive bays <ul style="list-style-type: none"> <li>– Two optical drive bays <ul style="list-style-type: none"> <li>– Supports up to one tape drive (RDX or LTO) and one optical disk drive</li> </ul> </li> </ul> </li> </ul> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• The server supports the installation of 2.5-inch SSDs in a 3.5 inch disk bay through the use of a conversion kit. See “<a href="#">Install a 2.5-inch drive into a 3.5-inch drive bay</a>” on <a href="#">page 67</a> for details.</li> <li>• When A2/L4 GPU(s) are installed, up to four drive backplanes are supported.</li> </ul> <p>When other types of GPUs are installed, only up to two backplanes or backplates are supported, and no optical drive or tape drive can be installed.</p> <p>See “Technical rules for system fans” in <i>Setup Guide</i> for detailed information about the storage limitations in different server configurations..</p>

Table 1. Specifications (continued)

Specification	Description
<b>M.2 drive</b>	<p>Supports up to two M.2 drives:</p> <ul style="list-style-type: none"> <li>• 42 mm (2242)</li> <li>• 60 mm (2260)</li> <li>• 80 mm (2280)</li> <li>• 110 mm (22110)</li> </ul>
<b>Expansion slots</b>	<p>Nine PCIe expansion slots are available:</p> <ul style="list-style-type: none"> <li>• Slot 1: PCIe4 x16, 75W, Full-height, half-length</li> <li>• Slot 2: PCIe4 x8 (open end), 75W, Full-height, half-length</li> <li>• Slot 3: PCIe4 x16, 75W, Full-height, half-length</li> <li>• Slot 4: PCIe4 x8 (open end), 75W, Full-height, half-length</li> <li>• Slot 5: PCIe4 x16, 75W, Full-height, half-length</li> <li>• Slot 6: PCIe4 x8 (open end), 75W, Full-height, half-length</li> <li>• Slot 7: PCIe4 x16, 75W, Full-height, half-length</li> <li>• Slot 8: PCIe3 x8 (open end), 75W, Full-height, half-length (requires additional cable connection, see <a href="#">“PCIe slot 8 cable routing” on page 54</a>)</li> <li>• Slot 9: PCIe4 x8 (open end), 75W, Full-height, half-length</li> </ul> <p><b>Notes:</b> When Slot 8 is used:</p> <ul style="list-style-type: none"> <li>• Up to 6 NVMe drives can be supported in 3.5-inch configurations with two NVMe/AnyBay backplanes.</li> <li>• Up to 14 NVMe drives can be supported in 2.5-inch configurations with two NVMe/AnyBay backplanes.</li> <li>• 3.5-inch configurations with two NVMe/AnyBay backplanes and no NVMe Retimer Adapter or one NVMe Retimer Adapter is not supported.</li> <li>• 2.5-inch configurations with two NVMe/AnyBay backplanes and two NVMe Retimer Adapters or three NVMe Retimer Adapters are not supported.</li> </ul>
<b>Onboard NVMe connectors</b>	<p>Four onboard NVMe connectors are available:</p> <ul style="list-style-type: none"> <li>• PCIe 1: Gen3</li> <li>• PCIe 2: Gen3</li> <li>• PCIe 3: Gen4</li> <li>• PCIe 4: Gen4 when connected to backplane, Gen3 when connected to PCIe slot 8 enable connector.</li> </ul>
<b>Input/Output (I/O) features</b>	<ul style="list-style-type: none"> <li>• Front panel <ul style="list-style-type: none"> <li>– One USB 2.0 connector with Lenovo XClarity Controller management</li> <li>– One USB 3.2 Gen 1 connector</li> </ul> </li> <li>• Rear panel <ul style="list-style-type: none"> <li>– One External LCD diagnostics handset connector</li> <li>– Four USB 3.2 Gen 1 connectors</li> <li>– Two 10Gb Ethernet connectors</li> <li>– One VGA connector</li> <li>– One serial-port-module slot</li> <li>– One XClarity Controller network connector (RJ-45 Ethernet connector)</li> </ul> </li> </ul>
<b>Network</b>	<ul style="list-style-type: none"> <li>• Two 10Gb ethernet connectors</li> <li>• One XClarity Controller network connector (RJ-45 Ethernet connector)</li> </ul> <p><b>Note:</b> Use CAT6A UTP cables rated at 625 MHz bandwidth for the 10Gb on-board LAN.</p>

Table 1. Specifications (continued)

Specification	Description
<b>Storage controller</b>	<ul style="list-style-type: none"> <li>• Twelve onboard SATA ports (only the first 8 drives can be configured using Intel VROC SATA RAID)</li> <li>• Eight onboard NVMe ports (Intel VROC NVMe RAID)</li> <li>• NVMe Retimer Adapter (Intel VROC NVMe RAID)</li> </ul> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• ThinkSystem RAID 940-32i 8GB Flash PCIe Gen4 12Gb Adapter can only be installed in slot 9 in one CPU configurations, and installed in slot 9, 5, 6, 7, or 8 in two CPU configurations.</li> <li>• ThinkSystem RAID 540-8i PCIe Gen4 12Gb Adapter cannot be mixed with other RAID/HBA.</li> <li>• Onboard SATA 8-11 connector can only support ACHI mode when ThinkSystem M.2 NVMe 2-Bay RAID Enablement Kit or ThinkSystem M.2 SATA 2-Bay RAID Enablement Kit is installed.</li> <li>• Drives connected to SATA 6-7 (from onboard SATA 4-7 connector) cannot be used for bootable Windows system disk when in RAID mode.</li> </ul> <p>For a list of supported adapters, see:  <a href="https://serverproven.lenovo.com/">https://serverproven.lenovo.com/</a></p>
<b>Fans</b>	<p>Supports up to four hot-swap fans:</p> <ul style="list-style-type: none"> <li>• 9238 single-rotor hot-swap fans</li> <li>• 9256 dual-rotor hot-swap fans</li> </ul> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Single-rotor hot-swap fans cannot be mixed with dual-rotor hot-swap fans.</li> <li>• When the system is power off but still plugged in to AC power, the fan in slot 4 may continue to spin at a much lower speed. This is the system design to provide proper cooling.</li> <li>• See “Technical rules for system fans” in <i>Setup Guide</i> for detailed information about fan configuration.</li> </ul>

Table 1. Specifications (continued)

Specification	Description
<p><b>Power supply</b></p>	<p>Supports up to two power supplies with N+N redundancy:</p> <ul style="list-style-type: none"> <li>• ThinkSystem 2400W (230V) v2 Platinum hot-swap power supply</li> <li>• ThinkSystem 1800W (230V) v2 Platinum hot-swap power supply</li> <li>• ThinkSystem 1800W (230V) v2 Titanium hot-swap power supply</li> <li>• ThinkSystem 1100W (230V/115V) v2 Platinum hot-swap power supply</li> <li>• ThinkSystem 1100W (230V) v2 Titanium hot-swap power supply</li> <li>• ThinkSystem 750W (230V) v2 Titanium hot-swap power supply</li> <li>• ThinkSystem 750W(230/115V) v2 Platinum hot-swap power supply</li> </ul> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• 100V+ is only allowed on the following: <ul style="list-style-type: none"> <li>– 750W Platinum</li> <li>– 1100W Platinum</li> </ul> </li> <li>• 200V+ is only allowed on the following: <ul style="list-style-type: none"> <li>– 750W Platinum</li> <li>– 750W Titanium</li> <li>– 1100W Platinum</li> <li>– 1100W Titanium</li> <li>– 1800W Platinum</li> <li>– 1800W Titanium</li> <li>– 2400W Platinum</li> </ul> </li> </ul> <p><b>CAUTION:</b></p> <ul style="list-style-type: none"> <li>• <b>240 V dc input (input range: 180-300 V dc) is ONLY supported in Chinese Mainland.</b></li> <li>• <b>Power supplies with 240 V dc are not hot-swappable. To remove the power cord, ensure you have turned off the server or disconnected the dc power sources at the breaker panel.</b></li> <li>• <b>In order for the ThinkSystem products to operate error free in both a DC or AC electrical environment, a TN-S earthing system which complies to 60364-1 IEC 2005 standard has to be present or installed.</b></li> </ul>
<p><b>Minimal configuration for debugging</b></p>	<ul style="list-style-type: none"> <li>• One processor in processor socket 1</li> <li>• One DRAM DIMM in DIMM slot 14</li> <li>• One power supply in PSU slot 1</li> <li>• One drive with RAID adapter and backplane or backplate (if OS is needed for debugging)</li> <li>• Three single rotor fans in fan slot 1, 2, and 4.</li> <li>• One fan filler in fan slot 3.</li> </ul>

Table 1. Specifications (continued)

Specification	Description
<p><b>Environment</b></p>	<p>The ThinkSystem ST650 V2 server complies with ASHRAE Class A2 specifications. Depending on the hardware configuration, some models comply with ASHRAE Class A3 and Class A4 specifications. System performance may be impacted when operating temperature is outside ASHRAE A2 specification.</p> <ul style="list-style-type: none"> <li>• Air temperature: <ul style="list-style-type: none"> <li>– Operating <ul style="list-style-type: none"> <li>– ASHRAE Class A2: 10°C to 35°C (50°F to 95°F); the maximum ambient temperature decreases by 1°C for every 300 m (984 ft) increase in altitude above 900 m (2,953 ft).</li> <li>– ASHRAE Class A3: 5°C to 40°C (41°F to 104°F); the maximum ambient temperature decreases by 1°C for every 175 m (574 ft) increase in altitude above 900 m (2,953 ft).</li> <li>– ASHRAE Class A4: 5°C to 45°C (41°F to 113°F); the maximum ambient temperature decreases by 1°C for every 125 m (410 ft) increase in altitude above 900 m (2,953 ft).</li> </ul> </li> <li>– Server off: -10°C to 60°C (14°F to 140°F)</li> <li>– Shipment/storage: -40°C to 60°C (-40°F to 140°F)</li> </ul> </li> <li>• Maximum altitude: 3,050 m (10,000 ft)</li> <li>• Relative Humidity (non-condensing): <ul style="list-style-type: none"> <li>– Operating <ul style="list-style-type: none"> <li>– ASHRAE Class A2: 8% to 80%; maximum dew point: 21°C (70°F)</li> <li>– ASHRAE Class A3: 8% to 85%; maximum dew point: 24°C (75°F)</li> <li>– ASHRAE Class A4: 8% to 90%; maximum dew point: 24°C (75°F)</li> </ul> </li> <li>– Shipment/storage: 8% to 90%</li> </ul> </li> <li>• Particulate contamination</li> </ul> <p><b>Attention:</b> Airborne particulates and reactive gases acting alone or in combination with other environmental factors such as humidity or temperature might pose a risk to the server. For information about the limits for particulates and gases, see <a href="#">“Particulate contamination” on page 8.</a></p>
<p><b>Acoustical noise emissions</b></p>	<p>The server has the following acoustical noise emissions declaration:</p> <ul style="list-style-type: none"> <li>• Sound power level (<math>L_{WA}</math>) <ul style="list-style-type: none"> <li>– Idling: <ul style="list-style-type: none"> <li>– Min: 5.0 Bel</li> <li>– Typical: 5.6 Bel</li> <li>– GPU: 7.2 Bel</li> </ul> </li> <li>– Operating: <ul style="list-style-type: none"> <li>– Min: 5.6 Bel</li> <li>– Typical: 5.6 Bel</li> <li>– GPU: 8.5 Bel</li> </ul> </li> </ul> </li> <li>• Sound pressure level (<math>L_{pAm}</math>): <ul style="list-style-type: none"> <li>– Idling: <ul style="list-style-type: none"> <li>– Min: 37 dBA</li> <li>– Typical: 41 dBA</li> <li>– GPU: 57 dBA</li> </ul> </li> <li>– Operating: <ul style="list-style-type: none"> <li>– Min: 41 dBA</li> <li>– Typical: 41 dBA</li> <li>– GPU: 69 dBA</li> </ul> </li> </ul> </li> </ul> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• The fans will temporarily run at higher speeds on system boot due to processor power calibration.</li> <li>• These sound levels were measured in controlled acoustical environments according to procedures specified by ISO7779 and are reported in accordance with ISO 9296.</li> </ul>



Table 1. Specifications (continued)

Specification	Description
	<ul style="list-style-type: none"> <li>• The declared acoustic sound levels are based on the specified configurations, which may change slightly depending on configuration/conditions.               <ul style="list-style-type: none"> <li>– Min configuration: one 105W processor, four 16 GB DIMMs, two 480 GB SSD drives, two onboard 10GB LAN ports, one 750W power supply unit.</li> <li>– Typical configuration: two 125W processors, sixteen 32 GB DIMMs, eight SAS hard disk drives, one 530-8i RAID Adapter, two onboard 10GB LAN ports, two 750W power supply units.</li> <li>– GPU configuration: two 165W processors, thirty-two 64 GB DIMMs, eight SAS hard disk drives, one 930-8i RAID adapter, two onboard 10GB LAN ports, eight Nvidia Tesla T4 GPU adapters, two 1800W power supply units.</li> </ul> </li> <li>• The declared acoustic noise levels may increase greatly, if high-power components are installed such as high-power NICs, high-power processors and GPUs.</li> <li>• Government regulations (such as those prescribed by OSHA or European Community Directives) may govern noise level exposure in the workplace and may apply to you and your server installation. The actual sound pressure levels in your installation depend upon a variety of factors, including the number of racks in the installation; the size, materials, and configuration of the room; the noise levels from other equipment; the room ambient temperature, and employee's location in relation to the equipment. Further, compliance with such government regulations depends on a variety of additional factors, including the duration of employees' exposure and whether employees wear hearing protection. Lenovo recommends that you consult with qualified experts in this field to determine whether you are in compliance with the applicable regulations.</li> </ul>
<b>Ambient temperature management</b>	<p>Adjust ambient temperature when specific components are installed:</p> <p><b>Note:</b> Ensure to observe the fan installation rules and sequence in “Technical rules for system fans” in the <i>ThinkSystem ST650 V2 Setup Guide</i>.</p> <ul style="list-style-type: none"> <li>• Keep ambient temperature to <b>30°C</b> or lower when one or more of the following components are installed.               <ul style="list-style-type: none"> <li>– Processors with 205 to 250 watts</li> <li>– Thirty-two registered DIMMs (RDIMMs) with 128 GB or less</li> <li>– GPU adapter</li> </ul> </li> <li>• Keep ambient temperature to <b>35°C</b> or lower when one or more of the following components are installed.               <ul style="list-style-type: none"> <li>– Processors with 165 to 195 watts</li> <li>– Thirty-two registered DIMMs (RDIMMs) with 64 GB or less</li> <li>– Persistent Memory Modules (PMEM)</li> <li>– Retimer</li> <li>– ThinkSystem Mellanox ConnectX series adapter</li> <li>– Fibre Channel adapter</li> <li>– NVMe drive</li> <li>– RAID/HBA adapter</li> <li>– External NIC adapter</li> <li>– M.2 NVMe drive</li> </ul> </li> <li>• Keep ambient temperature to <b>40°C</b> or lower when one or more of the following components are installed.               <ul style="list-style-type: none"> <li>– Processors with 135 to 150 watts</li> </ul> </li> <li>• Keep ambient temperature to <b>45°C</b> or lower when one or more of the following components are installed.               <ul style="list-style-type: none"> <li>– Processors with 120 watts or less</li> <li>– Thirty-two registered DIMMs (RDIMMs) with 32 GB or less</li> <li>– Two backplanes/backplates</li> </ul> </li> </ul>

Table 1. Specifications (continued)

Specification	Description
<b>Operating systems</b>	Supported and certified operating systems: <ul style="list-style-type: none"> <li>• Microsoft Windows Server</li> <li>• VMware ESXi</li> <li>• Red Hat Enterprise Linux</li> <li>• SUSE Linux Enterprise Server</li> </ul> References: <ul style="list-style-type: none"> <li>• Complete list of available operating systems: <a href="https://lenovopress.com/osig">https://lenovopress.com/osig</a>.</li> <li>• OS deployment instructions: See “Deploy the operating system” in <i>Setup Guide</i>..</li> </ul>

## Particulate contamination

**Attention:** Airborne particulates (including metal flakes or particles) and reactive gases acting alone or in combination with other environmental factors such as humidity or temperature might pose a risk to the device that is described in this document.

Risks that are posed by the presence of excessive particulate levels or concentrations of harmful gases include damage that might cause the device to malfunction or cease functioning altogether. This specification sets forth limits for particulates and gases that are intended to avoid such damage. The limits must not be viewed or used as definitive limits, because numerous other factors, such as temperature or moisture content of the air, can influence the impact of particulates or environmental corrosives and gaseous contaminant transfer. In the absence of specific limits that are set forth in this document, you must implement practices that maintain particulate and gas levels that are consistent with the protection of human health and safety. If Lenovo determines that the levels of particulates or gases in your environment have caused damage to the device, Lenovo may condition provision of repair or replacement of devices or parts on implementation of appropriate remedial measures to mitigate such environmental contamination. Implementation of such remedial measures is a customer responsibility.

Table 2. Limits for particulates and gases

Contaminant	Limits
Reactive gases	<p>Severity level G1 as per ANSI/ISA 71.04-1985<sup>1</sup>:</p> <ul style="list-style-type: none"> <li>The copper reactivity level shall be less than 200 Angstroms per month (<math>\text{\AA}/\text{month} \approx 0.0035 \mu\text{g}/\text{cm}^2\text{-hour weight gain}</math>).<sup>2</sup></li> <li>The silver reactivity level shall be less than 200 Angstroms per month (<math>\text{\AA}/\text{month} \approx 0.0035 \mu\text{g}/\text{cm}^2\text{-hour weight gain}</math>).<sup>3</sup></li> <li>The reactive monitoring of gaseous corrosivity must be conducted approximately 5 cm (2 in.) in front of the rack on the air inlet side at one-quarter and three-quarter frame height off the floor or where the air velocity is much higher.</li> </ul>
Airborne particulates	<p>Data centers must meet the cleanliness level of ISO 14644-1 class 8.</p> <p>For data centers without airside economizer, the ISO 14644-1 class 8 cleanliness might be met by choosing one of the following filtration methods:</p> <ul style="list-style-type: none"> <li>The room air might be continuously filtered with MERV 8 filters.</li> <li>Air entering a data center might be filtered with MERV 11 or preferably MERV 13 filters.</li> </ul> <p>For data centers with airside economizers, the choice of filters to achieve ISO class 8 cleanliness depends on the specific conditions present at that data center.</p> <ul style="list-style-type: none"> <li>The deliquescent relative humidity of the particulate contamination should be more than 60% RH.<sup>4</sup></li> <li>Data centers must be free of zinc whiskers.<sup>5</sup></li> </ul>

<sup>1</sup> ANSI/ISA-71.04-1985. *Environmental conditions for process measurement and control systems: Airborne contaminants*. Instrument Society of America, Research Triangle Park, North Carolina, U.S.A.

<sup>2</sup> The derivation of the equivalence between the rate of copper corrosion growth in the thickness of the corrosion product in  $\text{\AA}/\text{month}$  and the rate of weight gain assumes that  $\text{Cu}_2\text{S}$  and  $\text{Cu}_2\text{O}$  grow in equal proportions.

<sup>3</sup> The derivation of the equivalence between the rate of silver corrosion growth in the thickness of the corrosion product in  $\text{\AA}/\text{month}$  and the rate of weight gain assumes that  $\text{Ag}_2\text{S}$  is the only corrosion product.

<sup>4</sup> The deliquescent relative humidity of particulate contamination is the relative humidity at which the dust absorbs enough water to become wet and promote ionic conduction.

<sup>5</sup> Surface debris is randomly collected from 10 areas of the data center on a 1.5 cm diameter disk of sticky electrically conductive tape on a metal stub. If examination of the sticky tape in a scanning electron microscope reveals no zinc whiskers, the data center is considered free of zinc whiskers.

## Firmware updates

Several options are available to update the firmware for the server.

You can use the tools listed here to update the most current firmware for your server and the devices that are installed in the server.

- Best practices related to updating firmware is available at the following site:
  - <http://lenovopress.com/LP0656>
- The latest firmware can be found at the following site:
  - <http://datacentersupport.lenovo.com/products/servers/thinksystem/st650v2/7Z74/downloads>
- You can subscribe to product notification to stay up to date on firmware updates:
  - <https://datacentersupport.lenovo.com/tw/en/solutions/ht509500>

## UpdateXpress System Packs (UXSPs)

Lenovo typically releases firmware in bundles called UpdateXpress System Packs (UXSPs). To ensure that all of the firmware updates are compatible, you should update all firmware at the same time. If you are updating firmware for both the Lenovo XClarity Controller and UEFI, update the firmware for Lenovo XClarity Controller first.

### Update method terminology

- **In-band update.** The installation or update is performed using a tool or application within an operating system that is executing on the server's core CPU.
- **Out-of-band update.** The installation or update is performed by the Lenovo XClarity Controller collecting the update and then directing the update to the target subsystem or device. Out-of-band updates have no dependency on an operating system executing on the core CPU. However, most out-of-band operations do require the server to be in the S0 (Working) power state.
- **On-Target update.** The installation or update is initiated from an installed operating system executing on the target server itself.
- **Off-Target update.** The installation or update is initiated from a computing device interacting directly with the server's Lenovo XClarity Controller.
- **UpdateXpress System Packs (UXSPs).** UXSPs are bundled updates designed and tested to provide the interdependent level of functionality, performance, and compatibility. UXSPs are server machine-type specific and are built (with firmware and device driver updates) to support specific Windows Server, Red Hat Enterprise Linux (RHEL) and SUSE Linux Enterprise Server (SLES) operating system distributions. Machine-type-specific firmware-only UXSPs are also available.

### Firmware updating tools

See the following table to determine the best Lenovo tool to use for installing and setting up the firmware:

Tool	Update Methods Supported	Core System Firmware Updates	I/O Devices Firmware Updates	Graphical user interface	Command line interface	Supports UXSPs
<b>Lenovo XClarity Provisioning Manager (LXPM)</b>	In-band <sup>2</sup> On-Target	√		√		
<b>Lenovo XClarity Controller (XCC)</b>	Out-of-band Off-Target	√	Selected I/O devices	√		
<b>Lenovo XClarity Essentials OneCLI (OneCLI)</b>	In-band Out-of-band On-Target Off-Target	√	All I/O devices		√	√
<b>Lenovo XClarity Essentials UpdateXpress (LXCE)</b>	In-band Out-of-band On-Target Off-Target	√	All I/O devices	√		√

Tool	Update Methods Supported	Core System Firmware Updates	I/O Devices Firmware Updates	Graphical user interface	Command line interface	Supports UXSPs
<b>Lenovo XClarity Essentials Bootable Media Creator (BoMC)</b>	In-band Out-of-band Off-Target	√	All I/O devices	√ (BoMC application)	√ (BoMC application)	√
<b>Lenovo XClarity Administrator (LXCA)</b>	In-band <sup>1</sup> Out-of-band <sup>2</sup> Off-Target	√	All I/O devices	√		√
<b>Lenovo XClarity Integrator (LXCI) for VMware vCenter</b>	Out-of-band Off-Target	√	Selected I/O devices	√		
<b>Lenovo XClarity Integrator (LXCI) for Microsoft Windows Admin Center</b>	In-band Out-of-band On-Target Off-Target	√	All I/O devices	√		√
<b>Lenovo XClarity Integrator (LXCI) for Microsoft System Center Configuration Manager</b>	In-band On-Target	√	All I/O devices	√		√
<b>Notes:</b>						
1. For I/O firmware updates.						
2. For BMC and UEFI firmware updates.						

- **Lenovo XClarity Provisioning Manager**

From Lenovo XClarity Provisioning Manager, you can update the Lenovo XClarity Controller firmware, the UEFI firmware, and the Lenovo XClarity Provisioning Manager software.

**Note:** By default, the Lenovo XClarity Provisioning Manager Graphical User Interface is displayed when you start the server and press the key specified in the on-screen instructions. If you have changed that default to be the text-based system setup, you can bring up the Graphical User Interface from the text-based system setup interface.

For additional information about using Lenovo XClarity Provisioning Manager to update firmware, see:

“Firmware Update” section in the LXPM documentation compatible with your server at [https://sysmgt.lenovofiles.com/help/topic/lxpm\\_frontend/lxpm\\_product\\_page.html](https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html)

**Important:** Lenovo XClarity Provisioning Manager (LXPM) supported version varies by product. All versions of Lenovo XClarity Provisioning Manager are referred to as Lenovo XClarity Provisioning Manager and LXPM in this document, unless specified otherwise. To see the LXPM version supported by your server, go to [https://sysmgt.lenovofiles.com/help/topic/lxpm\\_frontend/lxpm\\_product\\_page.html](https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html).

- **Lenovo XClarity Controller**

If you need to install a specific update, you can use the Lenovo XClarity Controller interface for a specific server.

**Notes:**

- To perform an in-band update through Windows or Linux, the operating system driver must be installed and the Ethernet-over-USB (sometimes called LAN over USB) interface must be enabled.

For additional information about configuring Ethernet over USB, see:

“Configuring Ethernet over USB” section in the XCC documentation version compatible with your server at [https://sysmgt.lenovofiles.com/help/topic/lxccc\\_frontend/lxccc\\_overview.html](https://sysmgt.lenovofiles.com/help/topic/lxccc_frontend/lxccc_overview.html)

- If you update firmware through the Lenovo XClarity Controller, make sure that you have downloaded and installed the latest device drivers for the operating system that is running on the server.

For additional information about using Lenovo XClarity Controller to update firmware, see:

“Updating Server Firmware” section in the XCC documentation compatible with your server at [https://sysmgt.lenovofiles.com/help/topic/lxccc\\_frontend/lxccc\\_overview.html](https://sysmgt.lenovofiles.com/help/topic/lxccc_frontend/lxccc_overview.html)

**Important:** Lenovo XClarity Controller (XCC) supported version varies by product. All versions of Lenovo XClarity Controller are referred to as Lenovo XClarity Controller and XCC in this document, unless specified otherwise. To see the XCC version supported by your server, go to [https://sysmgt.lenovofiles.com/help/topic/lxccc\\_frontend/lxccc\\_overview.html](https://sysmgt.lenovofiles.com/help/topic/lxccc_frontend/lxccc_overview.html).

- **Lenovo XClarity Essentials OneCLI**

Lenovo XClarity Essentials OneCLI is a collection of command line applications that can be used to manage Lenovo servers. Its update application can be used to update firmware and device drivers for your servers. The update can be performed within the host operating system of the server (in-band) or remotely through the BMC of the server (out-of-band).

For additional information about using Lenovo XClarity Essentials OneCLI to update firmware, see:

[http://sysmgt.lenovofiles.com/help/topic/toolctr\\_cli\\_lenovo/onecli\\_c\\_update.html](http://sysmgt.lenovofiles.com/help/topic/toolctr_cli_lenovo/onecli_c_update.html)

- **Lenovo XClarity Essentials UpdateXpress**

Lenovo XClarity Essentials UpdateXpress provides most of OneCLI update functions through a graphical user interface (GUI). It can be used to acquire and deploy UpdateXpress System Pack (UXSP) update packages and individual updates. UpdateXpress System Packs contain firmware and device driver updates for Microsoft Windows and for Linux.

You can obtain Lenovo XClarity Essentials UpdateXpress from the following location:

<https://datacentersupport.lenovo.com/solutions/lno-xpress>

- **Lenovo XClarity Essentials Bootable Media Creator**

You can use Lenovo XClarity Essentials Bootable Media Creator to create bootable media that is suitable for firmware updates, VPD updates, inventory and FFDC collection, advanced system configuration, FoD Keys management, secure erase, RAID configuration, and diagnostics on supported servers.

You can obtain Lenovo XClarity Essentials BoMC from the following location:

<https://datacentersupport.lenovo.com/solutions/lno-bomc>

- **Lenovo XClarity Administrator**

If you are managing multiple servers using the Lenovo XClarity Administrator, you can update firmware for all managed servers through that interface. Firmware management is simplified by assigning firmware-compliance policies to managed endpoints. When you create and assign a compliance policy to managed endpoints, Lenovo XClarity Administrator monitors changes to the inventory for those endpoints and flags any endpoints that are out of compliance.

For additional information about using Lenovo XClarity Administrator to update firmware, see:

[http://sysmgt.lenovofiles.com/help/topic/com.lenovo.lxca.doc/update\\_fw.html](http://sysmgt.lenovofiles.com/help/topic/com.lenovo.lxca.doc/update_fw.html)

- **Lenovo XClarity Integrator offerings**

Lenovo XClarity Integrator offerings can integrate management features of Lenovo XClarity Administrator and your server with software used in a certain deployment infrastructure, such as VMware vCenter, Microsoft Admin Center, or Microsoft System Center.

For additional information about using Lenovo XClarity Integrator to update firmware, see:

[https://sysmgt.lenovofiles.com/help/topic/lxci/lxci\\_product\\_page.html](https://sysmgt.lenovofiles.com/help/topic/lxci/lxci_product_page.html)

---

## Tech Tips

Lenovo continually updates the support website with the latest tips and techniques that you can use to solve issues that your server might encounter. These Tech Tips (also called retain tips or service bulletins) provide procedures to work around issues or solve problems related to the operation of your server.

To find the Tech Tips available for your server:

1. Go to <http://datacentersupport.lenovo.com> and navigate to the support page for your server.
2. Click on **How To's** from the navigation pane.
3. Click **Article Type** → **Solution** from the drop-down menu.

Follow the on-screen instructions to choose the category for the problem that you are having.

---

## Security advisories

Lenovo is committed to developing products and services that adhere to the highest security standards in order to protect our customers and their data. When potential vulnerabilities are reported, it is the responsibility of the Lenovo Product Security Incident Response Team (PSIRT) to investigate and provide information to our customers so they may put mitigation plans in place as we work toward providing solutions.

The list of current advisories is available at the following location:

[https://datacentersupport.lenovo.com/product\\_security/home](https://datacentersupport.lenovo.com/product_security/home)

---

## Power on the server

After the server performs a short self-test (power status LED flashes quickly) when connected to input power, it enters a standby state (power status LED flashes once per second).

The server can be turned on (power LED on) in any of the following ways:

- You can press the power button.
- The server can restart automatically after a power interruption.
- The server can respond to remote power-on requests sent to the Lenovo XClarity Controller.

For information about powering off the server, see “[Power off the server](#)” on page 13.

---

## Power off the server

The server remains in a standby state when it is connected to a power source, allowing the Lenovo XClarity Controller to respond to remote power-on requests. To remove all power from the server (power-on LED off), you must disconnect all power cables.

To place the server in a standby state (power-on LED flashes once per second):

**Note:** The Lenovo XClarity Controller can place the server in a standby state as an automatic response to a critical system failure.

- Start an orderly shutdown using the operating system (if supported by your operating system).
- Press the power-on button to start an orderly shutdown (if supported by your operating system).
- Press and hold the power button for more than 4 seconds to force a shutdown.

**Attention:** When the server in standby, Fan 4 would spin at 10% duty.

When in a standby state, the server can respond to remote power-on requests sent to the Lenovo XClarity Controller. For information about powering on the server, see [“Power on the server” on page 13](#).



---

## Chapter 2. Server components

This section provides information that helps locate the server components.

### Identifying your server

When you contact Lenovo for help, the machine type and serial number information help support technicians to identify your server and provide faster service.

The machine type and serial number are on the ID label on the front of the server.

The following illustration shows the location of the ID label.

**Note:** The illustrations in this document might differ slightly from your server.

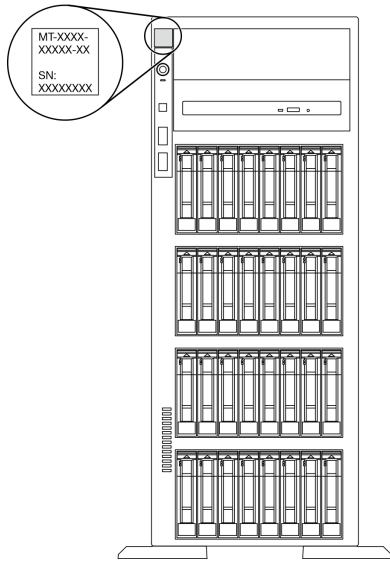


Figure 1. Location of the ID label

### XClarity Controller network access label

The XClarity Controller network access label is attached on the front bezel. After you get the server, peel the XClarity Controller network access label away and store it in a safe place for future use.


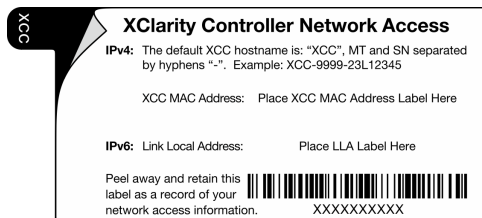


Figure 2. XClarity Controller network access label

## Quick response code

The system service label on the inside of the server cover provides a QR code for mobile access to service information. You can scan the QR code with a mobile device for quick access to additional information including parts installation, replacement, and error codes.

The following illustration shows the QR code.

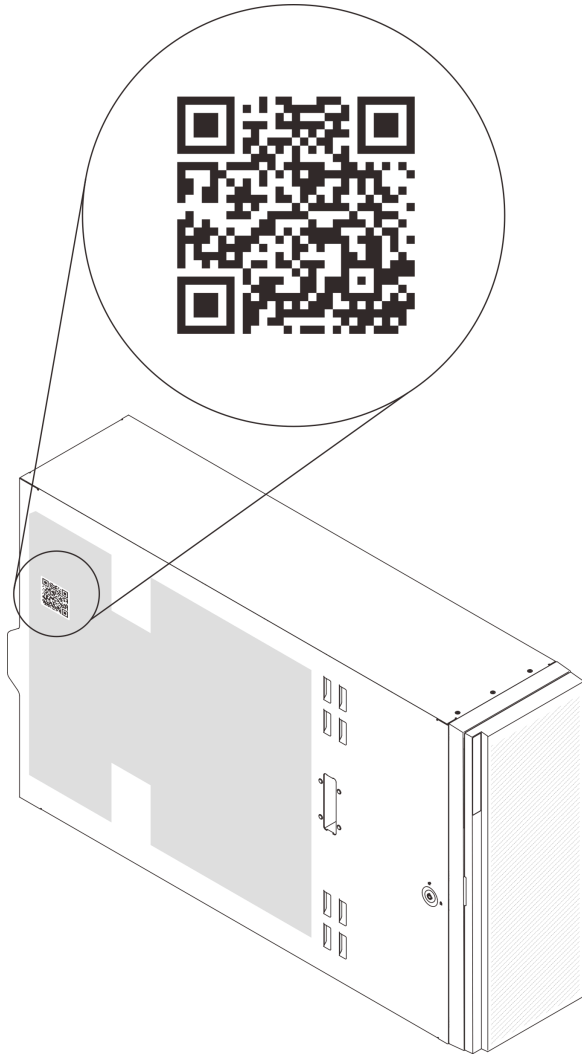

*Figure 3. Location of QR code*

---

## Front view

The front view of the server varies by model.

The illustrations in this topic show the server front views based on the supported drive bays.

**Note:** Your server might look different from the illustrations in this topic.

## Server models with twelve 3.5-inch simple-swap drive bays

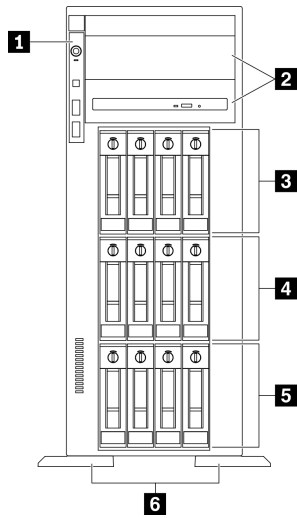


Figure 4. Front view of server models with twelve 3.5-inch simple-swap drive bays

Table 3. Components on server models with twelve 3.5-inch simple-swap drive bays

<b>1</b> Front panel	<b>4</b> 3.5-inch simple-swap drive bays 4-7
<b>2</b> Optical-drive bays 1-2	<b>5</b> 3.5-inch simple-swap drive bays 0-3
<b>3</b> 3.5-inch simple-swap drive bays 8-11	<b>6</b> Foot stands

### **1** Front panel

For information about the controls, connectors, and status LEDs on the front panel, see [“Front panel” on page 21](#).

### **2** Optical-drive bays 1-2

Depending on the model, your server might come with an optical drive installed in the lower 5.25-inch optical-drive bay. The upper 5.25-inch optical-drive bay is for a secondary optical drive or a tape drive. Some models have a secondary optical drive or a tape drive installed.

### **3 4 5** 3.5-inch simple-swap drive bays

The drive bays are used to install 3.5-inch simple-swap drives. When you install drives, follow the order of the drive bay numbers. The EMI integrity and cooling of the server are protected by having all drive bays occupied. The vacant drive bays must be occupied by drive bay fillers or drive fillers.

### **6** Foot stands

For tower form factor models, the foot stands help the server stand steadily.

## Server models with twelve 3.5-inch hot-swap drive bays

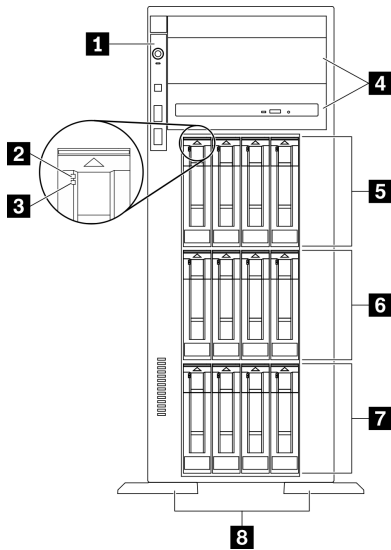


Figure 5. Front view of server models with twelve 3.5-inch hot-swap drive bays

Table 4. Components on server models with twelve 3.5-inch hot-swap drive bays

<b>1</b> Front panel	<b>5</b> 3.5-inch hot-swap drive bays 8-11
<b>2</b> Drive activity LED (green)	<b>6</b> 3.5-inch hot-swap drive bays 4-7
<b>3</b> Drive status LED (yellow)	<b>7</b> 3.5-inch hot-swap drive bays 0-3
<b>4</b> Optical-drive bays 1-2	<b>8</b> Foot stands

### **1** Front panel

For information about the controls, connectors, and status LEDs on the front panel, see [“Front panel” on page 21](#).

### **2** Drive activity LED (green)

Each hot-swap drive comes with an activity LED. When this LED is flashing, it indicates that the drive is in use.

### **3** Drive status LED (yellow)

These LEDs are on SAS or SATA hard disk drives and solid-state drives, and indicate the following status:

**Lit:** The drive has failed.

**Flashing slowly (once per second):** The drive is being rebuilt.

**Flashing rapidly (three times per second):** The drive is being identified.

### **4** Optical-drive bays 1-2

Depending on the model, your server might come with an optical drive installed in the lower 5.25-inch optical-drive bay. The upper 5.25-inch optical-drive bay is for a secondary optical drive or a tape drive. Some models have a secondary optical drive or a tape drive installed.

### **5 6 7** 3.5-inch hot-swap drive bays

The drive bays are used to install 3.5-inch hot-swap drives. When you install drives, follow the order of the drive bay numbers. The EMI integrity and cooling of the server are protected by having all drive bays occupied. The vacant drive bays must be occupied by drive bay fillers or drive fillers.

**Note:** For 3.5-inch drive bay models that support NVMe drives, you can install up to eight NVMe drives in bays 0-3 and 4-7.

## 8 Foot stands

For tower form factor models, the foot stands help the server stand steadily.

### Server models with sixteen 3.5-inch hot-swap drive bays

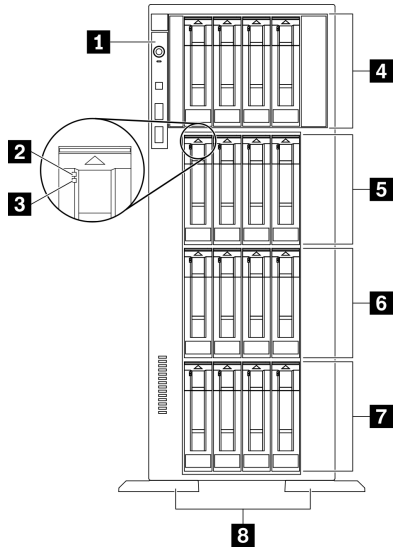


Figure 6. Front view of server models with sixteen 3.5-inch hot-swap drive bays

Table 5. Components on server models with sixteen 3.5-inch hot-swap drive bays

1 Front panel	5 3.5-inch hot-swap drive bays 8-11
2 Drive activity LED (green)	6 3.5-inch hot-swap drive bays 4-7
3 Drive status LED (yellow)	7 3.5-inch hot-swap drive bays 0-3
4 3.5-inch hot-swap drive bays 12-15	8 Foot stands

## 1 Front panel

For information about the controls, connectors, and status LEDs on the front panel, see [“Front panel” on page 21](#).

## 2 Drive activity LED (green)

Each hot-swap drive comes with an activity LED. When this LED is flashing, it indicates that the drive is in use.

## 3 Drive status LED (yellow)

These LEDs are on SAS or SATA hard disk drives and solid-state drives, and indicate the following status:

**Lit:** The drive has failed.

**Flashing slowly (once per second):** The drive is being rebuilt.

**Flashing rapidly (three times per second):** The drive is being identified.

#### **4 5 6 7 3.5-inch hot-swap drive bays**

The drive bays are used to install 3.5-inch hot-swap drives. When you install drives, follow the order of the drive bay numbers. The EMI integrity and cooling of the server are protected by having all drive bays occupied. The vacant drive bays must be occupied by drive bay fillers or drive fillers.

**Note:** For 3.5-inch drive bay models that support NVMe drives, you can install up to eight NVMe drives in bays 0-3 and 4-7.

#### **8 Foot stands**

For tower form factor models, the foot stands help the server stand steadily.

#### **Server models with thirty-two 2.5-inch drive bays**

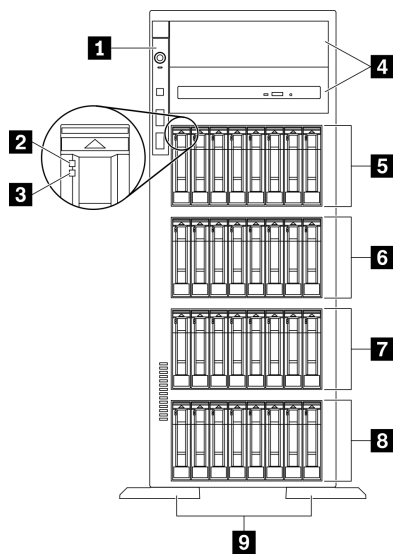


Figure 7. Front view of server models with thirty-two 2.5-inch drive bays

Table 6. Components on server models with thirty-two 2.5-inch drive bays

<b>1</b> Front panel	<b>6</b> 2.5-inch hot-swap drive bays 16-23
<b>2</b> Drive activity LED (green)	<b>7</b> 2.5-inch hot-swap drive bays 8-15
<b>3</b> Drive status LED (yellow)	<b>8</b> 2.5-inch hot-swap drive bays 0-7
<b>4</b> Optical-drive bays 1-2	<b>9</b> Foot stands
<b>5</b> 2.5-inch hot-swap drive bays 24-31	

#### **1 Front panel**

For information about the controls, connectors, and status LEDs on the front panel, see [“Front panel” on page 21](#).

#### **2 Drive activity LED (green)**

Each hot-swap drive comes with an activity LED. When this LED is flashing, it indicates that the drive is in use.

### **3 Drive status LED (yellow)**

These LEDs are on SAS or SATA hard disk drives and solid-state drives, and indicate the following status:

**Lit:** The drive has failed.

**Flashing slowly (once per second):** The drive is being rebuilt.

**Flashing rapidly (three times per second):** The drive is being identified.

### **4 Optical-drive bays 1-2**

Depending on the model, your server might come with an optical drive installed in the lower 5.25-inch optical-drive bay. The upper 5.25-inch optical-drive bay is for a secondary optical drive or a tape drive. Some models have a secondary optical drive or a tape drive installed.

### **5 6 7 8 2.5-inch hot-swap drive bays**

The drive bays are used to install 2.5-inch hot-swap drives. When you install drives, follow the order of the drive bay numbers. The EMI integrity and cooling of the server are protected by having all drive bays occupied. The vacant drive bays must be occupied by drive bay fillers or drive fillers.

**Note:** For 2.5-inch drive bay models that support NVMe drives, you can install up to sixteen NVMe drives in bays 0-7 and 8-15.

### **9 Foot stands**

For tower form factor models, the foot stands help the server stand steadily.

## **Front panel**

The front panel of the server provides controls, connectors, and LEDs.

The following illustration shows the control, connectors, and LEDs on the front panel of the server.

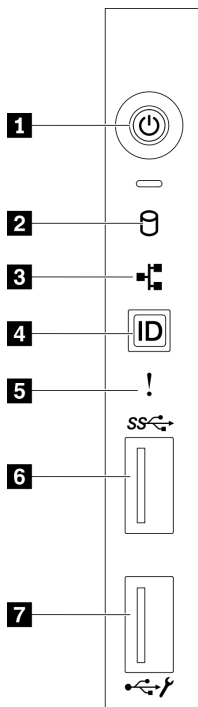


Figure 8. Front panel

Table 7. Components on the front panel

<b>1</b> Power button with power status LED (green)	<b>5</b> System error LED (yellow)
<b>2</b> Simple-swap drive activity LED (green)	<b>6</b> USB 3.2 Gen 1 connector
<b>3</b> Network activity LED (green)	<b>7</b> USB 2.0 connector with Lenovo XClarity Controller management
<b>4</b> System ID button with system ID LED (blue)	

### **1 Power button with power status LED (green)**

Press this button to turn the server on and off manually. The states of the power LED are as follows:

**Off:** No power supply is properly installed, or the LED itself has failed.

**Flashing rapidly (four times per second):** The server is turned off and is not ready to be turned on. The power-control button is disabled. This will last approximately 5 to 10 seconds.

**Flashing slowly (once per second):** The server is turned off and is ready to be turned on. You can press the power-control button to turn on the server.

**Lit:** The server is turned on.

### **2 Simple-swap drive activity LED (green)**

The simple-swap drive activity LED is only for server models with simple-swap storage drives.

Status	Color	Description
Solid on	Green	The simple-swap drive is active.
Off	None	The simple-swap drive is not active.



### 3 Network activity LED (green)

The network activity LED on the front panel helps you identify the network connectivity and activity.

Status	Color	Description
On	Green	The server is connected to a network.
Blinking	Green	The network is connected and active.
Off	None	The server is disconnected from the network.

### 4 System ID button with system ID LED (blue)

Use this system ID button and the blue system ID LED to visually locate the server. A system ID LED is also located on the rear of the server. Each time you press the system ID button, the state of both the system ID LEDs changes. The LEDs can be changed to on, blinking, or off. You can also use the Lenovo XClarity Controller or a remote management program to change the state of the system ID LEDs to assist in visually locating the server among other servers.

If the XClarity Controller USB connector is set to have both the USB 2.0 function and XClarity Controller management function, you can press the system ID button for three seconds to switch between the two functions.

### 5 System error LED (yellow)

The system error LED provides basic diagnostic functions for your server.

Status	Color	Description	Action
On	Yellow	An error has been detected on the server. Causes might include one or more of the following errors: <ul style="list-style-type: none"><li>• The temperature of the server reached the non-critical temperature threshold.</li><li>• The voltage of the server reached the non-critical voltage threshold.</li><li>• A fan has been detected to be running at low speed.</li><li>• A fan has been removed.</li><li>• The power supply has a critical error.</li><li>• The power supply is not connected to the power.</li></ul>	Check the event log to determine the exact cause of the error.
Off	None	The server is off or the server is on and is working correctly.	None.

### 6 USB 3.2 Gen 1 connector

Used to attach a device that requires a USB 2.0 or 3.2 Gen 1 connection, such as a keyboard, a mouse, or a USB flash drive.

### 7 USB 2.0 connector with Lenovo XClarity Controller management

Depending on the setting, this connector supports USB 2.0 function, XClarity Controller management function, or both.

- If the connector is set for USB 2.0 function, you can attach a device that requires a USB 2.0 connection, such as a keyboard, a mouse, or a USB storage device.
- If the connector is set for XClarity Controller management function, you can attach a mobile device installed with the application to run XClarity Controller event logs.
- If the connector is set to have both functions, you can press the system ID button for three seconds to switch between the two functions.

## Rear view

The rear of the server provides access to several connectors and components.

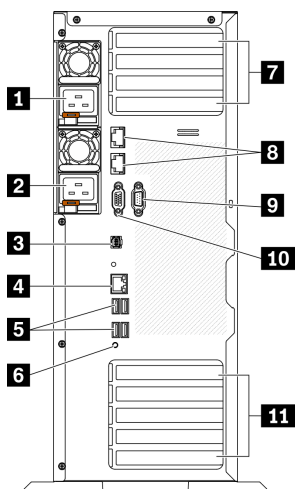


Figure 9. Rear view

Table 8. Rear view

<b>1</b> Hot-swap power supply 1	<b>7</b> PCIe slots 1-4 (top to bottom)
<b>2</b> Hot-swap power supply 2 (optional)	<b>8</b> 10Gb ethernet connectors (2)
<b>3</b> External LCD diagnostics handset connector	<b>9</b> Serial-port-module slot
<b>4</b> XClarity Controller network connector	<b>10</b> VGA connector
<b>5</b> Four USB 3.2 Gen 1 connectors (4)	<b>11</b> PCIe slots 5-9 (top to bottom)
<b>6</b> NMI button	

### **1 2** Hot-swap power supplies

Install power supply units to these bays, connect them to power cords. Make sure the power cords are connected properly.

You can purchase a power supply option from Lenovo and install the power supply to provide power redundancy without turning off the server.

On each power supply, there are three status LEDs near the power cord connector. For information about the status LEDs, see [“Rear view LEDs” on page 26](#).

### **3** External LCD diagnostics handset connector

Connect the external LCD diagnostics handset here. See [“External LCD diagnostics handset” on page 27](#) for more details.

#### **4 XClarity Controller network connector**

Used to attach an Ethernet cable to manage the system using XClarity Controller.

#### **5 USB 3.2 Gen 1 connectors**

Used to attach a device that requires a USB 2.0 or 3.2 Gen 1 connection, such as a keyboard, a mouse, or a USB flash drive.

#### **6 NMI button**

Press this button to force a nonmaskable interrupt to the processor. You might have to use a pen or the end of a straightened paper clip to press the button. You can also use it to force a blue-screen memory dump. Use this button only when you are directed to do so by Lenovo Support.

#### **7 PCIe slots 1-4 (top to bottom)**

Install PCIe adapters into these slots.

- Slot 1: PCIe4 x16, 75W, Full-height, half-length
- Slot 2: PCIe4 x8 (open end), 75W, Full-height, half-length
- Slot 3: PCIe4 x16, 75W, Full-height, half-length
- Slot 4: PCIe4 x8 (open end), 75W, Full-height, half-length

#### **8 10Gb Ethernet connector**

Used to attach a 10Gb Ethernet cable. Each 10Gb Ethernet connector has two status LEDs to help you identify the Ethernet connectivity and activity. For more information, see [“Rear view LEDs” on page 26](#).

**Note:** Use CAT6A UTP cables rated at 625 MHz bandwidth for the 10Gb on-board LAN.

#### **9 Serial-port-module slot**

Connect a 9-pin serial device to this connector. The serial port is shared with the XCC. The XCC can take control of the shared serial port to redirect serial traffic, using Serial over LAN (SOL).

#### **10 VGA connector**

Used to attach a VGA-compatible video device, such as a VGA monitor.

#### **11 PCIe slots 5-9 (top to bottom)**

Install PCIe adapters into these slots.

- Slot 5: PCIe4 x16, 75W, Full-height, half-length
- Slot 6: PCIe4 x8 (open end), 75W, Full-height, half-length
- Slot 7: PCIe4 x16, 75W, Full-height, half-length
- Slot 8: PCIe3 x8 (open end), 75W, Full-height, half-length (requires additional cable connection, see [“PCIe slot 8 cable routing” on page 54](#))
- Slot 9: PCIe4 x8 (open end), 75W, Full-height, half-length

## Rear view LEDs

The illustration in this section shows the LEDs on the rear the server.

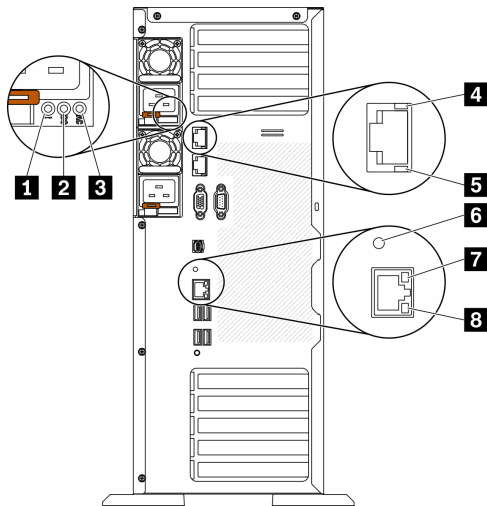


Figure 10. Rear view LEDs of the server

Table 9. LEDs on the rear of the server

<b>1</b> Power supply error LED (yellow)	<b>5</b> 10Gb ethernet activity LED (green)
<b>2</b> DC power LED (green)	<b>6</b> System ID LED (blue)
<b>3</b> AC power LED (green)	<b>7</b> Ethernet link LED (green)
<b>4</b> 10Gb ethernet link LED (green)	<b>8</b> Ethernet activity LED (green)

### **1** Power supply error LED (yellow)

When the power-supply error LED is lit, it indicates that the power supply has failed.

### **2** DC power LED (green)

Each hot-swap power supply comes with a dc power LED and an ac power LED. When the dc power LED is lit, it indicates that the power supply is supplying adequate dc power to the system. During normal operation, both the ac and dc power LEDs are lit.

### **3** AC power LED (green)

Each hot-swap power supply comes with an ac power LED and a dc power LED. When the ac power LED is lit, it indicates that sufficient power is being supplied to the power supply through the power cord. During normal operation, both the ac and dc power LEDs are lit.

### **4** 10Gb ethernet link LED (green) **5** 10Gb ethernet activity LED (green)

Each 10Gb ethernet connector has two status LEDs.

Ethernet status LED	Color	Status	Description
4 Ethernet link LED	Green	On	Network link is established.
	None	Off	Network link is disconnected.
5 Ethernet activity LED	Green	Blinking	Network link is connected and active.
	None	Off	The server is disconnected from a LAN.

### 6 System ID LED (blue)

Use this blue system ID LED to visually locate the server. A system ID LED is also located on the front of the server. Each time you press the system ID button on the front panel, the state of both the system ID LEDs changes. The LEDs can be changed to on, blinking, or off. You can also use the Lenovo XClarity Controller or a remote management program to change the state of the system ID LEDs to assist in visually locating the server among other servers.

If the XClarity Controller USB connector is set to have both the USB 2.0 function and XClarity Controller management function, you can press the system ID button for three seconds to switch between the two functions.

### 7 Ethernet link LED (green) 8 Ethernet activity LED (green)


Each network connector has two status LEDs.

Ethernet status LED	Color	Status	Description
7 Ethernet link LED	Green	On	Network link is established.
	None	Off	Network link is disconnected.
8 Ethernet activity LED	Green	Blinking	Network link is connected and active.
	None	Off	The server is disconnected from a LAN.


## External LCD diagnostics handset

The external LCD diagnostics handset is an external device that is connected to the server with a cable, and it allows quick access to system information such as errors, system status, firmware, network, and health information.

## Location of the external LCD diagnostics handset

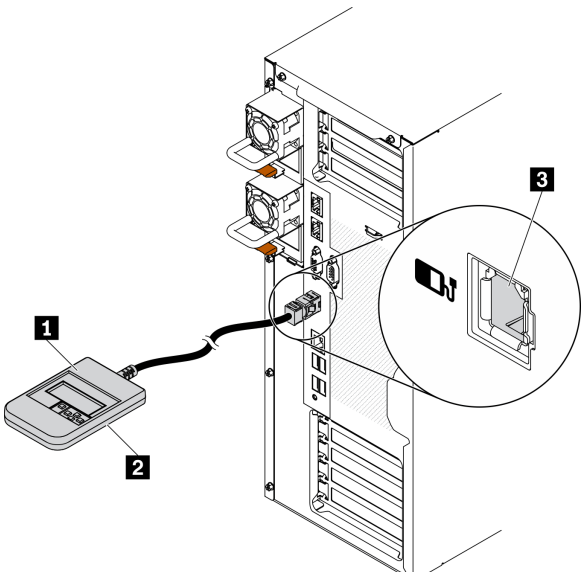Location	Callouts
<p>The external LCD diagnostics handset is connected to the server with an external cable.</p> 	<p><b>1</b> External LCD diagnostics handset</p> <p><b>2</b> Magnetic bottom With this component, the diagnostic handset can be attached to the top or side of the rack or chassis with hands spared for service tasks.</p> <p><b>3</b> External diagnostics connector This connector is located on the rear of the server, and is used to connect an external LCD diagnostics handset.</p>


**Note:** When unplugging the external handset, see the following instructions:

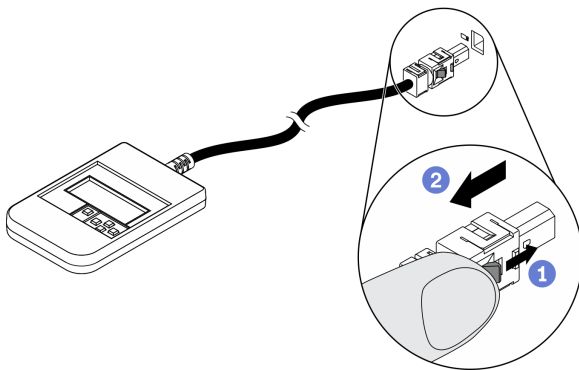

- 1** Press the plastic clip on the plug forward.
- 2** Hold the clip and remove the cable from the connector.

### Display panel overview


The diagnostics device consists of an LCD display and 5 navigation buttons.

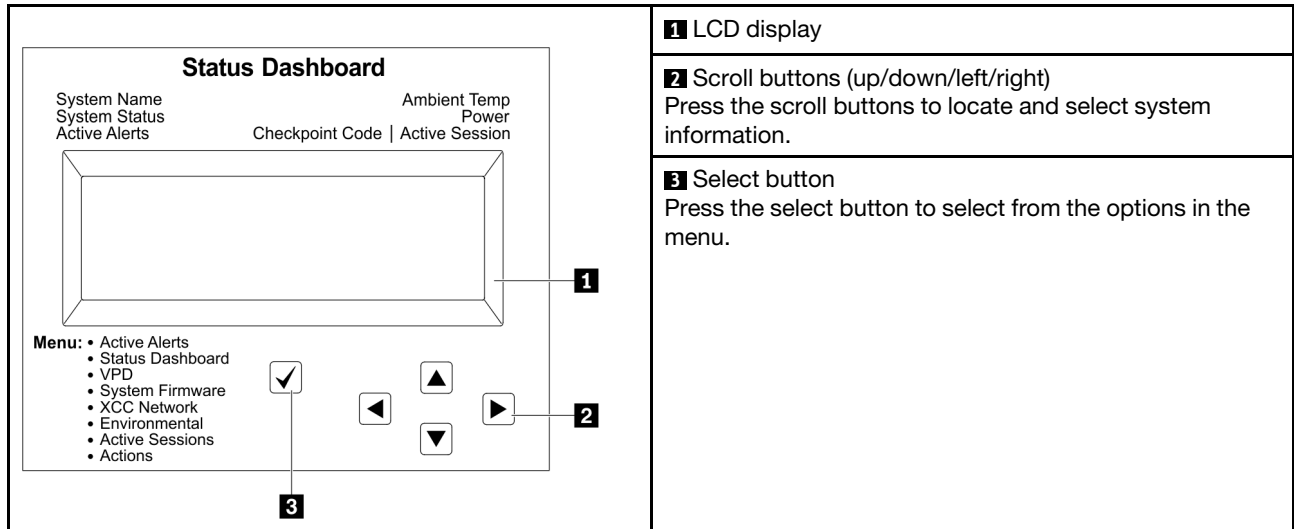

**Option flow diagram**

The external LCD diagnostics handset displays various system information. Navigate through the options with the scroll keys.

Depending on the model, the options and entries on the LCD display might be different.

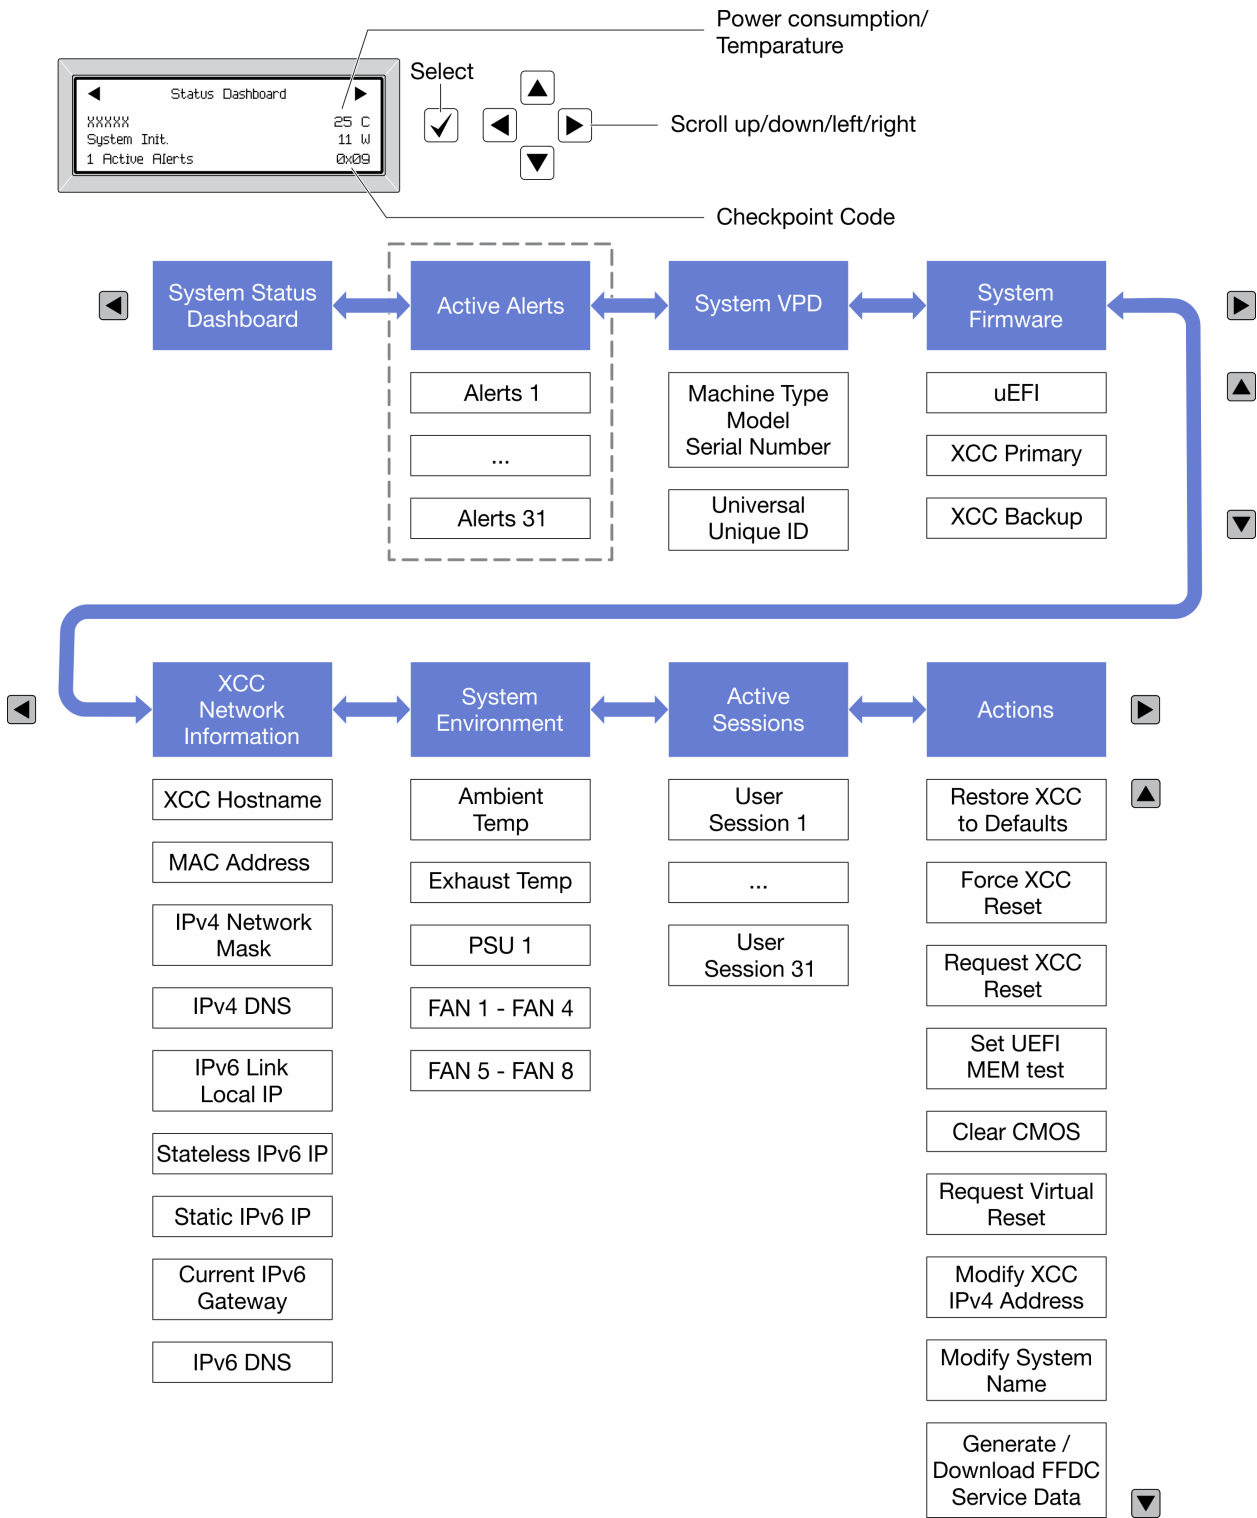

### Full menu list

Following is the list of available options. Switch between an option and the subordinate information entries with the select button, and switch among options or information entries with the scroll buttons.

Depending on the model, the options and entries on the LCD display might be different.



## Home Menu (System Status Dashboard)

Home Menu	Example
<ul style="list-style-type: none"> <li>1 System name</li> <li>2 System status</li> <li>3 Active alert quantity</li> <li>4 Temperature</li> <li>5 Power consumption</li> <li>6 Checkpoint code</li> </ul>	<p>The screenshot shows a 'Status Dashboard' with the following elements: <ul style="list-style-type: none"> <li>1: System name (xxxxxx)</li> <li>2: System status (System Init.)</li> <li>3: Active alert quantity (1 Active Alerts)</li> <li>4: Temperature (25 C)</li> <li>5: Power consumption (11 W)</li> <li>6: Checkpoint code (0x09)</li> </ul> </p>

## Active Alerts

Sub Menu	Example
Home screen: Active error quantity <b>Note:</b> The “Active Alerts” menu displays only the quantity of active errors. If no errors occur, the “Active Alerts” menu will not be available during navigation.	1 Active Alerts
Details screen: <ul style="list-style-type: none"> <li>• Error message ID (Type: Error/Warning/Information)</li> <li>• Occurrence time</li> <li>• Possible sources of the error</li> </ul>	Active Alerts: 1 Press ▼ to view alert details FQXSPPU009N(Error) 04/07/2020 02:37:39 PM CPU 1 Status: Configuration Error

## System VPD Information

Sub Menu	Example
<ul style="list-style-type: none"> <li>• Machine type and serial number</li> <li>• Universal Unique ID (UUID)</li> </ul>	Machine Type: xxxx Serial Num: xxxxxx Universal Unique ID: xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx

## System Firmware

Sub Menu	Example
UEFI <ul style="list-style-type: none"> <li>Firmware level (status)</li> <li>Build ID</li> <li>Version number</li> <li>Release date</li> </ul>	UEFI (Inactive) Build: D0E101P Version: 1.00 Date: 2019-12-26
XCC Primary <ul style="list-style-type: none"> <li>Firmware level (status)</li> <li>Build ID</li> <li>Version number</li> <li>Release date</li> </ul>	XCC Primary (Active) Build: DVI399T Version: 4.07 Date: 2020-04-07
XCC Backup <ul style="list-style-type: none"> <li>Firmware level (status)</li> <li>Build ID</li> <li>Version number</li> <li>Release date</li> </ul>	XCC Backup (Active) Build: D8BT05I Version: 1.00 Date: 2019-12-30

## XCC Network Information

Sub Menu	Example
<ul style="list-style-type: none"> <li>XCC hostname</li> <li>MAC address</li> <li>IPv4 Network Mask</li> <li>IPv4 DNS</li> <li>IPv6 Link Local IP</li> <li>Stateless IPv6 IP</li> <li>Static IPv6 IP</li> <li>Current IPv6 Gateway</li> <li>IPv6 DNS</li> </ul> <p><b>Note:</b> Only the MAC address that is currently in use is displayed (extension or shared).</p>	XCC Network Information XCC Hostname: XCC-xxxx-SN MAC Address: xx:xx:xx:xx:xx:xx IPv4 IP: xx.xx.xx.xx IPv4 Network Mask: x.x.x.x IPv4 Default Gateway: x.x.x.x

## System Environmental Information

Sub Menu	Example
<ul style="list-style-type: none"> <li>• Ambient temperature</li> <li>• Exhaust temperature</li> <li>• PSU status</li> <li>• Spinning speed of fans by RPM</li> </ul>	Ambient Temp: 24 C Exhaust Temp: 30 C PSU1: Vin= 213 w Inlet= 26 C FAN1 Front: 21000 RPM FAN2 Front: 21000 RPM FAN3 Front: 21000 RPM FAN4 Front: 21000 RPM

## Active Sessions

Sub Menu	Example
Quantity of active sessions	Active User Sessions: 1

## Actions

Sub Menu	Example
Several quick actions are available: <ul style="list-style-type: none"> <li>• Restore XCC to Defaults</li> <li>• Force XCC Reset</li> <li>• Request XCC Reset</li> <li>• Set UEFI Memory Test</li> <li>• Clear CMOS</li> <li>• Request Virtual Reseat</li> <li>• Modify XCC Static IPv4 Address/Net mask/Gateway</li> <li>• Modify System Name</li> <li>• Generate/Download FFDC Service Data</li> </ul>	Request XCC Reset? This will request the BMC to reboot itself. Hold √ for 3 seconds

---

## System board components

The illustration in this section shows the component locations on the system board.

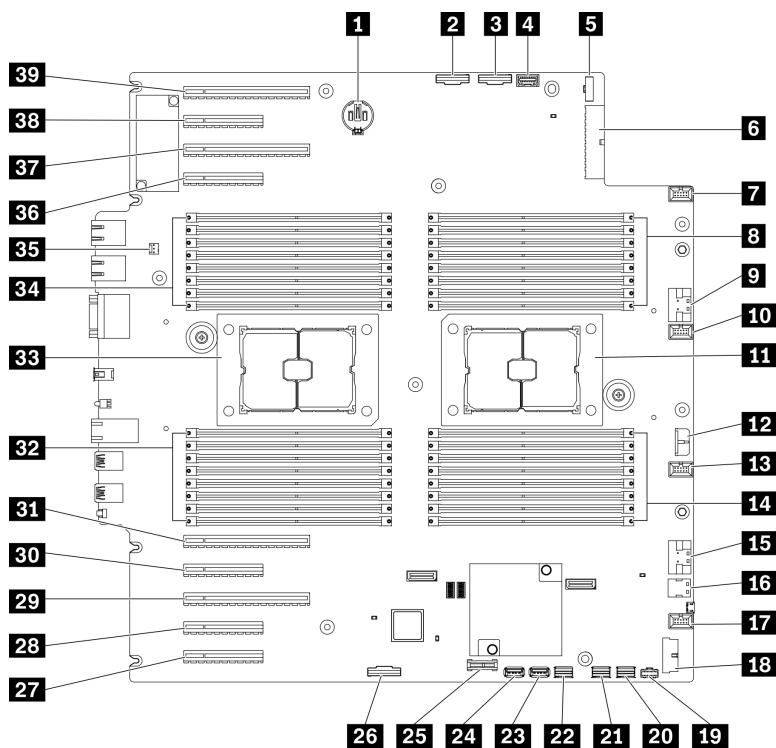


Figure 11. System board components

Table 10. Components on the system board

<b>1</b> CMOS battery connector	<b>21</b> SATA 0-3 connector
<b>2</b> PCIe 2 connector	<b>22</b> SATA 8-11 connector
<b>3</b> PCIe 1 connector	<b>23</b> Internal USB connector 3
<b>4</b> Operator-information-panel connector	<b>24</b> Internal USB connector 4
<b>5</b> Power distribution board signal connector	<b>25</b> TPM <sup>1</sup> /TCM <sup>2</sup> connector (for Chinese Mainland only)
<b>6</b> Power distribution board power connector	<b>26</b> PCIe slot 8 enable connector <sup>3</sup>
<b>7</b> Fan 4 connector	<b>27</b> PCIe slot 9 (processor 1)
<b>8</b> DIMM 17-24 slots (processor 2)	<b>28</b> PCIe slot 8 (processor 2) <sup>3</sup>
<b>9</b> PCIe 3 connector	<b>29</b> PCIe slot 7 (processor 2)
<b>10</b> Fan 3 connector	<b>30</b> PCIe slot 6 (processor 2)
<b>11</b> Processor 2 socket	<b>31</b> PCIe slot 5 (processor 2)
<b>12</b> CFF RAID power connector	<b>32</b> DIMM 9-16 slots (processor 1)
<b>13</b> Fan 2 connector	<b>33</b> Processor 1 socket
<b>14</b> DIMM 25-32 slots (processor 2)	<b>34</b> DIMM 1-8 slots (processor 1)
<b>15</b> PCIe 4 connector <sup>3</sup>	<b>35</b> Intrusion switch connector
<b>16</b> M.2 signal connector	<b>36</b> PCIe slot 4 (processor 2)
<b>17</b> Fan 1 connector	<b>37</b> PCIe slot 3 (processor 1)
<b>18</b> Front USB connector	<b>38</b> PCIe slot 2 (processor 1)

Table 10. Components on the system board (continued)

<b>19</b> M.2 power connector	<b>39</b> PCIe slot 1 (processor 1)
<b>20</b> SATA 4-7 connector	

**Notes:**

- <sup>1</sup> Trusted Platform Module
- <sup>2</sup> Trusted Cryptography Module
- <sup>3</sup> **28** PCIe slot 8 is disabled by default. Connect **26** PCIe slot 8 enable connector to **15** NVMe 4 connector to enable PCIe slot 8.

## System board LEDs

The illustration in this section shows the LEDs on the system board.

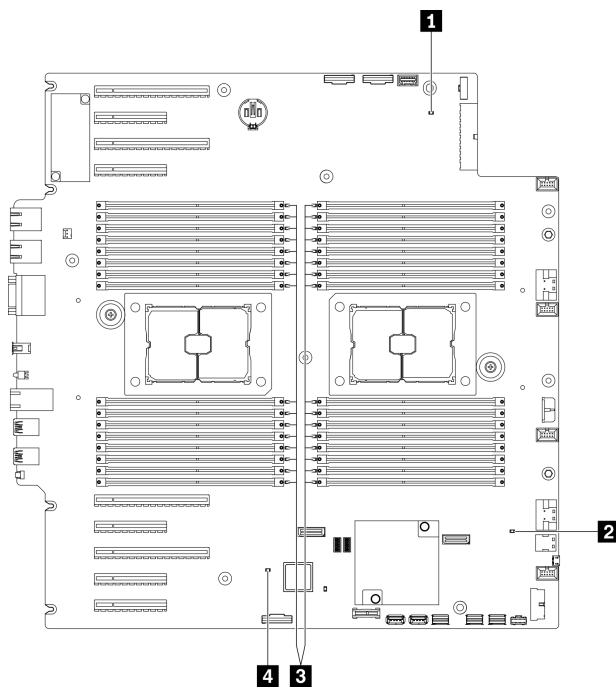


Figure 12. System board LEDs

Table 11. System-board LEDs

<b>1</b> System power LED	<b>3</b> DIMM error LEDs (available on some models)
<b>2</b> FPGA heartbeat LED (green)	<b>4</b> XCC heartbeat LED (green)

### **1** System power LED

The states of the power LED are as follows:

**Off:** No power supply is properly installed, or the LED itself has failed.

**Flashing rapidly (four times per second):** The server is turned off and is not ready to be turned on. The power-control button is disabled. This will last approximately 5 to 10 seconds.

**Flashing slowly (once per second):** The server is turned off and is ready to be turned on. You can press the power-control button to turn on the server.

**Lit:** The server is turned on.

### **2** FPGA heartbeat LED (green)

This LED indicates power-on and power-off sequencing.

- **LED blinking:** the system is functioning properly, and no action is necessary.
- **LED not blinking:** (trained technician only) replace the system board. See [“System board replacement \(trained technician only\)”](#) on page 200.

### **3** DIMM error LEDs (available on some models)

When a DIMM error LED is lit, it indicates that the corresponding memory module has failed.

### **4** XCC heartbeat LED (green)

This LED indicates XCC heartbeat and boot process:

- **LED blinking fast:** XCC code is in the loading process.
- **LED going off momentarily:** XCC code has loaded completely.
- **LED going off momentarily and then starts blinking slowing:** XCC is fully operational. You can now press the power-control button to power on the server.

## **System board switches**

Use this information to locate the system board switches.

### **Important:**

- Read [“Installation Guidelines”](#) on page 59 to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- Turn off the server before you move the switches; then, disconnect all power cords and external cables. Do not open your server or attempt any repair before reading and understanding the following information:
- Any system board switch that is not shown in the illustrations in this document are reserved.

**Note:** If there is a clear protective sticker on the top of the switch blocks, you must remove and discard it to access the switches.

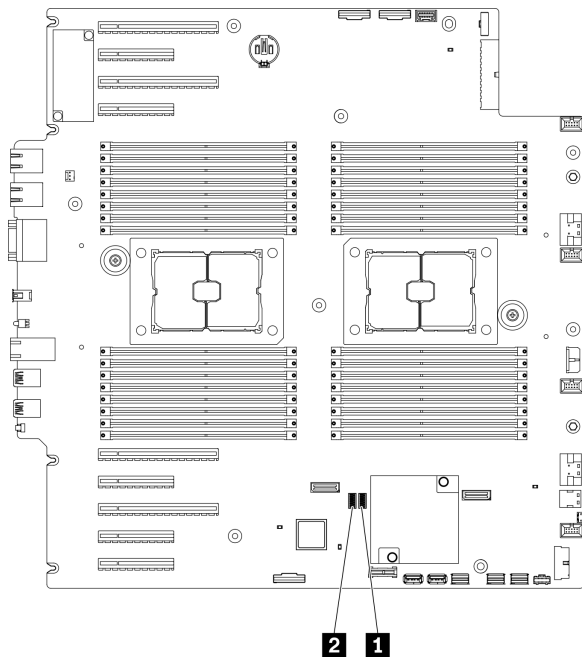


Figure 13. System board switches

Table 12. System board switches

<b>1</b> SW3 switch block	<b>2</b> SW2 switch block
---------------------------	---------------------------

Table 13. SW2 switch block definition

Switch number	Default position	Description	Definition
8	Off	Trusted Platform Module (TPM) physical presence	Changing this switch to the On position indicates a physical presence to the TPM.
7	Off	ME recovery	Changing this switch to the On position boots ME to recovery
6	On	Low security	Keeping this switch in the On position allows transitioning between signed official IMM builds and IMM test signed builds, and bypasses CRTM boot check of iMM firmware.
5	Off	Real time clock (RTC) reset	Changing this switch to the On position resets the RTC. A momentary toggle is all that is required. To avoid excessive CMOS battery drain, do not leave this switch in the On position.
4	Off	Password override	Changing this switch to the On position overrides the power-on password.
3	Off	Serial function selection	Off: function as system serial port. On: dump UEFI debug message to serial port.
2	Off	BMC Remote debug	Keeping this switch in the off position enables BMC remote debug.
1	Off	ME security override	Changing this switch to the On position disables ME Security checks.

Table 14. SW3 switch block definition

Switch number	Default position	Description	Definition
8	Off	Force BMC and CPU reset	Changing this switch to the On position forces BMC and CPU reset.
7	On	Power permission override	Changing this switch to the Off position ignores Power Permission and allows the system to power-on.
6	Off	Trusted Platform Module (TPM) physical presence	Changing this switch to the On position indicates a physical presence to the TPM.
5	Off	BMC boot primary	Off: XCC boots from upper half of flash region. On: XCC boots from lower half of flash region.
4	Off	Force XCC reset	Changing this switch to the On position forces XCC into reset.
3	Off	IMM force update	Changing this switch to the On position forces XCC to boot from kernel code only.
2	Off	XCC Trusted Platform Module (TPM) physical presence	Changing this switch to the On position indicates a physical presence to the XCC TPM.
1	Off	Force FPGA reset	Change this switch to the On position forces FPGA into reset.

---

## Server locks

Locking the server cover prevents unauthorized access to the inside of your server and access to the installed drives.

### Server cover and security door lock

The server cover and security door lock prevents unauthorized access to the inside of your server and the installed drives in the drive cage. You can remove the key attached on the rear of the server and use it to unlock or lock the server cover and the security door of the server.



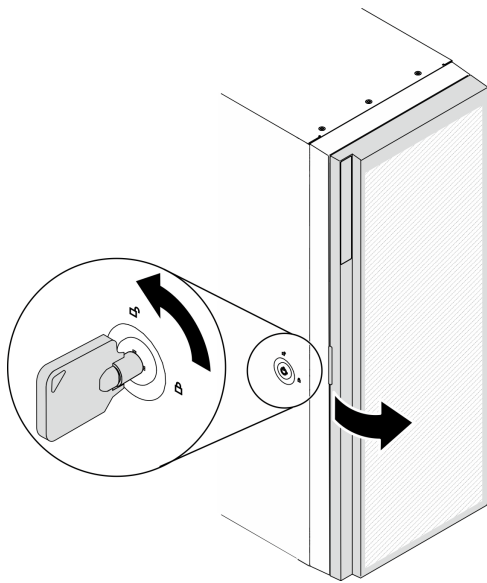


Figure 14. Server cover and security door lock

---


## Backplates and backplanes

Use the section to understand the internal connectors on the backplate or the backplane you use.

### 2.5-inch drive backplanes

Use this information to locate the connectors on the 2.5-inch drive backplanes.

#### 2.5-inch SAS/SATA 8-bay backplane

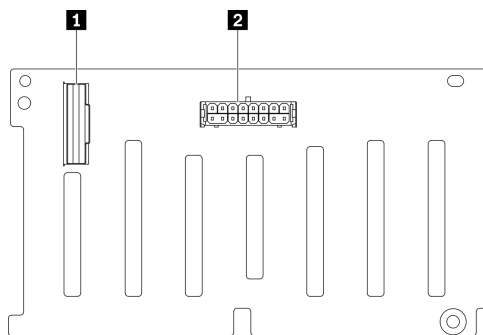

- 1** SAS/SATA connector
- 2** Power connector

Figure 15. 2.5-inch SAS/SATA 8-bay backplane connectors

## 2.5-inch SAS/SATA/NVMe and NVMe 8-bay backplane

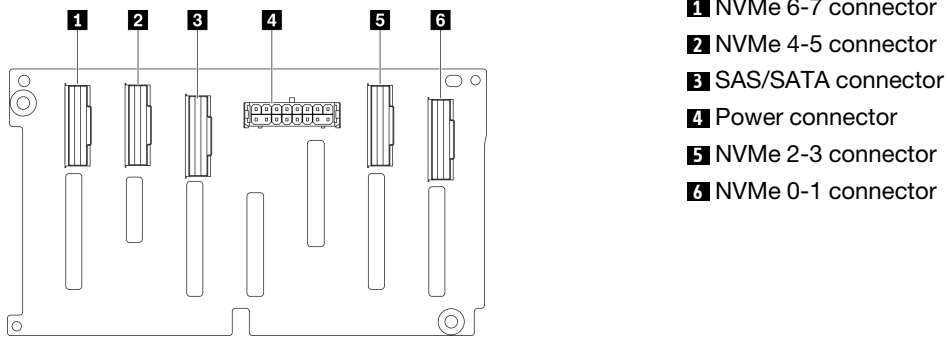


Figure 16. 2.5-inch SAS/SATA/NVMe and NVMe 8-bay backplane connectors

## 3.5-inch drive backplanes

Use this information to locate the connectors on the 3.5-inch drive backplanes.

### 3.5-inch SAS/SATA 4-bay backplane


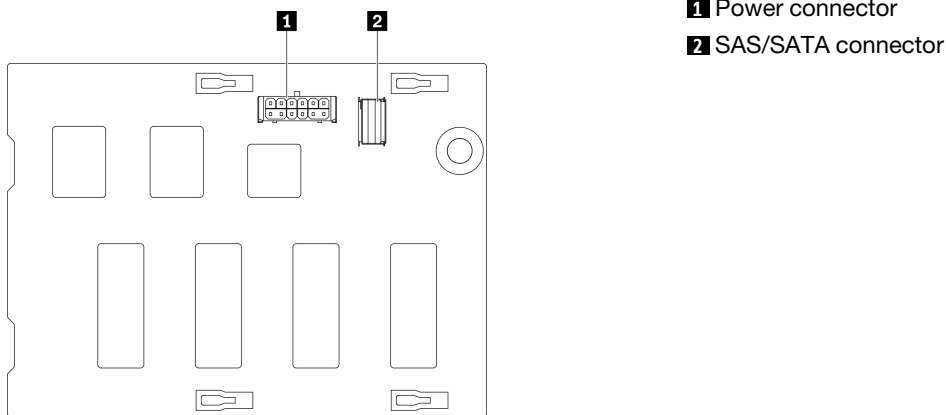


Figure 17. 3.5-inch SAS/SATA 4-bay backplane connectors

### 3.5-inch SAS/SATA/NVMe and NVMe 4-bay backplane

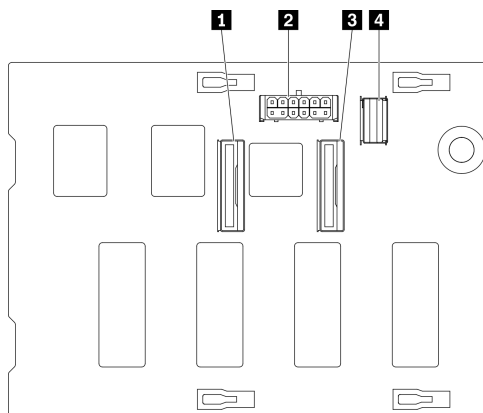


- 1** NVMe 0-1 connector
- 2** Power connector
- 3** NVMe 2-3 connector
- 4** SAS/SATA connector

Figure 18. 3.5-inch SAS/SATA/NVMe and NVMe 4-bay backplane connectors

### 3.5-inch drive backplate

Use this information to locate the connectors on the 3.5-inch drive backplate.

#### 3.5-inch SAS/SATA 4-bay backplate

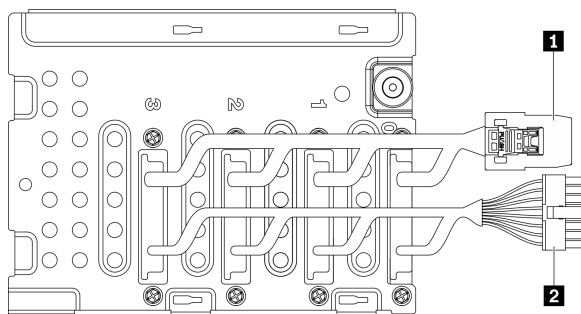

- 1** Signal cable
- 2** Power cable

Figure 19. 3.5-inch SAS/SATA 4-bay backplate cables

---

### Power distribution board connectors

Use this information to locate the connectors on the power distribution board connectors.

## ThinkSystem ST650 V2 PDB

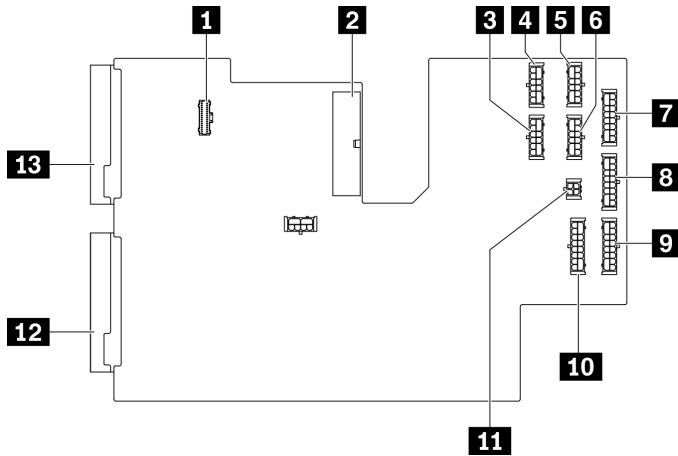


Figure 20. Connectors on the ThinkSystem ST650 V2 PDB

<b>1</b> PDB signal connector	<b>8</b> BP 3 power connector
<b>2</b> Main power connector	<b>9</b> BP 2 power connector
<b>3</b> GPU 3 power connector	<b>10</b> BP 1 power connector
<b>4</b> GPU 1 power connector	<b>11</b> ODD power connector
<b>5</b> GPU 2 power connector	<b>12</b> PSU 2 power connector
<b>6</b> GPU 4 power connector	<b>13</b> PSU 1 power connector
<b>7</b> BP 4 power connector	

## Parts list

Use the parts list to identify each of the components that are available for your server.

**Note:** Depending on the model, your server might look slightly different from the illustration.

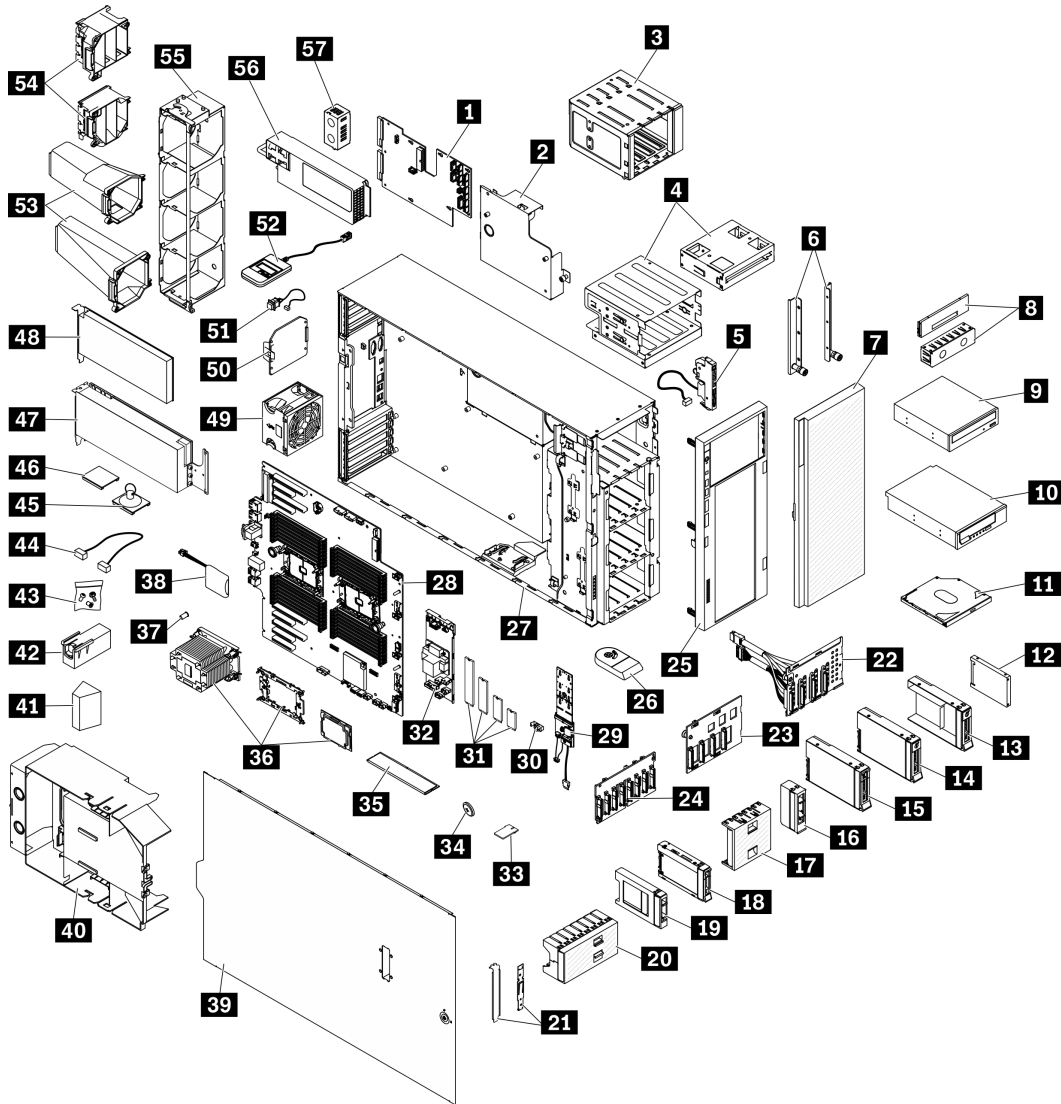


Figure 21. Server components

The parts listed in the following table are identified as one of the following:

- **Tier 1 customer replaceable unit (CRU):** Replacement of Tier 1 CRUs is your responsibility. If Lenovo installs a Tier 1 CRU at your request with no service agreement, you will be charged for the installation.
- **Tier 2 customer replaceable unit (CRU):** You may install a Tier 2 CRU yourself or request Lenovo to install it, at no additional charge, under the type of warranty service that is designated for your server.
- **Field replaceable unit (FRU):** FRUs must be installed only by trained service technicians.
- **Consumable and Structural parts:** Purchase and replacement of consumable and structural parts is your responsibility. If Lenovo acquires or installs a structural component at your request, you will be charged for the service.

Table 15. Parts listing

Index	Description	Tier 1 CRU	Tier 2 CRU	FRU	Consumable and Structural parts
<p>For more information about ordering the parts shown in Figure 21 “Server components” on page 43:</p> <p><a href="http://datacentersupport.lenovo.com/products/servers/thinksystem/st650v2/7z74/parts">http://datacentersupport.lenovo.com/products/servers/thinksystem/st650v2/7z74/parts</a></p> <p>It is highly recommended that you check the power summary data for your server using Lenovo Capacity Planner before purchasing any new parts.</p>					
<b>1</b>	Power distribution board			√	
<b>2</b>	Power distribution board cover				√
<b>3</b>	Expansion drive cage	√			
<b>4</b>	Optical drive cage and 5.25-inch drive bay adapter	√			
<b>5</b>	Front panel board assembly		√		
<b>6</b>	EIA brackets	√			
<b>7</b>	Security door	√			
<b>8</b>	Tape/Optical drive filler cover and tape drive filler				√
<b>9</b>	5.25-inch optical disk drive	√			
<b>10</b>	5.25-inch LTO/RDX tape drive	√			
<b>11</b>	Slim optical drive	√			
<b>12</b>	2.5-inch drive	√			
<b>13</b>	3.5-inch drive tray with 2.5-inch to 3.5-inch drive adapter	√			
<b>14</b>	3.5-inch simple-swap drive	√			
<b>15</b>	3.5-inch hot-swap drive	√			
<b>16</b>	Filler, 3.5-inch storage drive (single bay)				√
<b>17</b>	Filler, 3.5-inch storage drive (four bay)				√
<b>18</b>	2.5-inch hot-swap drive	√			
<b>19</b>	Filler, 2.5-inch storage drive (single bay)				√
<b>20</b>	Filler, 2.5-inch storage drive (eight bay)				√
<b>21</b>	Bracket kit (drive retainer and PCIe bracket)				√
<b>22</b>	3.5-inch simple-swap drive backplate	√			
<b>23</b>	3.5-inch hot-swap drive backplane	√			
<b>24</b>	2.5-inch hot-swap drive backplane	√			

Table 15. Parts listing (continued)

Index	Description	Tier 1 CRU	Tier 2 CRU	FRU	Consumable and Structural parts
25	Front bezel	√			
26	Foot stand				√
27	Chassis			√	
28	System board			√	
29	M.2 boot adapter	√			
30	M.2 retainer clip	√			
31	M.2 drive	√			
32	Internal CFF RAID adapter	√			
33	TPM card (for Chinese Mainland only)			√	
34	CMOS battery (CR2032)				√
35	DIMM	√			
36	PHM module (heatsink, carrier, processor)			√	
37	Heat sink Torx T30 nut		√		
38	Flash power module	√			
39	Server cover	√			
40	Air baffle				√
41	T4 filler	√			
42	Full-length GPU filler				√
43	Screw kit				√
44	Cables	√			
45	Suction cup (for NVLink bridge)				√
46	NVLink bridge	√			
47	Full-length GPU adapter	√			
48	PCIe adapter	√			
49	Fan module	√			
50	Fan filler				√
51	Intrusion switch	√			
52	External LCD diagnostics handset	√			
53	A2/L4 GPU air ducts	√			
54	Full-length PCIe adapter holders				√

Table 15. Parts listing (continued)

Index	Description	Tier 1 CRU	Tier 2 CRU	FRU	Consumable and Structural parts
55	Fan cage				√
56	Power supply unit	√			
57	PSU filler	√			



## Power cords

Several power cords are available, depending on the country and region where the server is installed.

To view the power cords that are available for the server:

1. Go to:

<http://dcsc.lenovo.com/#/>

2. Click **Preconfigured Model** or **Configure to order**.

3. Enter the machine type and model for your server to display the configurator page.

4. Click **Power** → **Power Cables** to see all line cords.

### Notes:

- For your safety, a power cord with a grounded attachment plug is provided to use with this product. To avoid electrical shock, always use the power cord and plug with a properly grounded outlet.
- Power cords for this product that are used in the United States and Canada are listed by Underwriter's Laboratories (UL) and certified by the Canadian Standards Association (CSA).
- For units intended to be operated at 115 volts: Use a UL-listed and CSA-certified cord set consisting of a minimum 18 AWG, Type SVT or SJT, three-conductor cord, a maximum of 15 feet in length and a parallel blade, grounding-type attachment plug rated 15 amperes, 125 volts.
- For units intended to be operated at 230 volts (U.S. use): Use a UL-listed and CSA-certified cord set consisting of a minimum 18 AWG, Type SVT or SJT, three-conductor cord, a maximum of 15 feet in length and a tandem blade, grounding-type attachment plug rated 15 amperes, 250 volts.
- For units intended to be operated at 230 volts (outside the U.S.): Use a cord set with a grounding-type attachment plug. The cord set should have the appropriate safety approvals for the country in which the equipment will be installed.
- Power cords for a specific country or region are usually available only in that country or region.



---

## Chapter 3. Internal cable routing

Some of the components in the server have internal cables and cable connectors.

To connect cables, observe the following guidelines:

- Turn off the server before you connect or disconnect any internal cables.
- See the documentation that comes with any external devices for additional cabling instructions. It might be easier for you to route cables before you connect the devices to the server.
- Cable identifiers of some cables are printed on the cables that come with the server and optional devices. Use these identifiers to connect the cables to the correct connectors.
- Ensure that the cable is not pinched and does not cover any connectors or obstruct any components on the system board.
- Ensure that the relevant cables pass through the cable clips and guides.

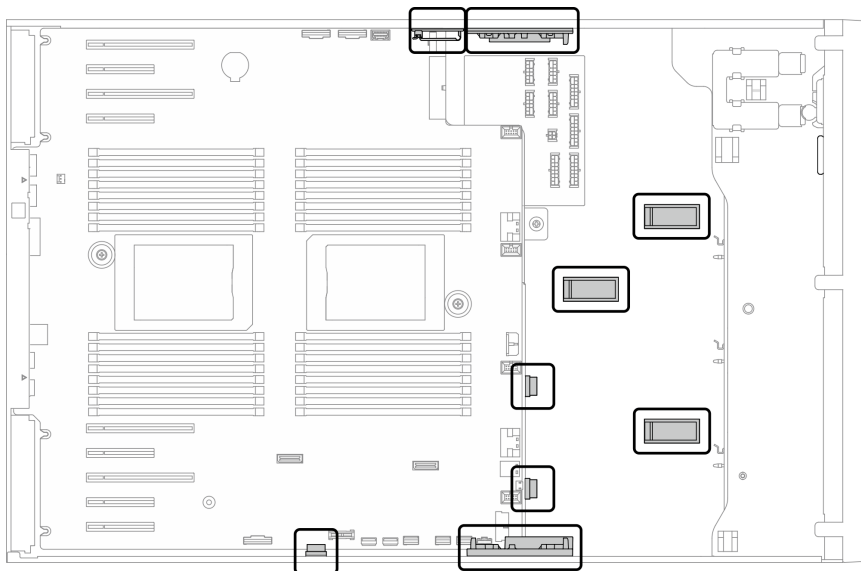


Figure 22. Cable clips and guides on 2.5-inch chassis


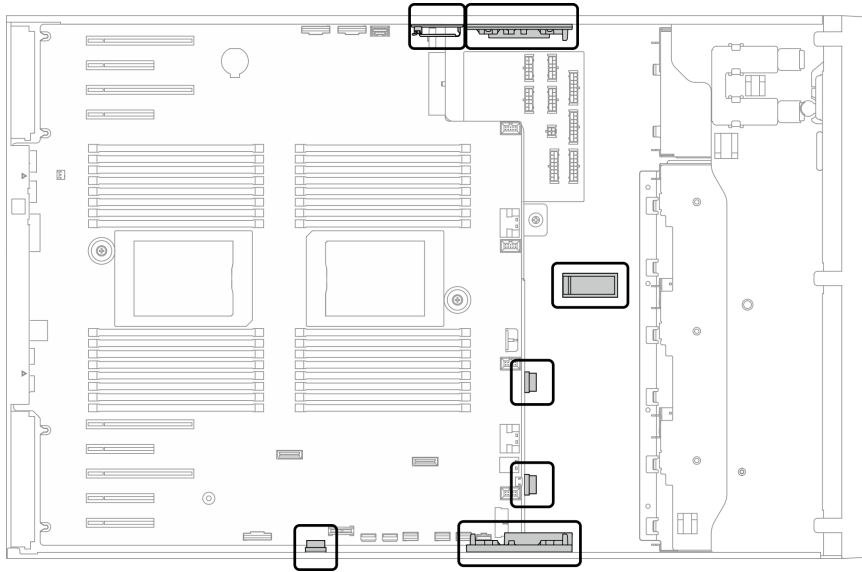


Figure 23. Cable clips and guides on 3.5-inch chassis

**Note:** Disengage all latches, release tabs, or locks on cable connectors when you disconnect cables from the system board. Failing to release them before removing the cables will damage the cable sockets on the system board, which are fragile. Any damage to the cable sockets might require replacing the system board.

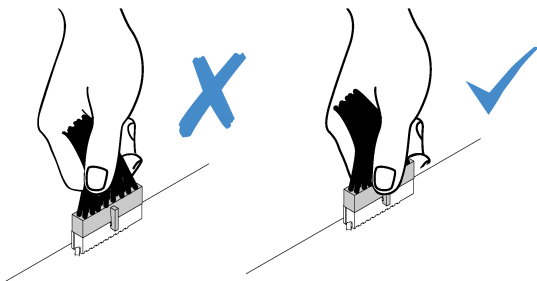

## Backplane and backplate cable routing

For more information about the backplane and backplate cable routing, see *ThinkSystem ST650 V2 Backplane/Backplate Cable Routing Guide*.

## Front panel cable routing

Use the section to understand the cable routing for the front panel.

From	To
1 Rear of front panel	System board: Operator-information-panel connector

### Notes:

- Connections between connectors; **1 ↔ 1, 2 ↔ 2, 3 ↔ 3, ... n ↔ n**
- When routing the cables, ensure that all cables are routed appropriately through the cable guides and cable clips.

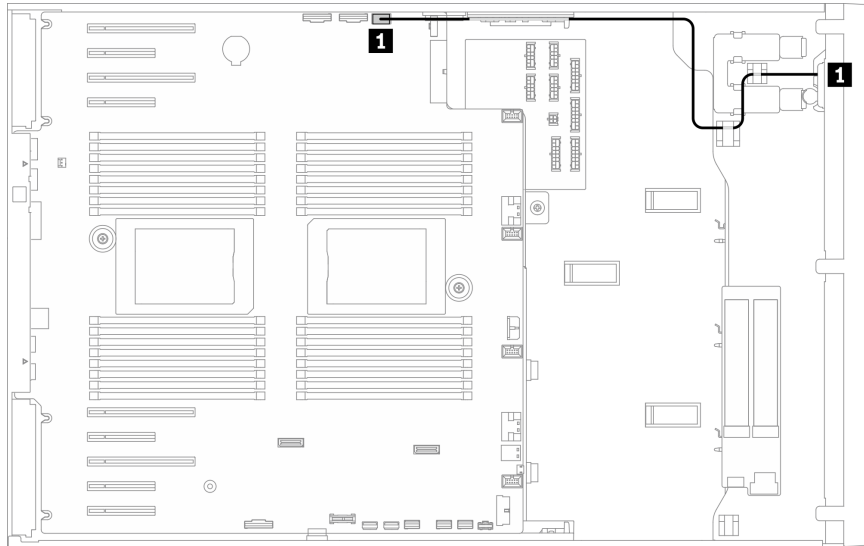


Figure 24. Cable routing for front panel

## Front USB cable routing

Use the section to understand the cable routing for the front USB.

From	To
<b>1</b> Rear of front panel	System board: Front USB connector

### Notes:

- Connections between connectors; **1** ↔ **1**, **2** ↔ **2**, **3** ↔ **3**, ... **n** ↔ **n**
- When routing the cables, ensure that all cables are routed appropriately through the cable guides and cable clips.

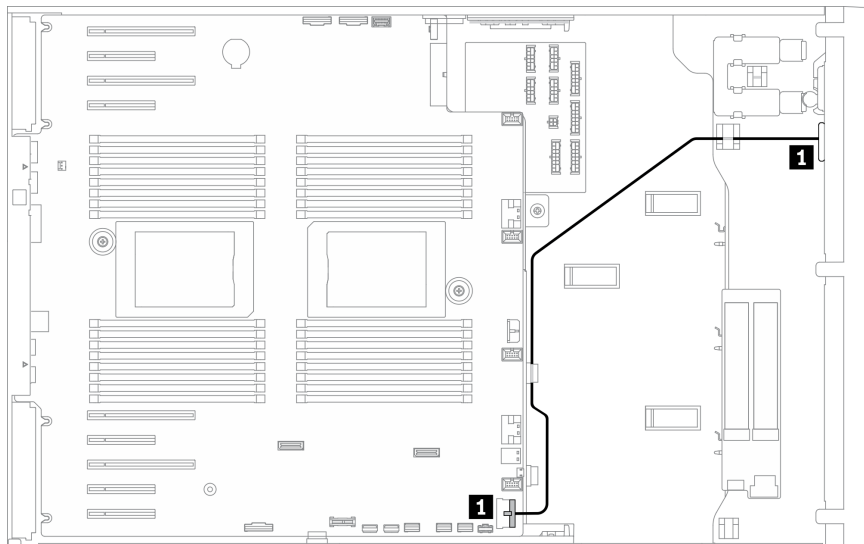


Figure 25. Cable routing for front USB

## GPU cable routing

Use this section to understand the cable routing for the GPU.

From	To
<b>1</b> Power connector on GPU 1	Power distribution board: GPU 3 power connector
<b>5</b> Power connector on GPU 2	Power distribution board: GPU 1 power connector
<b>3</b> Power connector on GPU 3	Power distribution board: GPU 2 power connector
<b>4</b> Power connector on GPU 4	Power distribution board: GPU 4 power connector

### Notes:

- Connections between connectors; **1↔1**, **2↔2**, **3↔3**, ... **n↔n**
- When routing the cables, ensure that all cables are routed appropriately through the cable guides and cable clips.

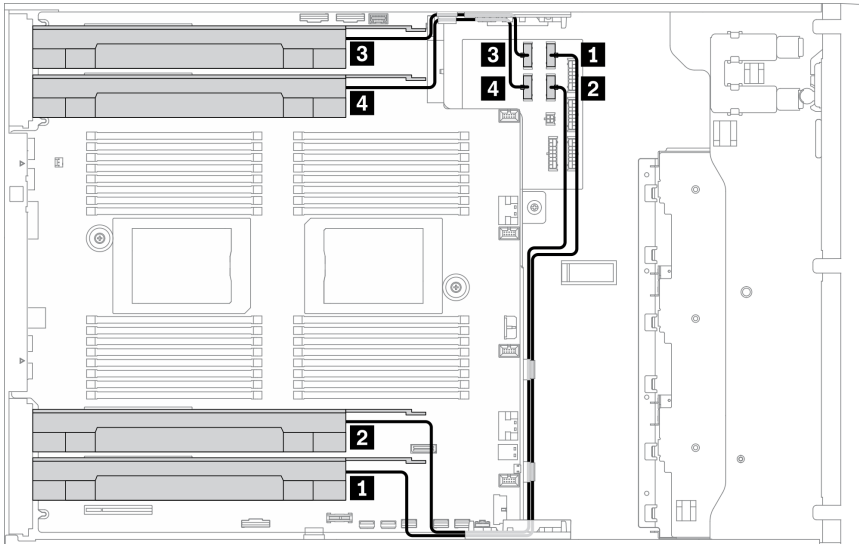


Figure 26. Cable routing for GPU

## Internal CFF RAID adapter cable routing

Use this section to understand the cable routing for the CFF RAID adapter.

From	To
<b>1</b> Signal connector on the CFF RAID adapter	System board: PCIe 3 connector connector
<b>2</b> Power connector on the CFF RAID adapter	System board: CFF RAID power connector

### Notes:

- Connections between connectors; **1↔1**, **2↔2**, **3↔3**, ... **n↔n**
- When routing the cables, ensure that all cables are routed appropriately through the cable guides and cable clips.

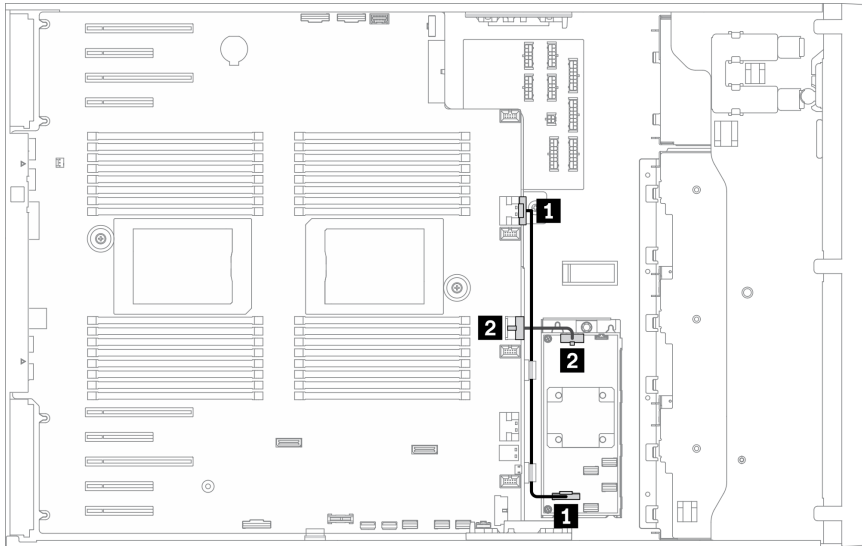


Figure 27. Cable routing for the CFF RAID adapter

## M.2 boot adapter cable routing

Use the section to understand the cable routing for the M.2 boot adapter.

From	To
<b>1</b> M.2 power connector on the M.2 boot adapter	System board: M.2 power connector
<b>2</b> M.2 signal connector on the M.2 boot adapter	System board: M.2 signal connector

### Notes:

- Connections between connectors; **1** ↔ **1**, **2** ↔ **2**, **3** ↔ **3**, ... **n** ↔ **n**
- When routing the cables, ensure that all cables are routed appropriately through the cable guides and cable clips.

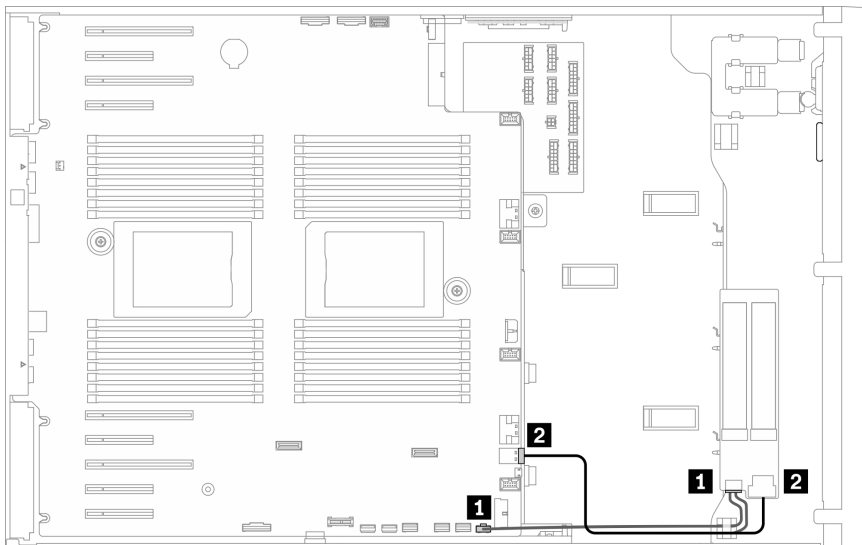


Figure 28. Cable routing for M.2 boot adapter

## Optical drive cable routing

Use the section to understand the cable routing for the optical drives.

From	To
<b>1</b> Power connector on optical drive	Power distribution board: ODD power connector
<b>2</b> Signal connector on optical drive	System board: Internal USB connector 3

### Notes:

- Connections between connectors; **1**↔**1**, **2**↔**2**, **3**↔**3**, ... **n**↔**n**
- When routing the cables, ensure that all cables are routed appropriately through the cable guides and cable clips.

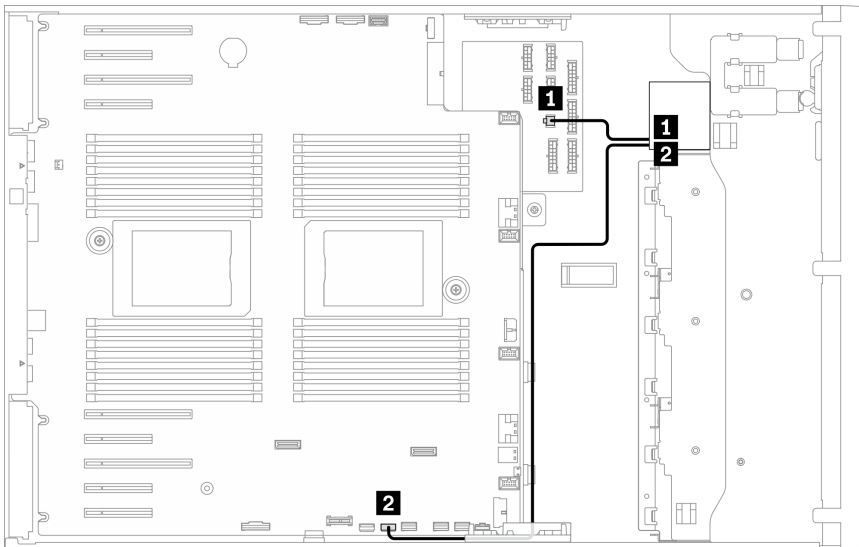


Figure 29. Cable routing for optical drive

## PCIe slot 8 cable routing

Use the section to understand the cable routing to enable PCIe slot 8.

From	To
<b>1</b> System board: PCIe slot 8 enable connector	System board: PCIe 4 connector

### Notes:

- Connections between connectors; **1**↔**1**, **2**↔**2**, **3**↔**3**, ... **n**↔**n**
- When routing the cables, ensure that all cables are routed appropriately through the cable guides and cable clips.



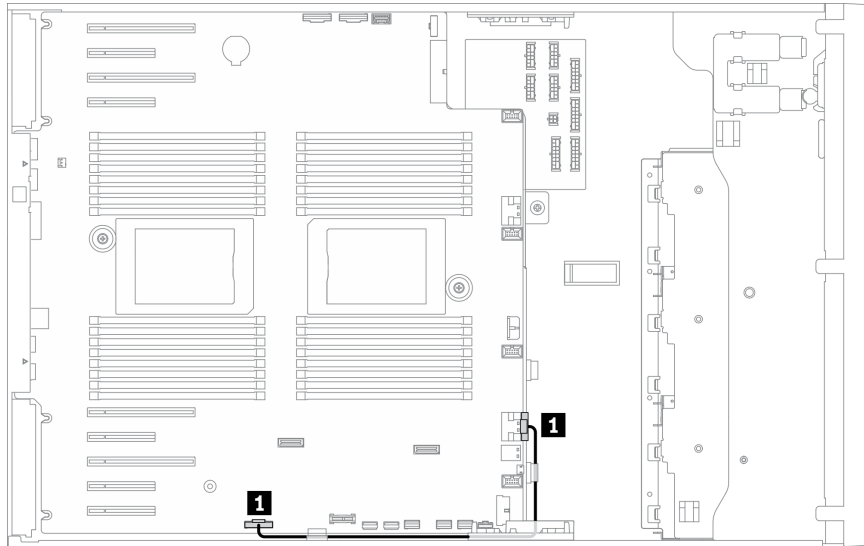


Figure 30. Cable routing to enable PCIe slot 8

## Power distribution board cable routing

Use the section to understand the cable routing for the power distribution board.

From	To
<b>1</b> Power distribution board: Main power connector	System board: Power distribution board power connector
<b>2</b> Power distribution board: PDB signal connector	System board: Power distribution board signal connector

### Notes:

- Connections between connectors; **1** ↔ **1**, **2** ↔ **2**, **3** ↔ **3**, ... **n** ↔ **n**
- When routing the cables, ensure that all cables are routed appropriately through the cable guides and cable clips.

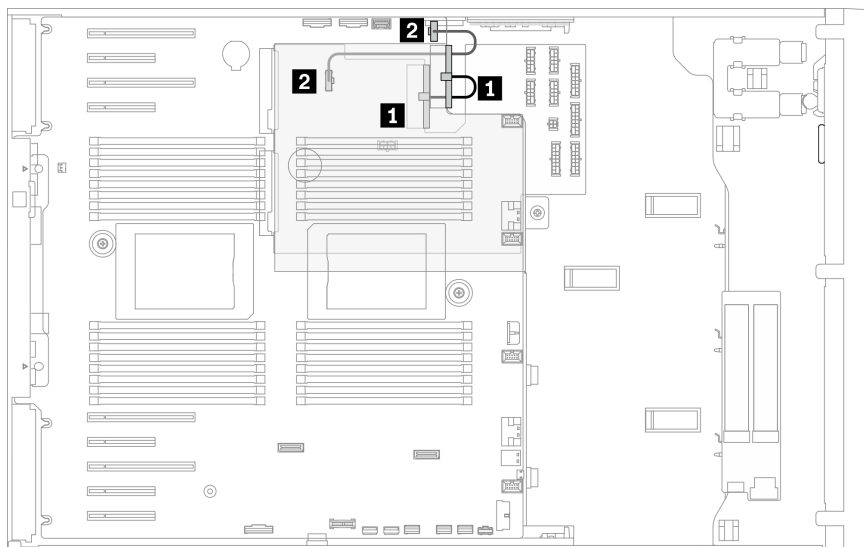


Figure 31. Cable routing for power distribution board

## Tape drive cable routing

Use the section to understand the cable routing for the tape drive.

### SAS tape drive

From	To
<b>1</b> Power connector on signal cable	Power distribution board: ODD power connector
<b>2</b> Signal connector on tape drive	An available connector on the RAID/HBA adapter

#### Notes:

- Connections between connectors; **1** ↔ **1**, **2** ↔ **2**, **3** ↔ **3**, ... **n** ↔ **n**
- When routing the cables, ensure that all cables are routed appropriately through the cable guides and cable clips.
- The following illustrations show the cable routing for PCIe slot 1 and 9 respectively, the routing for the other PCIe slots are similar.

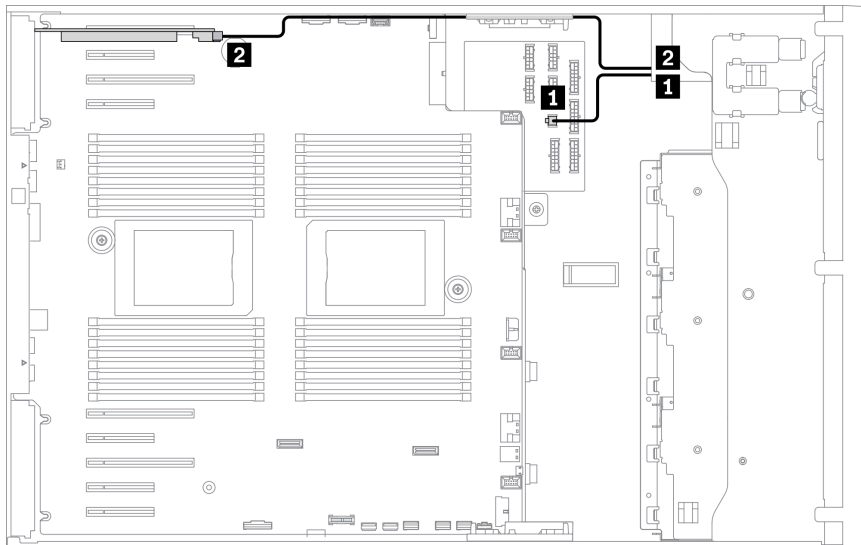


Figure 32. Cable routing for SAS tape drive to PCIe slot 1

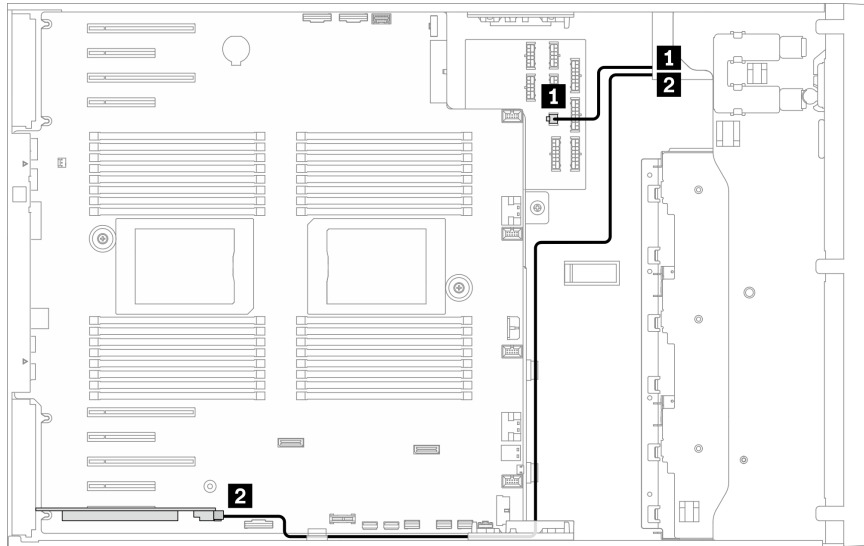


Figure 33. Cable routing for SAS tape drive to PCIe slot 9

### USB tape drive

From	To
<b>1</b> Power connector on tape drive	Power distribution board: ODD power connector
<b>2</b> Signal connector on tape drive	System board: Internal USB connector 4

### Notes:

- Connections between connectors; **1** ↔ **1**, **2** ↔ **2**, **3** ↔ **3**, ... **n** ↔ **n**
- When routing the cables, ensure that all cables are routed appropriately through the cable guides and cable clips.

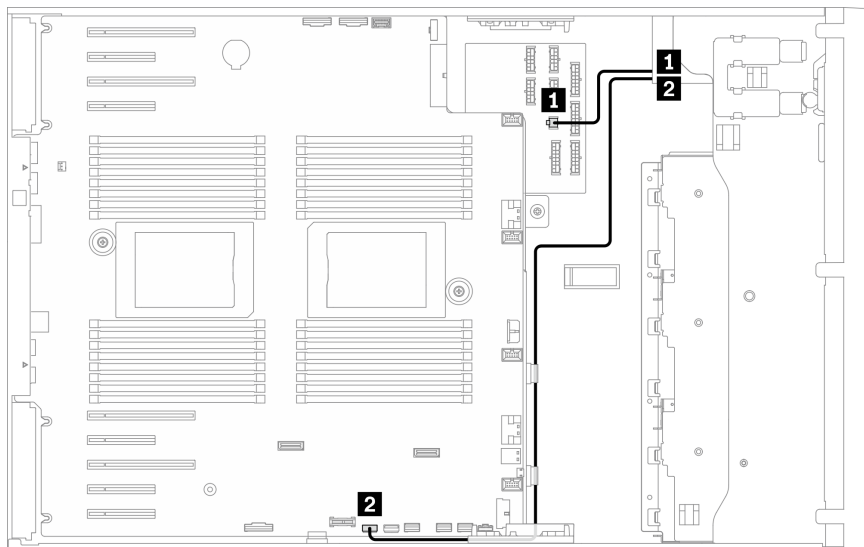


Figure 34. Cable routing for the USB tape drive



---

## Chapter 4. Hardware replacement procedures

This section provides installation and removal procedures for all serviceable system components. Each component replacement procedure references any tasks that need to be performed to gain access to the component being replaced.

For more information about ordering parts:

1. Go to <http://datacentersupport.lenovo.com> and navigate to the support page for your server.
2. Click **Parts**.
3. Enter the serial number to view a listing of parts for your server.

**Note:** If you replace a part, such as an adapter, that contains firmware, you might also need to update the firmware for that part. For more information about updating firmware, see “[Firmware updates](#)” on page 9.

---

### Installation Guidelines

Before installing components in your server, read the installation guidelines.

Before installing optional devices, read the following notices carefully:

**Attention:** Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

- Read the safety information and guidelines to ensure your safety at work:
  - A complete list of safety information for all products is available at:  
[http://thinksystem.lenovofiles.com/help/topic/safety\\_documentation/pdf\\_files.html](http://thinksystem.lenovofiles.com/help/topic/safety_documentation/pdf_files.html)
  - The following guidelines are available as well: “[Handling static-sensitive devices](#)” on page 62 and “[Working inside the server with the power on](#)” on page 61.
- Make sure the components you are installing are supported by your server. For a list of supported optional components for the server, see <https://serverproven.lenovo.com/>.
- When you install a new server, download and apply the latest firmware. This will help ensure that any known issues are addressed, and that your server is ready to work with optimal performance. Go to [ThinkSystem ST650 V2 Drivers and Software](#) to download firmware updates for your server.

**Important:** Some cluster solutions require specific code levels or coordinated code updates. If the component is part of a cluster solution, verify the latest Best Recipe code level menu for cluster supported firmware and driver before you update the code.

- It is good practice to make sure that the server is working correctly before you install an optional component.
- Keep the working area clean, and place removed components on a flat and smooth surface that does not shake or tilt.
- Do not attempt to lift an object that might be too heavy for you. If you have to lift a heavy object, read the following precautions carefully:
  - Make sure that you can stand steadily without slipping.
  - Distribute the weight of the object equally between your feet.
  - Use a slow lifting force. Never move suddenly or twist when you lift a heavy object.

- To avoid straining the muscles in your back, lift by standing or by pushing up with your leg muscles.
- Make sure that you have an adequate number of properly grounded electrical outlets for the server, monitor, and other devices.
- Back up all important data before you make changes related to the disk drives.
- Have a small flat-blade screwdriver, a small Phillips screwdriver, and a T8 torx screwdriver available.
- To view the error LEDs on the system board and internal components, leave the power on.
- You do not have to turn off the server to remove or install hot-swap power supplies, hot-swap fans, or hot-plug USB devices. However, you must turn off the server before you perform any steps that involve removing or installing adapter cables, and you must disconnect the power source from the server before you perform any steps that involve removing or installing a riser card.
- Blue on a component indicates touch points, where you can grip to remove a component from or install it in the server, open or close a latch, and so on.
- Terra-cotta on a component or a terra-cotta label on or near a component indicates that the component can be hot-swapped if the server and operating system support hot-swap capability, which means that you can remove or install the component while the server is still running. (Terra-cotta can also indicate touch points on hot-swap components.) See the instructions for removing or installing a specific hot-swap component for any additional procedures that you might have to perform before you remove or install the component.
- The Red strip on the drives, adjacent to the release latch, indicates that the drive can be hot-swapped if the server and operating system support hot-swap capability. This means that you can remove or install the drive while the server is still running.

**Note:** See the system specific instructions for removing or installing a hot-swap drive for any additional procedures that you might need to perform before you remove or install the drive.

- After finishing working on the server, make sure you reinstall all safety shields, guards, labels, and ground wires.

## Safety inspection checklist

Use the information in this section to identify potentially unsafe conditions with your server. As each machine was designed and built, required safety items were installed to protect users and service technicians from injury.

### Notes:

1. The product is not suitable for use at visual display workplaces according to §2 of the Workplace Regulations.
2. The set-up of the server is made in the server room only.

### CAUTION:

**This equipment must be installed or serviced by trained personnel, as defined by the NEC, IEC 62368-1 & IEC 60950-1, the standard for Safety of Electronic Equipment within the Field of Audio/Video, Information Technology and Communication Technology. Lenovo assumes you are qualified in the servicing of equipment and trained in recognizing hazards energy levels in products. Access to the equipment is by the use of a tool, lock and key, or other means of security, and is controlled by the authority responsible for the location.**

**Important:** Electrical grounding of the server is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Use the following checklist to verify that there are no potentially unsafe conditions:

1. Make sure that the power is off and the power cord is disconnected.

## 2. Check the power cord.

- Make sure that the third-wire ground connector is in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
- Make sure that the power cord is the correct type.

To view the power cords that are available for the server:

### a. Go to:

<http://dcsc.lenovo.com/#/>

### b. Click **Preconfigured Model** or **Configure to order**.

c. Enter the machine type and model for your server to display the configurator page.

d. Click **Power** → **Power Cables** to see all line cords.

- Make sure that the insulation is not frayed or worn.

3. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
4. Check inside the server for any obvious unsafe conditions, such as metal filings, contamination, water or other liquid, or signs of fire or smoke damage.
5. Check for worn, frayed, or pinched cables.
6. Make sure that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

## System reliability guidelines

Review the system reliability guidelines to ensure proper system cooling and reliability.

Make sure the following requirements are met:

- When the server comes with redundant power, a power supply must be installed in each power-supply bay.
- Adequate space around the server must be spared to allow server cooling system to work properly. Leave approximately 50 mm (2.0 in.) of open space around the front and rear of the server. Do not place any object in front of the fans.
- For proper cooling and airflow, refit the server cover before you turn the power on. Do not operate the server for more than 30 minutes with the server cover removed, for it might damage server components.
- Cabling instructions that come with optional components must be followed.
- A failed fan must be replaced within 48 hours since malfunction.
- A removed hot-swap drive must be replaced within two minutes after removal.
- A removed hot-swap power supply must be replaced within two minutes after removal.
- Every air baffle that comes with the server must be installed when the server starts (some servers might come with more than one air baffle). Operating the server with a missing air baffle might damage the processor.
- All processor sockets must contain either a socket cover or a processor with heat sink.
- When more than one processor is installed, fan population rules for each server must be strictly followed.

## Working inside the server with the power on

You might need to keep the power on with the server cover removed to look at system information on the display panel or to replace hot-swap components. Review these guidelines before doing so.

**Attention:** The server might stop and loss of data might occur when internal server components are exposed to static electricity. To avoid this potential problem, always use an electrostatic-discharge wrist strap or other grounding systems when working inside the server with the power on.

- Avoid loose-fitting clothing, particularly around your forearms. Button or roll up long sleeves before working inside the server.
- Prevent your necktie, scarf, badge rope, or long hair from dangling into the server.
- Remove jewelry, such as bracelets, necklaces, rings, cuff links, and wrist watches.
- Remove items from your shirt pocket, such as pens and pencils, in case they fall into the server as you lean over it.
- Avoid dropping any metallic objects, such as paper clips, hairpins, and screws, into the server.

## Handling static-sensitive devices

Review these guidelines before you handle static-sensitive devices to reduce the possibility of damage from electrostatic discharge.

**Attention:** Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

- Limit your movement to prevent building up static electricity around you.
- Take additional care when handling devices during cold weather, for heating would reduce indoor humidity and increase static electricity.
- Always use an electrostatic-discharge wrist strap or other grounding system.
- While the device is still in its static-protective package, touch it to an unpainted metal surface on the outside of the server for at least two seconds. This drains static electricity from the package and from your body.
- Remove the device from the package and install it directly into the server without putting it down. If it is necessary to put the device down, put it back into the static-protective package. Never place the device on the server or on any metal surface.
- When handling a device, carefully hold it by the edges or the frame.
- Do not touch solder joints, pins, or exposed circuitry.
- Keep the device from others' reach to prevent possible damages.

---

## 2.5-inch hot-swap drive backplane replacement

Use this information to remove and install a 2.5-inch hot-swap drive backplane.

**Note:** This topic applies only to server models that have 2.5-inch hot-swap drive backplanes installed.

### Remove a 2.5-inch hot-swap drive backplane

Use this information to remove a 2.5-inch hot-swap drive backplane.

#### About this task

#### S002





**CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

**Attention:**

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

**Procedure**

Step 1. Make preparations for this task.

- a. Remove the server cover. See “[Remove the server cover](#)” on page 197.
- b. Remove all installed hot-swap drives and drive bay fillers (if any) from the drive bays. See “[Remove a hot-swap drive](#)” on page 88.

Step 2. Disconnect all the cables from the backplane.

Step 3. Remove the backplane.

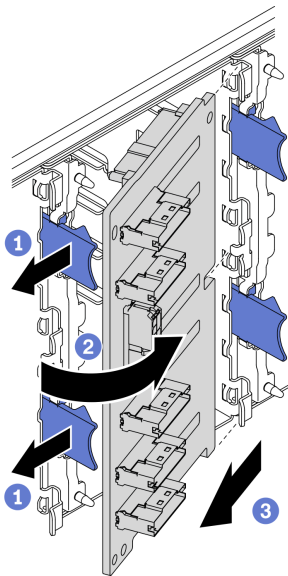


Figure 35. Removal of the 2.5-inch hot-swap drive backplane

- a. ① Lift the release tabs to disengage the backplane.

- b. ② Rotate the backplane away from the drive cage as shown.
- c. ③ Remove the backplane from the drive cage.

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install a 2.5-inch hot-swap drive backplane

Use this information to install a 2.5-inch hot-swap drive backplane.

### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read “[Installation Guidelines](#)” on [page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

### Procedure

Step 1. Install the backplane.

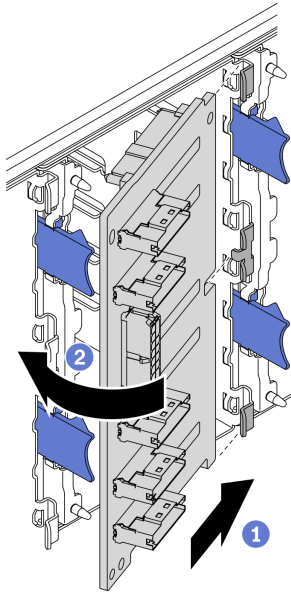


Figure 36. Installation of the 2.5-inch hot-swap drive backplane

- a. 1 Insert the backplane into the backplane slot as shown.
- b. 2 Carefully rotate the edge of the new backplane toward the drive cage until it is secured by the release tabs.

#### After you finish

- Reconnect the cables to the backplane. See “2.5-inch hot-swap drive backplane cable routing” in the *ThinkSystem ST650 V2 Backplane/Backplate Cable Routing Guide*.
- Reinstall all the hot-swap drives and drive bay fillers (if any) into the drive bays. See “Install a hot-swap drive” on page 89.
- Reinstall the server cover. See “Install the server cover” on page 199.
- Complete the parts replacement. See “Complete the parts replacement” on page 214.

#### Demo video

[Watch the procedure on YouTube](#)

---

## 2.5-inch drive replacement from 3.5-inch drive bay

Use this information to remove and install a 2.5-inch drive from a 3.5-inch drive bay.

The EMI integrity and cooling of the server are protected by having all drive bays covered or occupied. The number of the installed drives in your server varies depending on the server model. The vacant bays are occupied by dummy trays. When you install a drive, save the removed dummy tray from the drive bay in case you later remove the drive and need the dummy tray to cover the place.

**Attention:** An unoccupied drive bay without any other protection might impact the EMI integrity and cooling of the server, which might result in overheating or component damage. To maintain the EMI integrity and cooling of the server, install a new drive as soon as you remove the failing one or the dummy tray.

Before you begin, review the following drive installation rules:

- Follow the order of the drive bays. See [Chapter 2 “Server components” on page 15](#) to locate the drive bays in your server.
- For SSDs with different capacities, install the drive by following the order of the drive bays as well as the order from the lowest capacity to the highest capacity.

## Remove a 2.5-inch drive from a 3.5-inch drive bay

Use this information to remove 2.5-inch drive from a 3.5-inch drive bay.

### About this task

#### S002



#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

#### Procedure

- Step 1. Use the key to unlock the server cover; then, open the security door.
- Step 2. Locate the drive you want to remove.
- Step 3. Remove the 3.5-inch drive tray with the 2.5-inch drive. See [“Remove a simple-swap drive” on page 85](#) or [“Remove a hot-swap drive” on page 88](#).
- Step 4. Remove the five screws that secure the 2.5-inch drive and the drive adapter; then, remove the 2.5-inch drive and the drive adapter from the tray.

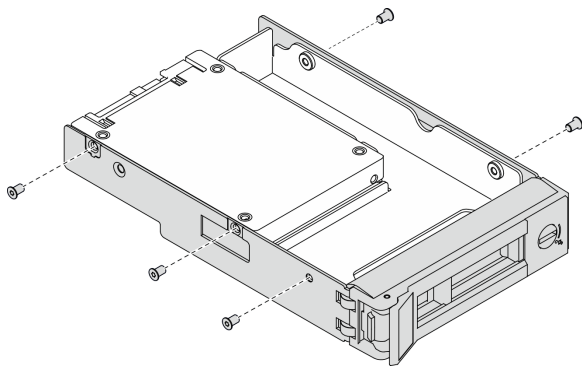


Figure 37. Removing the screws that secure the 2.5-inch drive and the drive adapter

Step 5. Remove the two screws that secure the 2.5-inch drive; then, lift the drive up to remove it from the drive adapter.

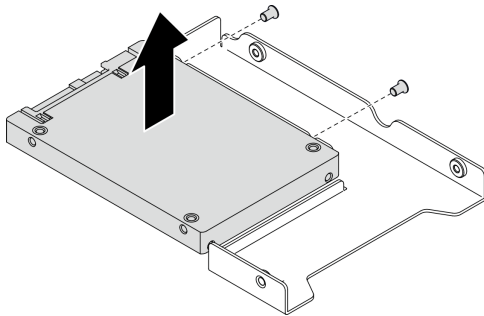


Figure 38. 2.5-inch drive removal from the drive adapter

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install a 2.5-inch drive into a 3.5-inch drive bay

Use this information to install a 2.5-inch drive into a 3.5-inch drive bay.

### About this task

#### S002



### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

### Attention:

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

### Procedure

Step 1. Position the 2.5-inch drive into the 2.5-inch to 3.5-inch drive adapter.

- Step 2. Align the two screw holes in the drive with the corresponding holes in the drive adapter; then, install the two screws to secure the drive to the drive adapter.

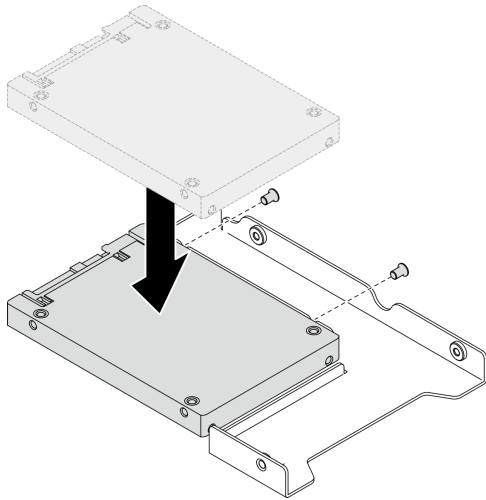


Figure 39. 2.5-inch drive installation to drive adapter

- Step 3. Position the drive adapter with the drive into the 3.5-inch drive tray. Align the screw holes in the drive adapter and the drive with the corresponding holes in the tray; then, install the five screws to secure the drive adapter and the drive into the tray.

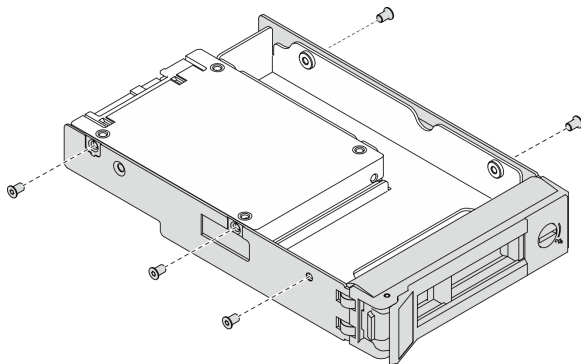


Figure 40. Installing the screws that secure the 2.5-inch drive and the drive adapter

- Step 4. Slide the tray with the drive into the drive bay from the front until it snaps into position and then completely close the handle. See [“Install a simple-swap drive” on page 86](#) or [“Install a hot-swap drive” on page 89](#).

#### After you finish

1. Install other drives if necessary.
2. Close the security door; then, use the key to lock the server cover.
3. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

#### Demo video

[Watch the procedure on YouTube](#)

---

## 3.5-inch hot-swap drive backplane replacement

Use this information to remove and install a 3.5-inch hot-swap drive backplane.


**Note:** This topic applies only to server models that have 3.5-inch hot-swap drive backplanes installed.

### Remove a 3.5-inch hot-swap drive backplane

Use this information to remove a 3.5-inch hot-swap drive backplane.

#### About this task

#### S002

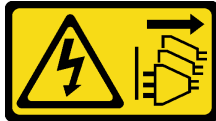

#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

#### **Procedure**

- Step 1. Make preparations for this task.
  - a. Remove the server cover. See [“Remove the server cover” on page 197](#).
  - b. Remove all installed hot-swap drives and drive bay fillers (if any) from the drive bays. See [“Remove a hot-swap drive” on page 88](#).
- Step 2. Disconnect all the cables from the backplane.
- Step 3. Remove the backplane.

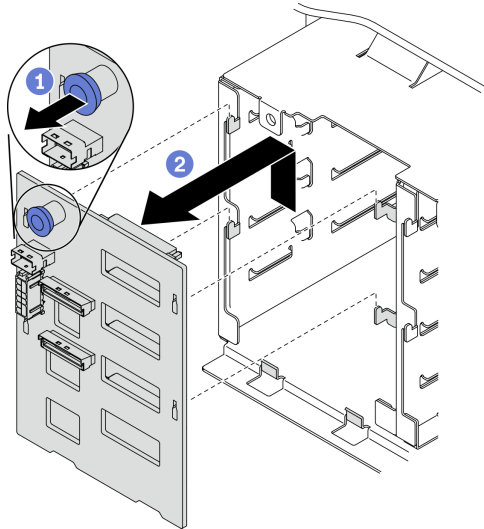


Figure 41. Removal of the 3.5-inch hot-swap drive backplane

- a. ① Open the plunger that secures the backplane.
- b. ② Slightly slide the backplane as shown to disengage it from the drive cage; then, remove the backplane from the drive cage.

#### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

#### Demo video

[Watch the procedure on YouTube](#)

## Install a 3.5-inch hot-swap drive backplane

Use this information to install a 3.5-inch hot-swap drive backplane.

#### About this task

#### S002



#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.



- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

### Procedure

- Step 1. Position the backplane on the drive cage so that the tabs on the drive cage are inserted into the corresponding holes in the backplane.
- Step 2. Slide the backplane as shown until it is seated into position in the drive cage.

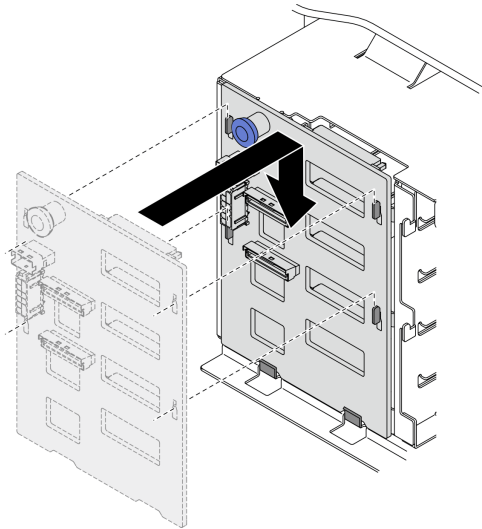


Figure 42. Installation of the 3.5-inch hot-swap drive backplane

### After you finish

1. Reconnect the cables to the backplane. See “3.5-inch hot-swap drive backplane cable routing” in the *ThinkSystem ST650 V2 Backplane/Backplane Cable Routing Guide*.
2. Reinstall all the hot-swap drives and drive bay fillers (if any) into the drive bays. See “[Install a hot-swap drive](#)” on page 89.
3. Reinstall the server cover. See “[Install the server cover](#)” on page 199.
4. Complete the parts replacement. See “[Complete the parts replacement](#)” on page 214.

### Demo video

[Watch the procedure on YouTube](#)

---

## 3.5-inch simple-swap drive backplate replacement

Use this information to remove and install a 3.5-inch simple-swap drive backplate.

**Note:** This section applies only to server models that have 3.5-inch simple-swap drive backplates installed.

### Remove a 3.5-inch simple-swap drive backplate

Use this information to remove a 3.5-inch simple-swap drive backplate.

### About this task

## S002



### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

### Procedure

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover” on page 197](#).
- b. Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).
- c. Remove the air baffle. See [“Remove the air baffle” on page 77](#).
- d. Remove all the full-length GPU adapters. See [“Remove a full-length GPU adapter” on page 115](#).
- e. Remove all the fans. See [“Remove a hot-swap fan” on page 97](#).
- f. Remove the fan cage. See [“Remove the fan cage assembly” on page 100](#).
- g. Remove all installed simple-swap drives and drive bay fillers (if any) from the drive bays. See [“Remove a simple-swap drive” on page 85](#).

Step 2. Disconnect all cables connected to the system board.

Step 3. Remove the backplate.

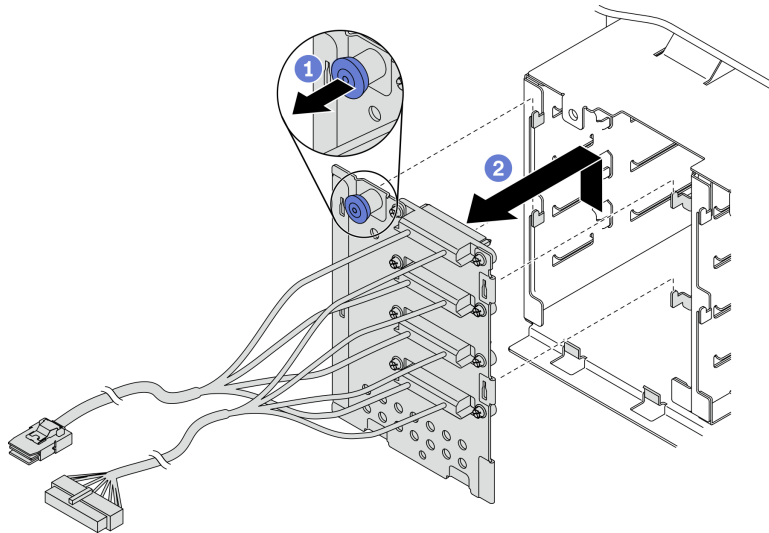


Figure 43. Removal of the 3.5-inch hot-swap drive backplate

- a. ① Open the plunger that secures the backplate.
- b. ② Slightly slide the backplate as shown to disengage it from the drive cage; then, remove the backplate from the drive cage.

#### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

#### Demo video

[Watch the procedure on YouTube](#)

## Install a 3.5-inch simple-swap drive backplate

Use this information to install a 3.5-inch simple-swap drive backplate.

#### About this task

##### S002



#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### Attention:

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

### Procedure

- Step 1. Position the backplate on the drive cage so that the tabs on the drive cage are inserted into the corresponding holes in the backplate.
- Step 2. Slide the backplate as shown until it is seated into position in the drive cage.

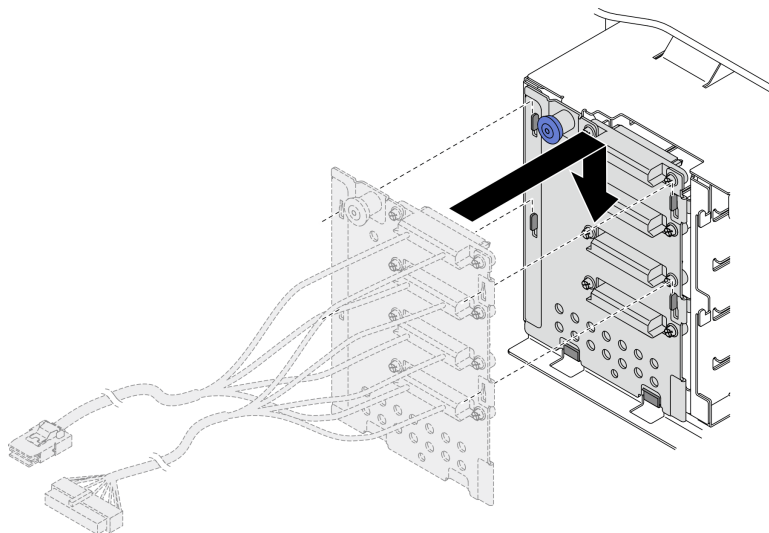


Figure 44. Installation of the 3.5-inch hot-swap drive backplate

- Step 3. Connect the power cable and the signal cable to the system board. See “3.5-inch simple-swap drive backplate cable routing” in the *ThinkSystem ST650 V2 Backplane/Backplate Cable Routing Guide*.

### After you finish

1. Reinstall all the simple-swap drives and drive bay fillers (if any) into the drive cage. See “[Install a simple-swap drive](#)” on page 86.
2. Reinstall the fan cage. See “[Install the fan cage assembly](#)” on page 101.
3. Reinstall all the fans. See “[Install a hot-swap fan](#)” on page 99.
4. Reinstall all the full-length GPU adapters. See “[Install a full-length GPU adapter](#)” on page 117.
5. Reinstall the air baffle. See “[Install the air baffle](#)” on page 79.
6. Reinstall all the flash power modules. See “[Install a flash power module](#)” on page 105.
7. Reinstall the server cover. See “[Install the server cover](#)” on page 199.
8. Complete the parts replacement. See “[Complete the parts replacement](#)” on page 214.

### Demo video

[Watch the procedure on YouTube](#)

---

## A2/L4 GPU air duct replacement

Follow the instructions in this section to remove or install an A2/L4 GPU air duct.

## Remove an A2/L4 GPU air duct

Follow the instructions in this section to remove an A2/L4 GPU air duct.

### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

#### **Procedure**

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover” on page 197](#).
- b. Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).
- c. Remove the air baffle. See [“Remove the air baffle” on page 77](#).
- d. Remove all the fans. See [“Remove a hot-swap fan” on page 97](#).

**Attention:** All fan modules must be removed when handling the fan cage assembly.

- e. Remove the fan cage. See [“Remove the fan cage assembly” on page 100](#).

Step 2. Press and hold the tab to release the A2/L4 GPU air duct from the fan cage; then, remove the air duct in the direction as shown.

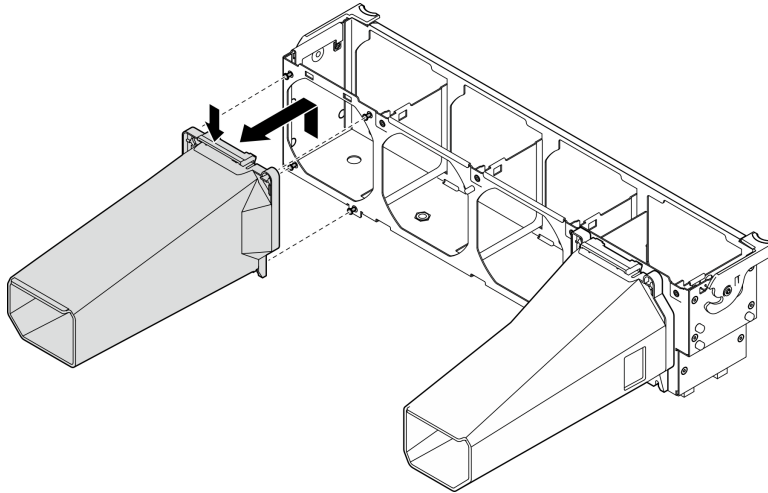


Figure 45. Removal of an A2/L4 GPU air duct

### After you finish

1. Install a replacement unit, see [“Install an A2/L4 GPU air duct” on page 76](#).
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

## Install an A2/L4 GPU air duct

Follow the instructions in this section to install an A2/L4 GPU air duct.

### About this task

#### S002



#### **CAUTION:**

**The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.**

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- When one or more **A2/L4 GPUs** are installed between PCIe slots 1 and 4 or between PCIe slots 5 and 8, one or two **A2/L4 GPU air ducts** are required to be installed on the fan cage at the same side as the installed A2/L4 GPU for proper cooling and airflow.
- See “GPU installation rules” in the *Setup Guide* for detailed information about the technical rules for GPU installation.

## Procedure

Step 1. Align the A2/L4 GPU air duct with the studs on the fan cage corresponding to the installed A2/L4 GPU.

### Attention:

- An A2/L4 GPU air duct is required to be installed in the same air zone as an installed A2/L4 GPU.
- The studs on the fan cage are positioned differently for different A2/L4 GPU air ducts.

Step 2. Insert the A2/L4 GPU air duct onto the fan cage until it snaps into position.

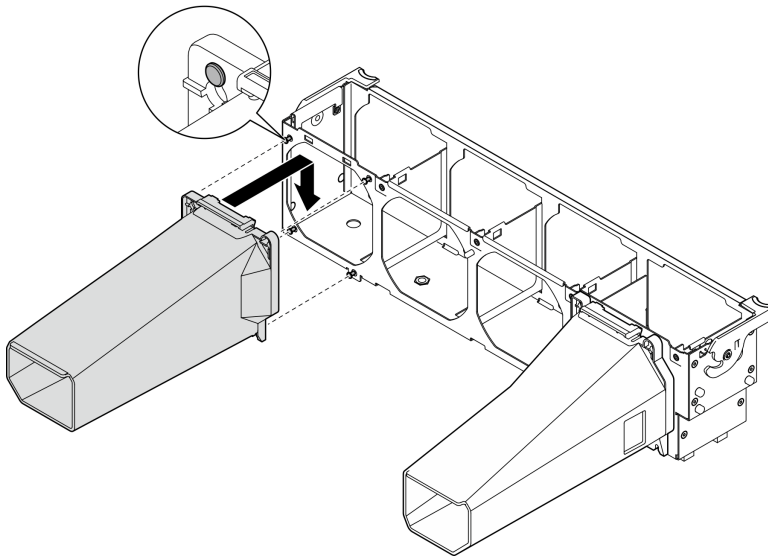


Figure 46. Installation of an A2/L4 GPU air duct

## After you finish

1.

**Attention:** All fan modules must be removed when handling the fan cage assembly.

Reinstall the fan cage. See [“Install the fan cage assembly” on page 101](#).

2. Reinstall all the fans. See [“Install a hot-swap fan” on page 99](#).
3. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
4. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).
5. Reinstall the server cover. See [“Install the server cover” on page 199](#).
6. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

---

## Air baffle replacement

Follow this procedure to remove and install the air baffle.

### Remove the air baffle

Follow this procedure to remove the air baffle.

### About this task

**S033**



**CAUTION:**

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

**S017**



**CAUTION:**

**Hazardous moving fan blades nearby. Keep fingers and other body parts away.**

**Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

**Procedure**

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover” on page 197](#).
- b. Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).

Step 2. Lift the air baffle from the server, and set it aside.



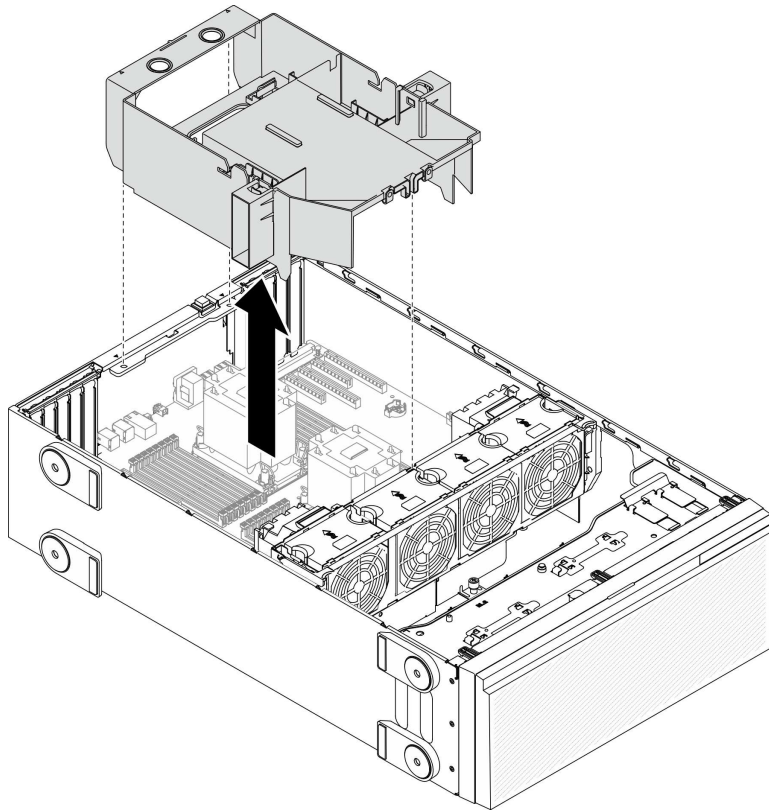


Figure 47. Air baffle removal

**Attention:** For proper cooling and airflow, install the air baffle before you turn on the server. Operating the server with the air baffle removed might damage server components.

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install the air baffle

Follow this procedure to install the air baffle.

### About this task

#### S033



**CAUTION:**

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

**S017**



**CAUTION:**


**Hazardous moving fan blades nearby. Keep fingers and other body parts away.**

**Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

**Procedure**

- Step 1. Make sure that all cables inside the server have been properly routed so that they will not interfere with the air baffle. See [Chapter 3 “Internal cable routing” on page 49](#).

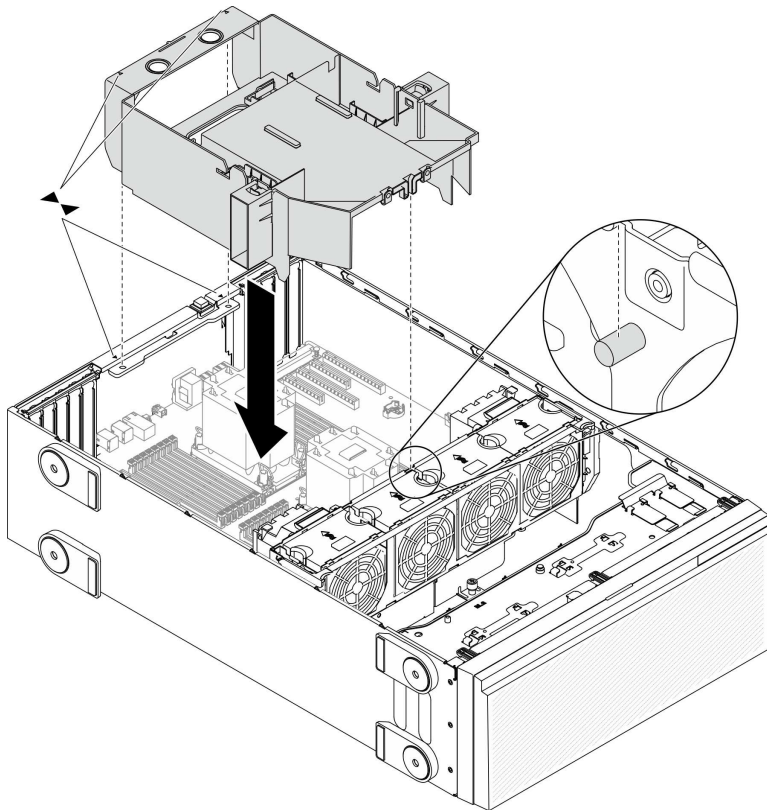

*Figure 48. Air baffle installation*

Step 2. Align the tabs on the air baffle with the corresponding slots on the rear of the chassis and the fan cage; then, lower the air baffle into the chassis and press the air baffle down until it is securely seated.

#### After you finish

1. Reinstall all the flash power modules. See “[Install a flash power module](#)” on page 105.
2. Reinstall the server cover. See “[Install the server cover](#)” on page 199.
3. Complete the parts replacement. See “[Complete the parts replacement](#)” on page 214.

#### Demo video

[Watch the procedure on YouTube](#)

---

## CMOS battery (CR2032) replacement

Use this information to remove and install the CMOS battery (CR2032).

### Remove the CMOS battery (CR2032)

Use this information to remove the CMOS battery (CR2032).

#### About this task

##### S002



#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

##### S004



#### CAUTION:

When replacing the lithium battery, use only Lenovo specified part number or an equivalent type battery recommended by the manufacturer. If your system has a module containing a lithium battery, replace it only with the same module type made by the same manufacturer. The battery contains lithium and can explode if not properly used, handled, or disposed of.

*Do not:*

- Throw or immerse into water
- Heat to more than 100°C (212°F)
- Repair or disassemble

Dispose of the battery as required by local ordinances or regulations.

## S005



### CAUTION:

The battery is a lithium ion battery. To avoid possible explosion, do not burn the battery. Exchange it only with the approved part. Recycle or discard the battery as instructed by local regulations.

### Attention:

- Read [“Installation Guidelines”](#) on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

### Procedure

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover”](#) on page 197.
- b. Remove all the flash power modules. See [“Remove a flash power module”](#) on page 103.
- c. Remove the air baffle. See [“Remove the air baffle”](#) on page 77.

Step 2. Locate the CMOS battery on the system board. See [“System board components”](#) on page 33.

Step 3. Remove the CMOS battery.

**Attention:** Do not apply excessive force on the CMOS battery. Failing to remove the CMOS battery properly might damage the socket on the system board. Any damage to the socket might require replacing the system board.

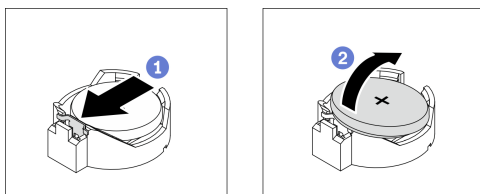


Figure 49. Removing the CMOS battery

- a. ① Press on the nub on the side of the CMOS battery.
- b. ② Pivot the battery away from the socket to remove it.

### After you finish

- Install a new CMOS battery. See [“Install the CMOS battery \(CR2032\)”](#) on page 83.

- If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install the CMOS battery (CR2032)

Use this information to install the CMOS battery (CR2032).

### About this task

#### S002



#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### S004



#### CAUTION:

When replacing the lithium battery, use only Lenovo specified part number or an equivalent type battery recommended by the manufacturer. If your system has a module containing a lithium battery, replace it only with the same module type made by the same manufacturer. The battery contains lithium and can explode if not properly used, handled, or disposed of.

*Do not:*

- Throw or immerse into water
- Heat to more than 100°C (212°F)
- Repair or disassemble

Dispose of the battery as required by local ordinances or regulations.

#### S005



#### CAUTION:

**The battery is a lithium ion battery. To avoid possible explosion, do not burn the battery. Exchange it only with the approved part. Recycle or discard the battery as instructed by local regulations.**

**Attention:**


- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Consider the following when replacing the CMOS battery in the server:

- When replacing the CMOS battery, you must replace it with another CMOS battery of the same type from the same manufacturer.
- After replacing the CMOS battery, make sure to reconfigure the server and reset system date and time.
- Lenovo has designed this product with your safety in mind. The lithium battery must be handled correctly to avoid possible danger. If you install the CMOS battery, you must adhere to the following instructions.
- If you replace the original lithium battery with a heavy-metal battery or a battery with heavy-metal components, be aware of the following environmental consideration. Batteries and accumulators that contain heavy metals must not be disposed of with normal domestic waste. They will be taken back free of charge by the manufacturer, distributor, or representative, to be recycled or disposed of in a proper manner.

**Procedure**

Step 1. Install the CMOS battery.

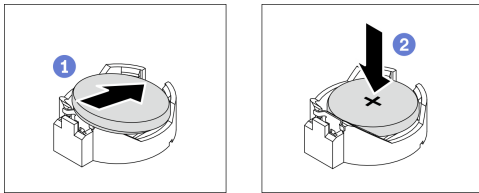

*Figure 50. Installing the CMOS battery*

- a. ① Place the CMOS battery on top of the socket with the positive (+) symbol facing up.
- b. ② Push the battery into the socket until it clicks in place.

**After you finish**

1. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
2. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).
3. Reinstall the server cover. See [“Install the server cover” on page 199](#).
4. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).
5. Reset date, time, and all the passwords.

**Demo video**

[Watch the procedure on YouTube](#)

---

## Drive replacement

Use the following information to remove and install drives.

The EMI integrity and cooling of the server are protected by having all drive bays covered or occupied. The number of the installed drives in your server varies depending on the server model. The vacant bays are occupied by dummy trays. When you install a drive, save the removed dummy tray from the drive bay in case you later remove the drive and need the dummy tray to cover the place.

**Attention:** An unoccupied drive bay without any other protection might impact the EMI integrity and cooling of the server, which might result in overheating or component damage. To maintain the EMI integrity and cooling of the server, install a new drive as soon as you remove the failing one or the dummy tray.

Before you begin, review the following drive installation rules:

- Follow the order of the drive bays. See [Chapter 2 “Server components” on page 15](#) to locate the drive bays in your server.
- For SSDs with different capacities, install the drive by following the order of the drive bays as well as the order from the lowest capacity to the highest capacity.

## Remove a simple-swap drive

Use this information to remove a simple-swap drive.

### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Before removing a simple-swap drive:

- Ensure that you have back up data on your drive, especially if it is part of a RAID array.
- Before you make changes to drives, RAID adapters, drive backplates, or drive cables, back up all important data that is stored on the drives.
- Before you remove any component of a RAID array, back up all RAID configuration information.

### Procedure

- Step 1. Use the key to unlock the server cover; then, open the security door.
- Step 2. Locate the simple-swap drive you want to remove.
- Step 3. Remove the simple-swap drive.

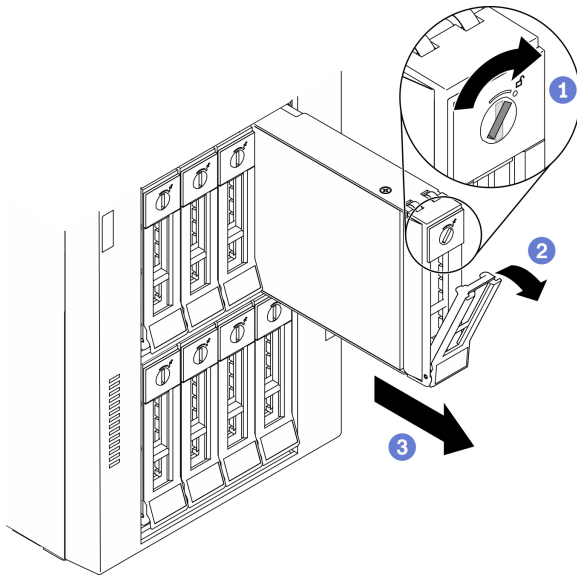


Figure 51. Opening the tray handle of a 3.5-inch simple-swap drive

- a. ① Use a screwdriver to turn the handle lock to the unlocked position.
- b. ② The tray handle opens automatically.
- c. ③ Pull the tray handle and carefully slide the simple-swap drive out of the drive bay.

#### After you finish

1. Install a new drive or drive filler into the vacant drive bay. See [“Install a simple-swap drive” on page 86](#).

**Note:** To ensure that there is adequate system cooling, do not operate the server for more than two minutes without either a drive or a drive filler installed in each bay.

2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

#### Demo video

[Watch the procedure on YouTube](#)

## Install a simple-swap drive

Use this information to install a simple-swap drive.

#### About this task

#### S002





**CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

**Attention:**

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

The following notes describe the type of drives that your server supports and other information that you must consider when you install a drive.

- For a complete list of supported optional devices for the server, see: <https://serverproven.lenovo.com/>
- The drive bays are numbered to indicate the installation order (starting from number “0”). Follow the installation order when you install a drive. See “[Front view](#)” on page 16.
- The drives in a single RAID array must be the same type, same size, and same capacity.

**Procedure**

- Step 1. If the drive bay has a drive filler installed, remove it. Keep the drive filler in a safe place for future use.
- Step 2. Install the simple-swap drive.

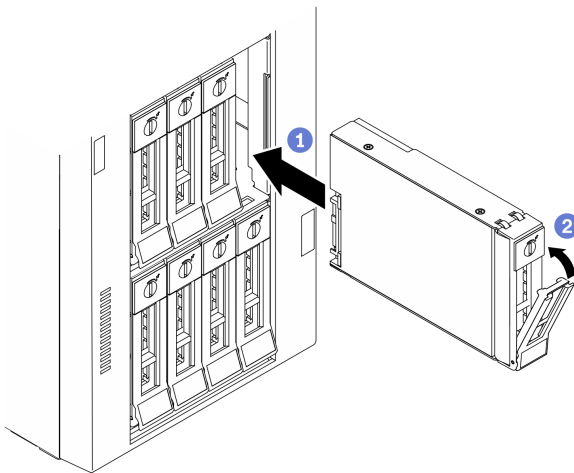


Figure 52. 3.5-inch simple-swap drive installation

- 1 Ensure that the tray handle is in the open position. Align the drive with the guide rails in the bay; then, gently push the drive into the bay until the drive stops.
- 2 Close the tray handle to lock the drive in place.

**After you finish**

1. Install other drives or drive fillers if necessary.

**Note:** All the drive bays must be occupied. This means that each bay must have a drive or drive filler installed.

2. Close the security door; then, use the key to lock the server cover.
3. Check the drive activity LED on the front panel to verify that the drive is operating correctly.

Simple-swap drive activity LED	Color	Description
Solid on	Green	The simple-swap drive is active.
Off	None	The simple-swap drive is not active.

4. Use the Lenovo XClarity Provisioning Manager to configure the RAID if necessary. For more information, see:

[http://sysmgt.lenovofiles.com/help/index.jsp?topic=%2FLXPM%2FRAID\\_setup.html](http://sysmgt.lenovofiles.com/help/index.jsp?topic=%2FLXPM%2FRAID_setup.html)

5. Complete the parts replacement. See “Complete the parts replacement” on page 214.

### Demo video

[Watch the procedure on YouTube](#)

## Remove a hot-swap drive

Use this information to remove a hot-swap drive.

### About this task

#### S033



#### **CAUTION:**

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

#### **Attention:**

- Read “Installation Guidelines” on page 59 to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Before removing a hot-swap drive:

- Ensure that you have back up data on your drive, especially if it is part of a RAID array.
- Before you make changes to drives, RAID adapters, drive backplanes, or drive cables, back up all important data that is stored on the drives.
- Before you remove any component of a RAID array, back up all RAID configuration information.

### Procedure

Step 1. Use the key to unlock the server cover; then, open the security door.

Step 2. Locate the drive you want to remove.

Step 3. Remove the hot-swap drive.

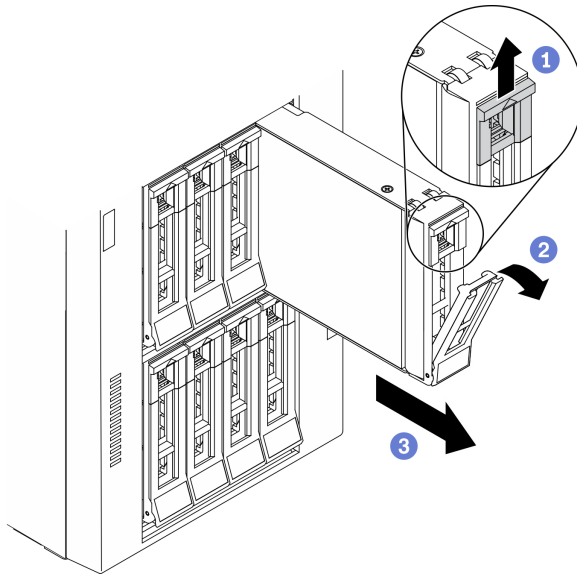


Figure 53. Opening the tray handle

- a. ① Slide the release latch to open the tray handle.
- b. ② The tray handle opens automatically.
- c. ③ Pull the tray handle and carefully slide the drive out of the drive bay.

#### After you finish

1. Install a new drive or install the drive filler to cover the drive bay. See [“Install a hot-swap drive”](#) on page 89.

**Attention:** To ensure that there is adequate system cooling, do not operate the server for more than two minutes without either a drive or a drive filler installed in each bay.

2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

#### Demo video

[Watch the procedure on YouTube](#)

## Install a hot-swap drive

Use this information to install a hot-swap drive.

#### About this task

##### S033



#### CAUTION:

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

**Attention:**

- Read “Installation Guidelines” on page 59 to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

The following notes describe the type of drives that your server supports and other information that you must consider when you install a drive.

- For a complete list of supported optional devices for the server, see: <https://serverproven.lenovo.com/>
- The drive bays are numbered to indicate the installation order (starting from number “0”). Follow the installation order when you install a drive. See “Front view” on page 16.
- The drives in a single RAID array must be the same type, same size, and same capacity.

**Procedure**

- Step 1. If the drive bay has a drive filler installed, remove it. Keep the drive filler in a safe place for future use.
- Step 2. Install the hot-swap drive.

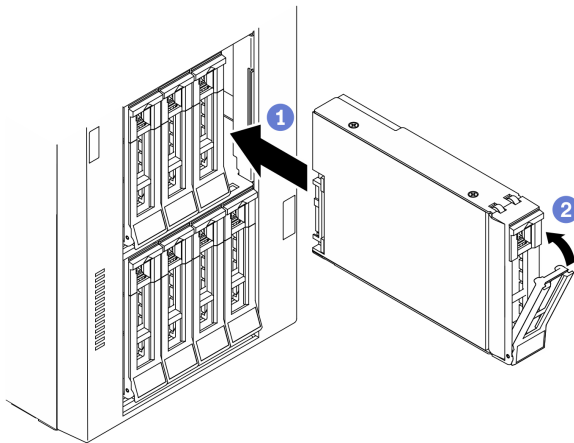


Figure 54. Hot-swap drive installation

- a. ① Ensure that the tray handle is in the open position. Slide the drive into the drive bay until it snaps into position.
- b. ② Close the tray handle to lock the drive in place.

**After you finish**

1. Install other drives or drive fillers if necessary.

**Note:** All the drive bays must be occupied. This means that each bay must have a drive or drive filler installed.

2. Close the security door; then, use the key to lock the server cover.
3. Check the drive LEDs to verify that the drive is operating correctly.

Drive LED	Status	Description
Drive activity LED (top)	Solid green	The drive is powered but not active.

Drive LED	Status	Description
	Blinking green	The drive is active.
Drive status LED (bottom)	Solid yellow	The drive has an error.
	Blinking yellow (blinking slowly, about one flash per second)	The drive is being rebuilt.
	Blinking yellow (blinking rapidly, about four flashes per second)	The RAID adapter is locating the drive.

- Use the Lenovo XClarity Provisioning Manager to configure the RAID if necessary. For more information, see:

[http://sysmgt.lenovofiles.com/help/index.jsp?topic=%2FLXPM%2FRAID\\_setup.html](http://sysmgt.lenovofiles.com/help/index.jsp?topic=%2FLXPM%2FRAID_setup.html)

- Complete the parts replacement. See “Complete the parts replacement” on page 214.

### Demo video

[Watch the procedure on YouTube](#)

---

## EIA brackets replacement

Use this information to remove and install the EIA brackets of the server in rack form factor.


**Note:** This section applies only to server models that have the EIA brackets installed.

### Remove the EIA brackets

Use this information to remove the EIA brackets.

#### About this task

#### S002

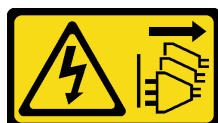

#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read “Installation Guidelines” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.

#### **Procedure**

- Step 1. Lay the server on its side.
- Step 2. Use a screwdriver to remove the three screws that secure the right EIA bracket; then, remove the right EIA bracket.

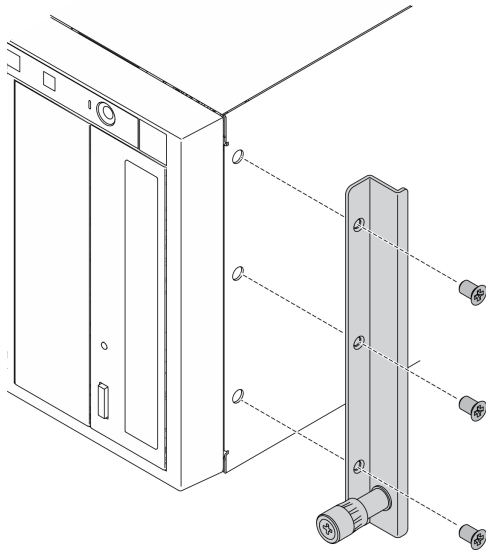


Figure 55. Right EIA bracket removal

- Step 3. Use a screwdriver to remove the three screws that secure the left EIA bracket; then, remove the left EIA bracket.

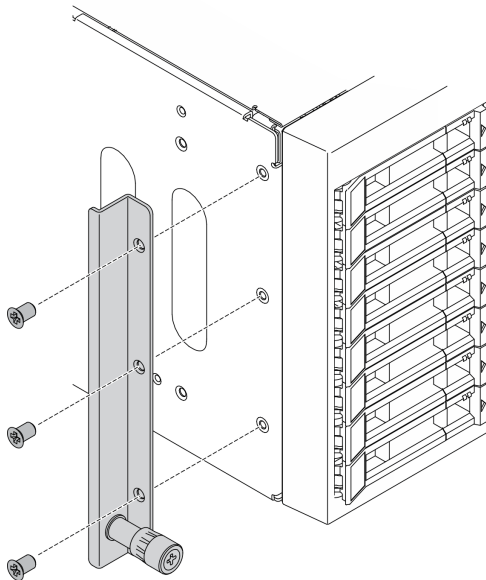


Figure 56. Left EIA bracket removal

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install the EIA brackets

Use this information to install the EIA brackets.

### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read “[Installation Guidelines](#)” on [page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

#### **Procedure**

- Step 1. Align the holes in the right EIA bracket with the corresponding holes on the top of the chassis; then, use a screwdriver to install the three screws to secure the right EIA bracket

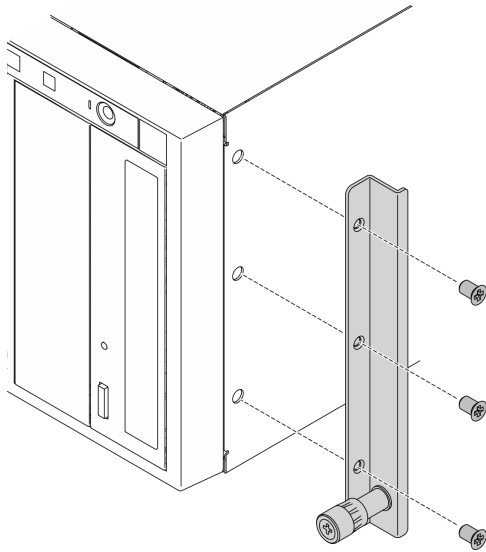


Figure 57. Right EIA bracket installation

- Step 2. Align the holes in the left EIA bracket with the corresponding holes on the bottom of the chassis; then, use a screwdriver to install the three screws to secure the left EIA bracket.

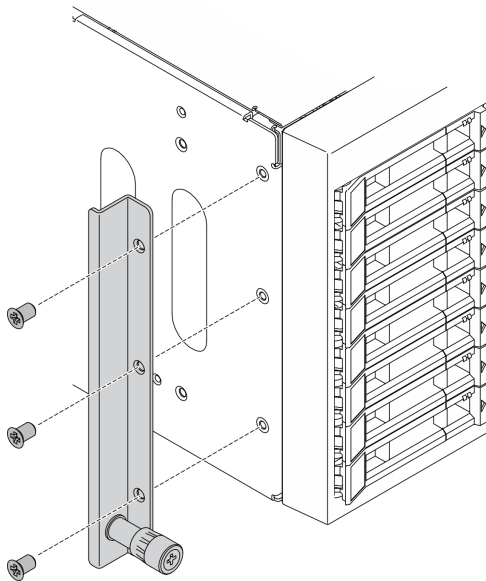


Figure 58. Left EIA bracket installation

### After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 214.](#)

### Demo video



[Watch the procedure on YouTube](#)

---

## Expansion drive cage replacement

Use this information to remove and install the expansion drive cage.

**Note:** This section applies only to server models that have the expansion drive cage installed.

### Remove the expansion drive cage

Use this information to remove the expansion drive cage.

#### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.

#### **Procedure**

- Step 1. Make preparations for this task.
  - a. Remove the server cover. See [“Remove the server cover” on page 197](#).
  - b. Remove the security door. See [“Remove the security door” on page 195](#).
  - c. Remove the front bezel. See [“Remove the front bezel” on page 109](#).
  - d. Remove all installed hot-swap drives and drive bay fillers (if any) from the drive bays. See [“Remove a hot-swap drive” on page 88](#).
- Step 2. Disconnect all the cables from the backplane.
- Step 3. Remove the expansion drive cage.

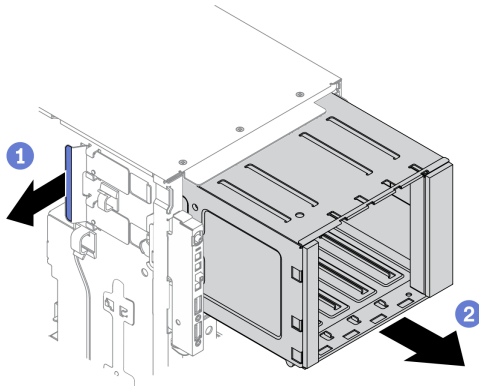


Figure 59. Expansion drive cage removal

- a. ① Lift and hold the blue retention tab.
- b. ② Carefully pull the expansion drive cage at the same time to slide it out of the opening in the chassis.

#### After you finish

- Install an expansion drive cage or an optical drive cage. See [“Install the expansion drive cage” on page 96](#) or [“Install the optical drive cage” on page 148](#).
- If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

#### Demo video

[Watch the procedure on YouTube](#)

## Install the expansion drive cage

Use this information to install the expansion drive cage.

#### About this task

#### S002



#### **CAUTION:**

**The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.**

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

### Procedure

Step 1. Install the expansion drive cage.

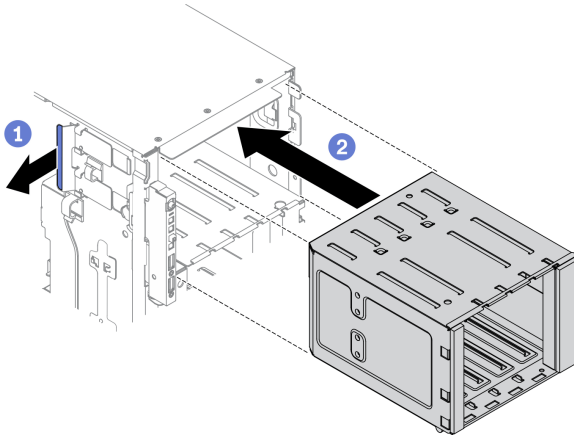


Figure 60. Expansion drive cage installation

- 1 Lift and hold the blue retention tab.
- 2 Carefully push the expansion drive cage at the same time to slide it into the bay until it snaps into position.

### After you finish

1. Reconnect the cables to the backplane. See “3.5-inch hot-swap drive backplane cable routing” in the *ThinkSystem ST650 V2 Backplane/Backplate Cable Routing Guide*.
2. Reinstall all the hot-swap drives and drive bay fillers (if any) into the drive bays. See “[Install a hot-swap drive](#)” on page 89.
3. Reinstall the front bezel. See “[Install the front bezel](#)” on page 111.
4. Reinstall the security door. See “[Install the security door](#)” on page 196.
5. Reinstall the server cover. See “[Install the server cover](#)” on page 199.
6. Complete the parts replacement. See “[Complete the parts replacement](#)” on page 214.

### Demo video

[Watch the procedure on YouTube](#)

---

## Fan and fan cage replacement

Use this procedure to remove or install fan and fan cage assembly.

### Remove a hot-swap fan

Use this procedure to remove a hot-swap fan.

### About this task

## S017



### CAUTION:

Hazardous moving fan blades nearby. Keep fingers and other body parts away.

## S033



### CAUTION:

Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.

### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

### Procedure

Step 1. Remove the server cover. See [“Remove the server cover” on page 197](#).

Step 2. Remove the hot-swap fan.

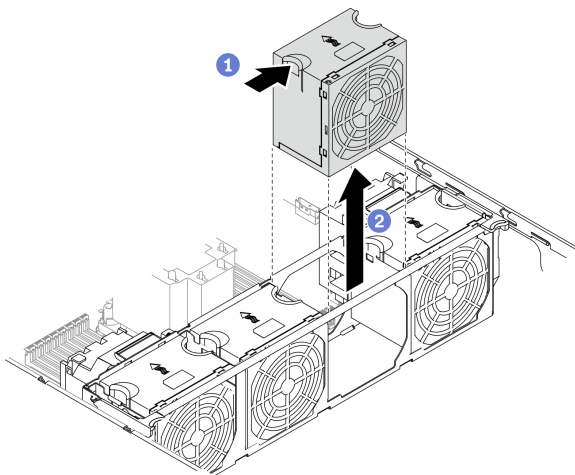


Figure 61. Hot-swap fan removal

- a. **1** Pinch on the top of the fan, and press on the latch to release the fan from the connector.

- b. 2 Lift the fan out from the fan cage.

### After you finish

1. Install a new fan or install a fan filler to cover the place. See “[Install a hot-swap fan](#)” on page 99.
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install a hot-swap fan

Use this procedure to install a hot-swap fan.

### About this task

#### S017



#### CAUTION:

**Hazardous moving fan blades nearby. Keep fingers and other body parts away.**

#### S033



#### CAUTION:

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

#### Attention:

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

### Procedure

Step 1. Locate the required fan slot in the fan cage.

**Note:** Ensure that you observe the installation rules and sequence in “Technical rules for system fans” in the *ThinkSystem ST650 V2 Setup Guide*.

Step 2. Align the fan over the fan slot in the fan cage assembly.

Step 3. Insert the fan into the fan cage assembly until it clicks into place.

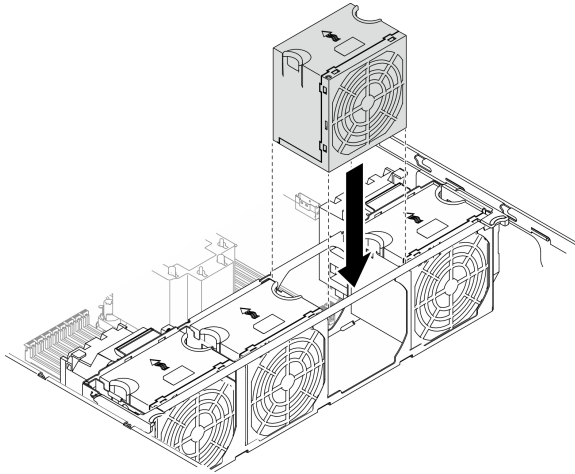


Figure 62. Hot-swap fan installation

### After you finish

1. Reinstall the server cover. See [“Install the server cover” on page 199](#).
2. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

### Demo video

[Watch the procedure on YouTube](#)

## Remove the fan cage assembly

Use this procedure to remove the fan cage assembly.

### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.

- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

## Procedure

Step 1. Make preparations for this task.

- Remove the server cover. See “Remove the server cover” on page 197.
- Remove all the flash power modules. See “Remove a flash power module” on page 103.
- Remove the air baffle. See “Remove the air baffle” on page 77.
- Remove all the full-length GPU adapters. See “Remove a full-length GPU adapter” on page 115.
- Remove all the fans. See “Remove a hot-swap fan” on page 97.

Step 2. Remove the fan cage assembly.

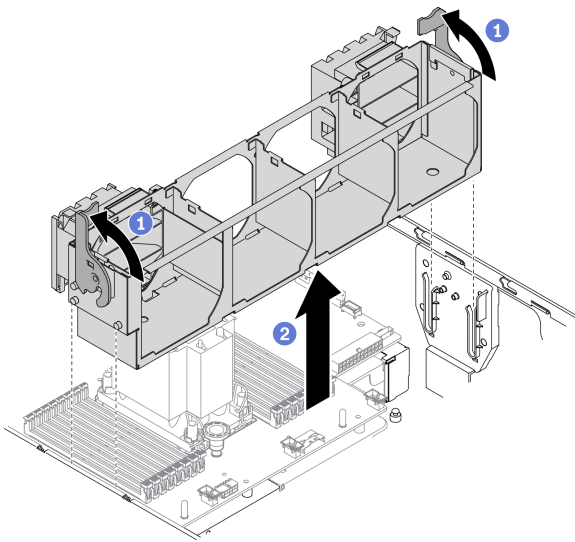


Figure 63. Fan cage assembly removal

- 1 Lift and rotate the fan cage release latches to disengage the fan cage assembly from the server.
- 2 Lift the fan cage assembly from the server.

## After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

## Demo video

[Watch the procedure on YouTube](#)

## Install the fan cage assembly

Use this procedure to install the fan cage assembly.

## About this task

## S002



### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

### Procedure

Step 1. Install the fan cage assembly.

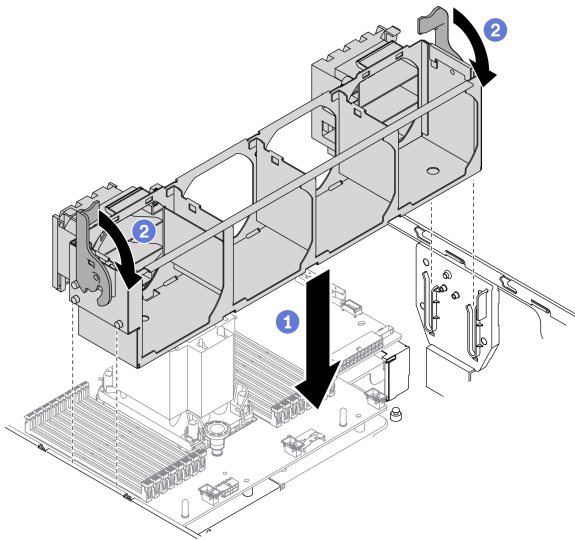


Figure 64. Fan cage assembly installation

- a. ① Align the fan cage assembly to the slots on both sides of the server, and lower it into the server.
- b. ② Rotate the fan cage release latches down until they stop.

### After you finish

1. Reinstall all the fans. See [“Install a hot-swap fan” on page 99](#).
2. Reinstall all the full-length GPU adapters. See [“Install a full-length GPU adapter” on page 117](#).
3. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
4. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).



5. Reinstall the server cover. See [“Install the server cover” on page 199](#).
6. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

### Demo video

[Watch the procedure on YouTube](#)

---

## Flash power module replacement

Use this information to remove and install the flash power module.

The flash power module protects the cache memory on the installed RAID adapter. You can purchase a flash power module from Lenovo.


For a list of supported options, see: <https://serverproven.lenovo.com/>

## Remove a flash power module

Use this information to remove a flash power module.

### About this task

#### S002

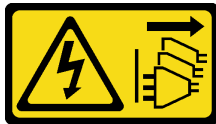

#### **CAUTION:**

**The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.**

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

Locate the flash power module slot on the air baffle.

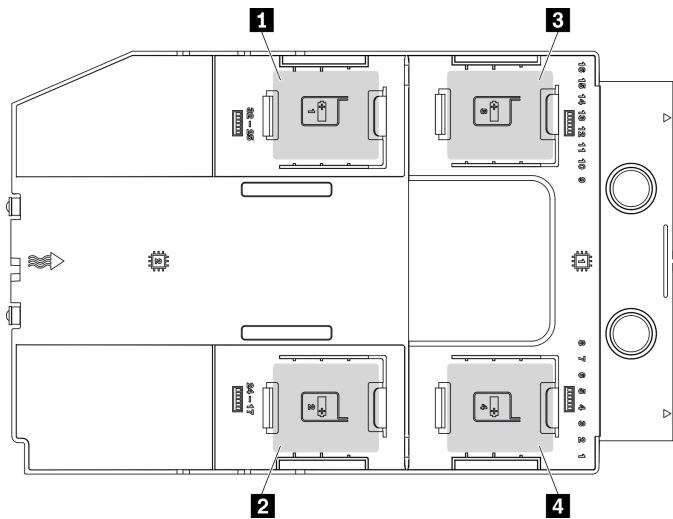


Figure 65. Flash power module slot location

Table 16. Flash power module slot location on air baffle

<b>1</b> Flash power module slot 1	<b>3</b> Flash power module slot 3
<b>2</b> Flash power module slot 2	<b>4</b> Flash power module slot 4

### Procedure

- Step 1. Remove the server cover. See [“Remove the server cover”](#) on page 197.
- Step 2. Disconnect the cable of the flash power module from the RAID adapter.
- Step 3. Remove the flash power module.

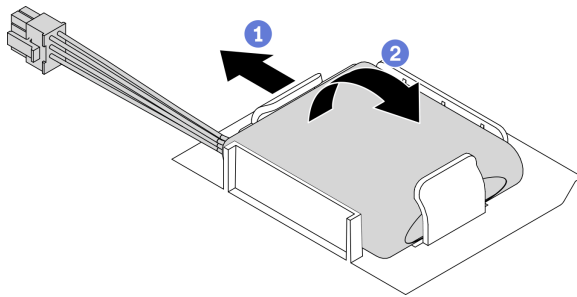


Figure 66. Flash power module removal

- a. **1** Gently pivot the retaining clip as shown.
- b. **2** Lift the flash power module up and remove it from the holder.

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video


[Watch the procedure on YouTube](#)

## Install a flash power module

Use this information to install a flash power module.

### About this task

#### S002

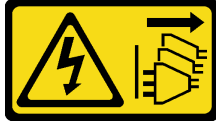

#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### Attention:

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Locate the flash power module slot on the air baffle.

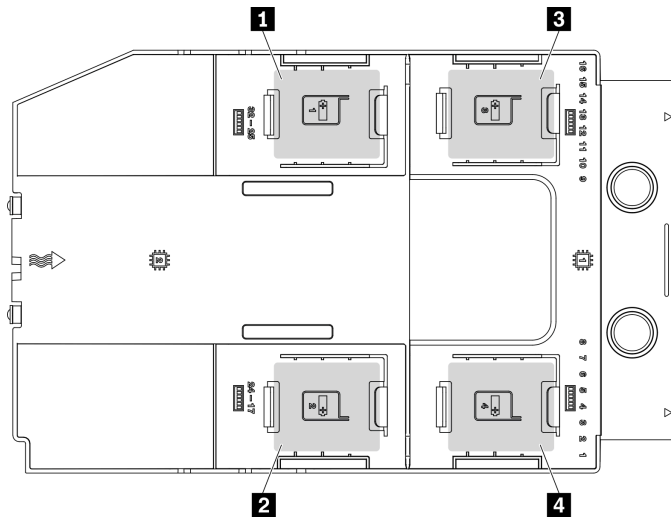


Figure 67. Flash power module slot location

Table 17. Flash power module slot location on air baffle

<b>1</b> Flash power module slot 1	<b>3</b> Flash power module slot 3
<b>2</b> Flash power module slot 2	<b>4</b> Flash power module slot 4

### Procedure

Step 1. Install the flash power module.

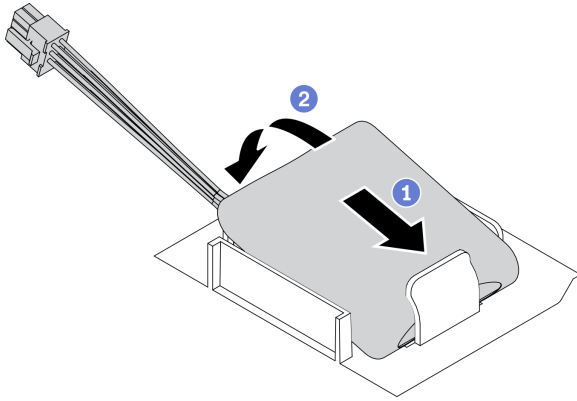


Figure 68. Flash power module installation

- a. ① Note the orientation of the flash power module; then, gently insert the flash power module into the retaining clip at one side as shown.
- b. ② Press the flash power module down on the other side until it snaps into place.

Step 2. Route the flash power module cable and connect it to the RAID adapter.

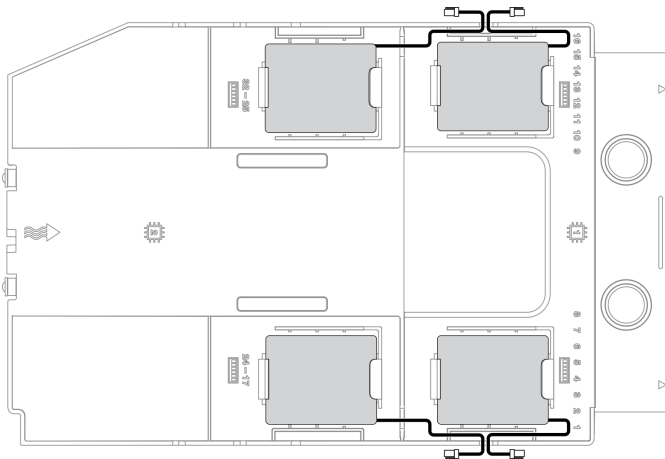


Figure 69. Flash power module cable routing

#### After you finish

1. Reinstall the server cover. See [“Install the server cover” on page 199](#).
2. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

#### Demo video

[Watch the procedure on YouTube](#)

---

## Foot stands replacement

Use this information to remove and install the foot stands.

**Note:** This section applies only to server models that have foot stands installed.

## Remove the foot stands

Use this information to remove the foot stands.

### About this task

#### S033



#### **CAUTION:**


**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

#### **Procedure**

Step 1. For each foot stand, rotate the foot stand inwards; then, lay the server on its side.

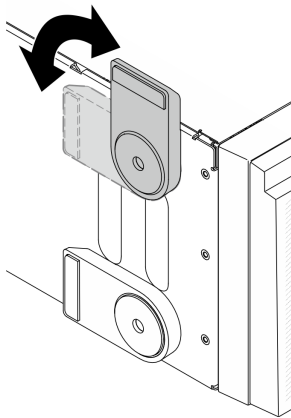

*Figure 70. Foot stand adjustment*

Step 2. For each foot stand, use a screwdriver to remove the screw that secures the foot stand; then, remove the foot stand from the chassis.

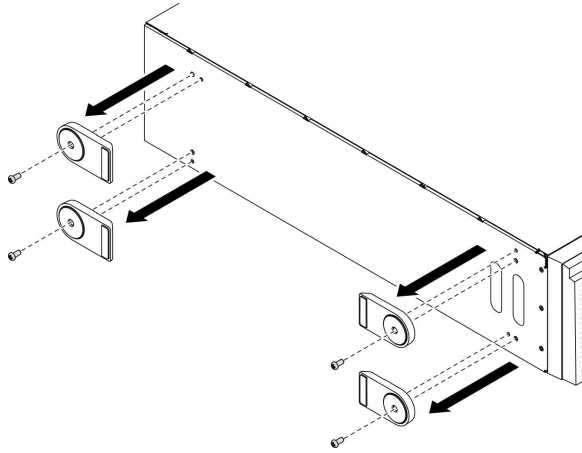


Figure 71. Foot stand removal

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install the foot stands

Use this information to install the foot stands.

### About this task

#### S033



### CAUTION:

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

### Attention:

- Read “[Installation Guidelines](#)” on [page 59](#) to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

### Procedure

Step 1. For each foot stand, carefully align the pin and screw hole on the foot stand with the corresponding hole on the chassis; then, use a screwdriver to install a screw to secure the foot stand.

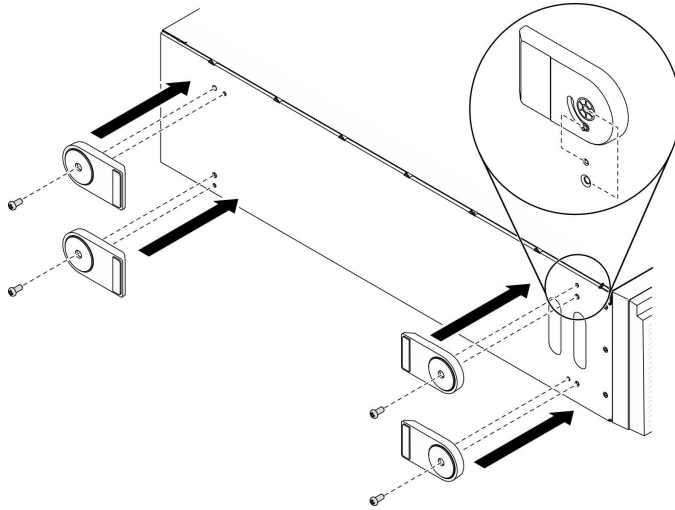


Figure 72. Foot stand installation

Step 2. For each foot stand, rotate the foot stand outwards.

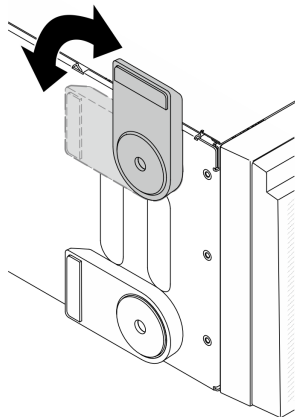


Figure 73. Foot stand adjustment

**Important:** To help the server stand steadily, ensure that the foot stands are rotated outward.

### After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

### Demo video

[Watch the procedure on YouTube](#)

---

## Front bezel replacement

Use this information to remove and install the front bezel.

### Remove the front bezel

Use this information to remove the front bezel.

## About this task

### S033



#### CAUTION:

Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

#### Procedure

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover” on page 197](#).
- b. Remove the security door. See [“Remove the security door” on page 195](#).

Step 2. Remove the front bezel.

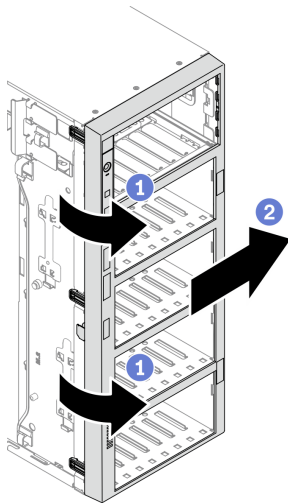


Figure 74. Front bezel removal

- a. ① Lift the three plastic tabs to release the left side of the bezel from the chassis.
- b. ② Pivot the bezel as shown to remove it from the chassis.

#### After you finish



If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install the front bezel

Use this information to install the front bezel.

### About this task

#### S033



#### CAUTION:

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

#### Attention:

- Read “[Installation Guidelines](#)” on [page 59](#) to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

### Procedure

Step 1. Install the front bezel.

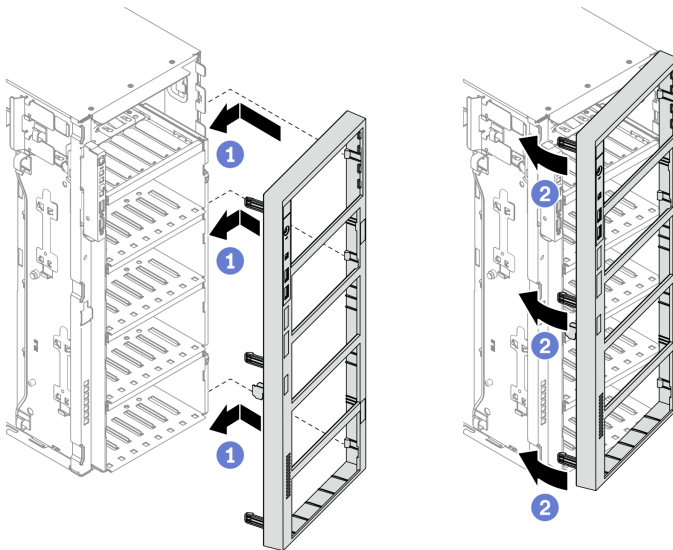


Figure 75. Front bezel installation

- a. ① Align the three plastic tabs on the right side of the front bezel with the corresponding holes in the chassis.
- b. ② Pivot the front bezel inward until it snaps into position on the left side.

### After you finish

1. Reinstall the security door. See [“Install the security door” on page 196](#).
2. Reinstall the server cover. See [“Install the server cover” on page 199](#).
3. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

### Demo video

[Watch the procedure on YouTube](#)

---

## Front panel board assembly replacement

Use this information to remove and install the front panel board assembly.

### Remove the front panel board assembly

Use this information to remove the front panel board assembly.

#### About this task

#### S002



#### CAUTION:

**The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.**

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

#### Procedure

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover” on page 197](#).
- b. Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).

- c. Remove the air baffle. See [“Remove the air baffle” on page 77](#).
- d. Remove all the full-length GPU adapters. See [“Remove a full-length GPU adapter” on page 115](#).
- e. Remove all the fans. See [“Remove a hot-swap fan” on page 97](#).
- f. Remove the fan cage. See [“Remove the fan cage assembly” on page 100](#).
- g. Remove the security door. See [“Remove the security door” on page 195](#).
- h. Remove the front bezel. See [“Remove the front bezel” on page 109](#).

Step 2. Locate the front panel board assembly and disconnect the cables from the system board; then, remove the cable from the cable clips. See [“Front panel cable routing” on page 50](#).

Step 3. Remove the front panel board assembly .

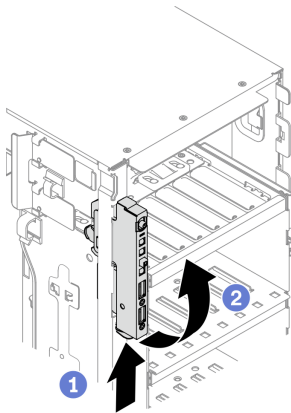


Figure 76. Front panel board assembly removal

- a. ① Press the release tab in the direction as shown.
- b. ② Pivot the front panel board assembly outwards; then, pull the cables out to completely remove the front panel board assembly from the chassis.

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install the front panel board assembly

Use this information to install the front panel board assembly.

### About this task

**S002**



**CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

**Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

**Procedure**

Step 1. Route the cables through the corresponding hole in the chassis.

Step 2. Install the front panel board assembly.

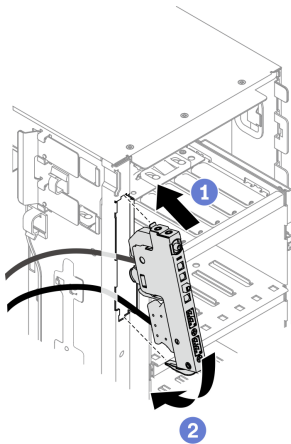


Figure 77. Front panel board assembly installation

- a. ① Align the tab on the top side of the front panel board assembly with the side of the corresponding hole in the chassis.
- b. ② Pivot the front panel board assembly in until it snaps into position.

Step 3. Carefully route the cable from the secured front panel along the cable clips and connect the cables to the corresponding connectors on the system board. See [“Front panel cable routing” on page 50](#).

**After you finish**

1. Reinstall the front bezel. See [“Install the front bezel” on page 111](#).
2. Reinstall the security door. See [“Install the security door” on page 196](#).
3. Reinstall the fan cage. See [“Install the fan cage assembly” on page 101](#).
4. Reinstall all the fans. See [“Install a hot-swap fan” on page 99](#).
5. Reinstall all the full-length GPU adapters. See [“Install a full-length GPU adapter” on page 117](#).
6. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
7. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).
8. Reinstall the server cover. See [“Install the server cover” on page 199](#).

9. Complete the parts replacement. See “[Complete the parts replacement](#)” on page 214.

### Demo video

[Watch the procedure on YouTube](#)

---

## Full-length GPU adapter replacement

Use this information to remove and install a full-length GPU adapter.

Your server comes with nine PCIe slots. Depending on your needs, you can install a full-length GPU adapter or remove the full-length GPU adapter if necessary.

### Notes:

- For a list of the supported GPU adapters, see: <https://serverproven.lenovo.com/>
- For instructions on how to remove and install a half-length GPU adapter or PCIe adapter, see “[PCIe adapter replacement](#)” on page 166

## Remove a full-length GPU adapter

Use this information to remove a full-length GPU adapter.

### About this task

#### S002



### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

### Attention:

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

### Notes:

- Depending on the specific type, your full-length GPU adapter might look different from the illustration in this topic.
- Use any documentation that comes with the full-length GPU adapter and follow those instructions in addition to the instructions in this topic.

## Procedure

- Step 1. Make preparations for this task.
- Remove the server cover. See [“Remove the server cover” on page 197](#).
  - Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).
  - Remove the air baffle. See [“Remove the air baffle” on page 77](#).
- Step 2. Locate the full-length GPU adapter you want to remove.
- Step 3. Remove the full-length GPU adapter.

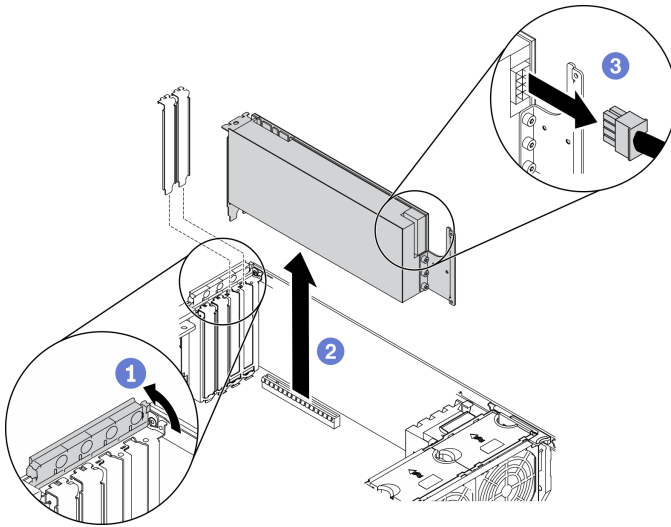


Figure 78. Full-length GPU adapter removal

- ① Open the PCIe adapter retainer.
- ② Grasp the full-length GPU adapter by its edges and carefully pull it out of the PCIe slot.
- ③ Disconnect the power cable from the full-length GPU adapter.

## After you finish

- Install another full-length GPU adapter if necessary. See [“Install a full-length GPU adapter” on page 117](#). Otherwise, install a bracket to cover the vacancy and close the PCIe adapter retainer.
- If you need to remove the full-length GPU adapter power cable out of the chassis.
  - Remove all the fans. See [“Remove a hot-swap fan” on page 97](#).
  - Remove the fan cage. See [“Remove the fan cage assembly” on page 100](#).
  - Remove the power cable.
  - Reinstall the fan cage. See [“Install the fan cage assembly” on page 101](#).
  - Reinstall all the fans. See [“Install a hot-swap fan” on page 99](#).
- If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

## Demo video

[Watch the procedure on YouTube](#)

## Install a full-length GPU adapter

Use this information to install a full-length GPU adapter.

### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

#### **Notes:**

- Depending on the specific type, your full-length GPU adapter might look different from the illustration in this topic.
- Use any documentation that comes with the full-length GPU adapter and follow those instructions in addition to the instructions in this topic.

#### **Procedure**

Step 1. Locate the applicable PCIe slot. See [“Specifications” on page 1](#) to identify the different types of PCIe slots in your server.

**Note:** Ensure that you observe the installation rules and sequence in “Technical rules for PCIe adapters” in the *ThinkSystem ST650 V2 Setup Guide*.

Step 2. Make sure you have installed a PCIe adapter holder corresponding to the PCIe slot for your full-length GPU adapter. See [“Install a PCIe adapter holder” on page 165](#).

Step 3. If you have installed one double-wide GPU adapter in PCIe slot 1, or three double-wide GPU adapters in PCIe slot 1, 3, and 7; make sure you have installed a GPU filler for proper cooling and airflow. See [“Install a GPU filler” on page 120](#).

Step 4. If necessary, route the power cable for the full-length GPU adapter.

- a. Remove all the fans. See [“Remove a hot-swap fan” on page 97](#).
- b. Remove the fan cage. See [“Remove the fan cage assembly” on page 100](#).
- c. Connect the power cable to the power distribution board; then, route the power cable and secure it under the clip. See [“GPU cable routing” on page 52](#).
- d. Reinstall the fan cage. See [“Install the fan cage assembly” on page 101](#).
- e. Reinstall all the fans. See [“Install a hot-swap fan” on page 99](#).

- Step 5. If a bracket is installed in the PCIe slot, remove it. Store the bracket for the PCIe slot in case that you later remove the PCIe adapter and need the bracket to cover the place.
- Step 6. Install the full-length GPU adapter.

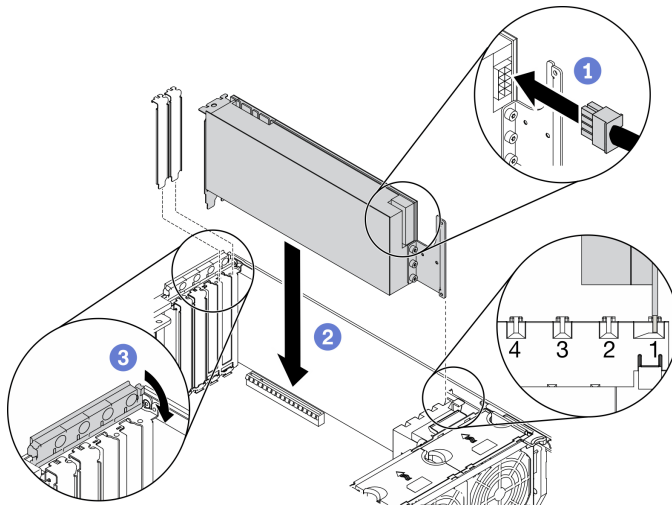


Figure 79. Full-length GPU adapter installation

**Note:** Make sure the PCIe adapter retainer is in the opened position.

- a. ① Connect the power cable to the full-length GPU adapter.
- b. ② Align the full-length GPU adapter to the PCIe adapter holder and the PCIe slot; then, gently press both ends of the full-length GPU adapter until it is securely seated in the PCIe slot.
- c. ③ Close the PCIe adapter retainer.

#### After you finish

1. If you have installed one double-wide GPU adapter in PCIe slot 1, or three double-wide GPU adapters in PCIe slot 1, 3, and 7; install a GPU filler. See [“Install a GPU filler” on page 120](#).
2. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
3. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).
4. Reinstall the server cover. See [“Install the server cover” on page 199](#).
5. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

#### Demo video

[Watch the procedure on YouTube](#)

---

## GPU filler replacement

Use this information to remove and install a GPU filler.

### Remove a GPU filler

Use this information to remove a GPU filler.

#### About this task

#### S033





**CAUTION:**

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

**S017**



**CAUTION:**

**Hazardous moving fan blades nearby. Keep fingers and other body parts away.**

**Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

**Note:** If you have installed one double-wide GPU adapter in PCIe slot 1, or three double-wide GPU adapters in PCIe slot 1, 3, and 7; install a GPU filler for proper cooling and airflow.

**Procedure**

- Step 1. Remove the server cover. See [“Remove the server cover” on page 197](#).
- Step 2. Press and hold the latch to release the GPU filler from the air baffle; then, remove the GPU filler in the direction as shown.

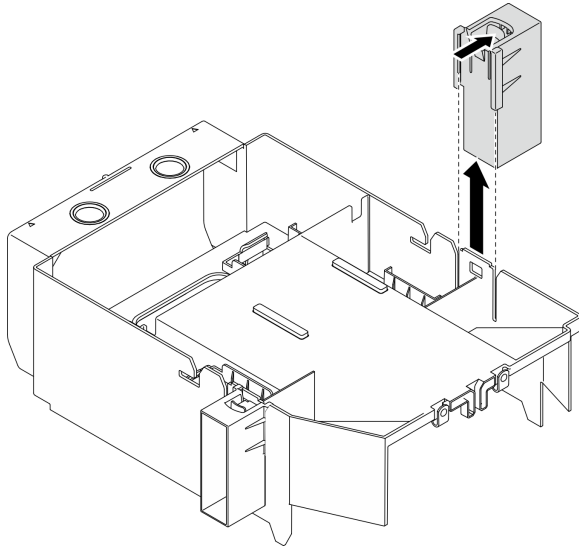


Figure 80. GPU filler removal

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install a GPU filler

Use this information to install a GPU filler.

### About this task

#### S033



#### **CAUTION:**

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

#### S017



#### **CAUTION:**

**Hazardous moving fan blades nearby. Keep fingers and other body parts away.**

**Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

**Notes:**

- If you have installed one double-wide GPU adapter in PCIe slot 1, or three double-wide GPU adapters in PCIe slot 1, 3, and 7; install a GPU filler for proper cooling and airflow.
- If you have installed a full-length GPU adapter, install a PCIe adapter holder corresponding to the PCIe slot for your full-length GPU adapter.

**Procedure**

- Step 1. Align the GPU filler with the corresponding slots on the air baffle.
- Step 2. Insert the GPU filler onto the air baffle until it snaps into position

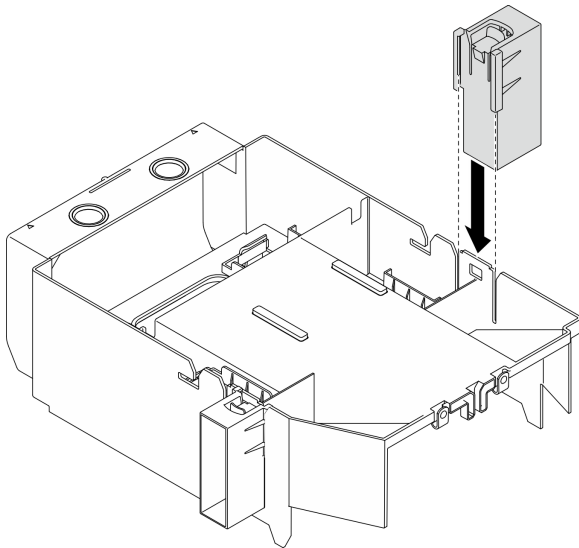


Figure 81. GPU filler installation

**After you finish**

1. Reinstall the server cover. See [“Install the server cover” on page 199](#).
2. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

**Demo video**

[Watch the procedure on YouTube](#)

---

**Heat sink Torx T30 nut replacement**

Use this information to remove and install a heat sink Torx T30 nut.

**Remove a heat sink Torx T30 nut**

This task has instructions for removing a PEEK (Polyether ether ketone) Torx T30 nut on the heat sink.

## About this task

### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.
- Do not touch the processor contacts. Contaminants on the processor contacts, such as oil from your skin, can cause connection failures.

**Note:** The heat sink, processor, and processor carrier for your system might be different than those shown in the illustrations.

#### **Procedure**

Step 1. Make preparations for this task.

- a. Remove the hot-swap redundant power supply. See [“Remove a hot-swap power supply” on page 177](#).
- b. Remove the server cover. See [“Remove the server cover” on page 197](#).
- c. Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).
- d. Remove the air baffle. See [“Remove the air baffle” on page 77](#).
- e. Remove the PHM. See [“Remove a processor and heat sink” on page 183](#).

Step 2. Remove the Torx T30 nut.

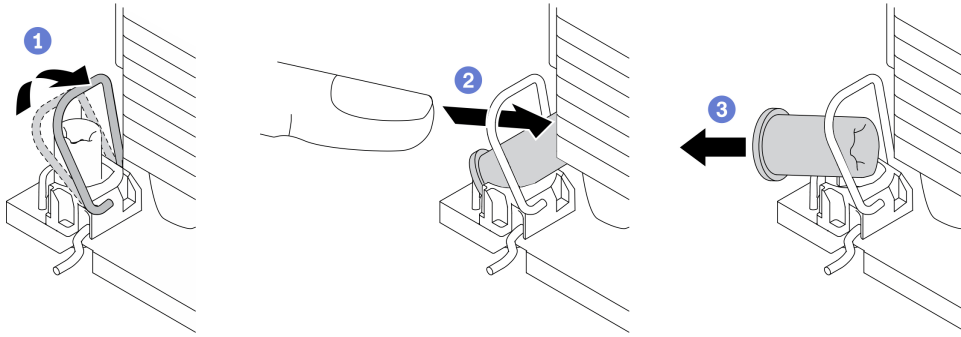


Figure 82. Removing a Torx T30 nut from the heat sink

**Note:** Do not touch the gold contacts on the bottom of the processor.

- a. ① Rotate the anti-tilt wire bail inwards.
- b. ② Push the upper edge of the Torx T30 nut towards the center of the heat sink until it disengages.
- c. ③ Remove the Torx T30 nut.

**Attention:** Visually inspect the removed Torx T30 nut, if the nut is cracked or damaged, make sure no debris or broken pieces are left inside your server.

#### After you finish

1. Install a new Torx T30 nut. See [“Install a heat sink Torx T30 nut” on page 123](#).
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

#### Demo video

[Watch the procedure on YouTube](#)

## Install a heat sink Torx T30 nut

This task has instructions for installing a PEEK (Polyether ether ketone) Torx T30 nut on the heat sink.

#### About this task

##### S002



#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- Do not touch the processor contacts. Contaminants on the processor contacts, such as oil from your skin, can cause connection failures.

**Note:** The heat sink, processor, and processor carrier for your system might be different than those shown in the illustrations.

### Procedure

Step 1. Install the Torx T30 nut.

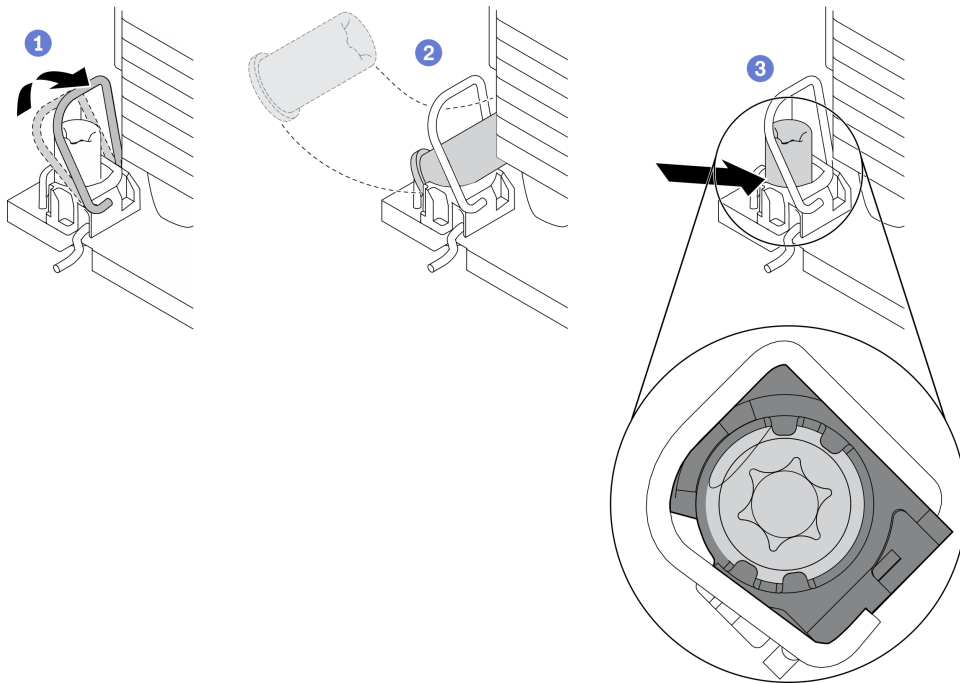


Figure 83. Installing a Torx T30 nut into the heat sink

**Note:** Do not touch the gold contacts on the bottom of the processor.

- 1 Rotate the anti-tilt wire bail inwards.
- 2 Orient the Torx T30 nut under the anti-tilt wire bail; then, align the Torx T30 nut with the socket at an angle as shown.
- 3 Push the lower edge of the Torx T30 nut into the socket until it clicks into place. Make sure the Torx T30 nut is secured under the four clips in the socket.

### After you finish

1. Reinstall the PHM. See [“Install a processor and heat sink” on page 189](#).
2. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
3. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).
4. Reinstall the server cover. See [“Install the server cover” on page 199](#).
5. Reinstall the hot-swap redundant power supply. See [“Install the hot-swap power supply” on page 180](#).
6. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

## Demo video

[Watch the procedure on YouTube](#)

---

## Internal CFF adapter replacement


Use this information to remove and install the internal CFF RAID adapter, internal CFF HBA adapter, or internal CFF RAID expander adapter.

### Remove the internal CFF adapter

Use this information to remove the internal CFF RAID adapter, internal CFF HBA adapter, or internal CFF RAID expander adapter.

#### About this task

##### S002

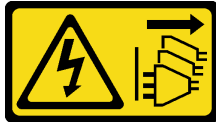

#### **CAUTION:**

**The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.**

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

Location of the internal CFF adapter.

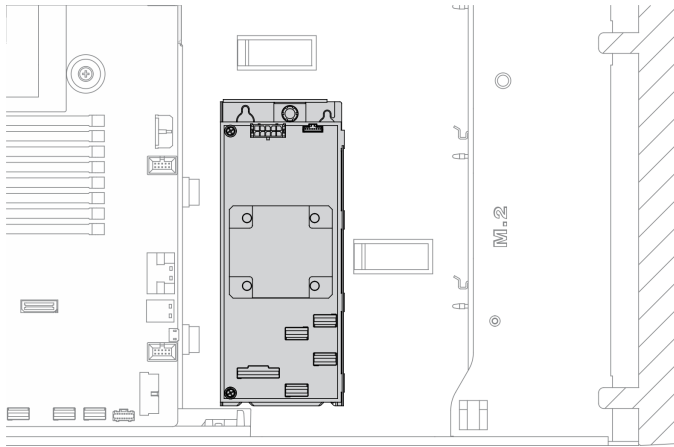


Figure 84. Internal CFF adapter location

### Procedure

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover” on page 197.](#)
- b. Remove all the flash power modules. See [“Remove a flash power module” on page 103.](#)
- c. Remove the air baffle. See [“Remove the air baffle” on page 77.](#)
- d. Remove all the full-length GPU adapters. See [“Remove a full-length GPU adapter” on page 115.](#)
- e. Remove all the fans. See [“Remove a hot-swap fan” on page 97.](#)
- f. Remove the fan cage. See [“Remove the fan cage assembly” on page 100.](#)

Step 2. Disconnect all cables from the CFF adapter.

Step 3. Lift the release pin.

Step 4. Slightly slide the CFF adapter as shown and carefully lift it out of the chassis.

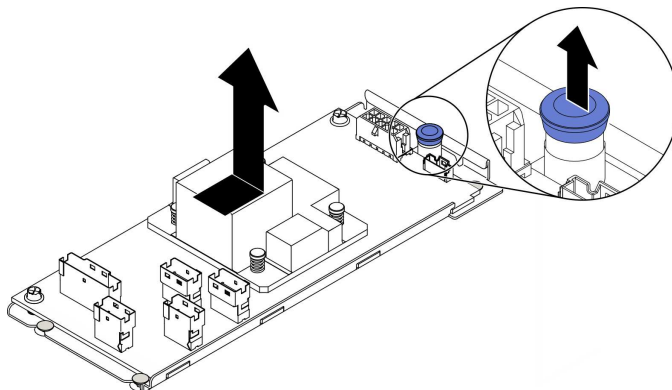


Figure 85. Internal CFF adapter removal

Step 5. Loosen the two screws on the CFF adapter to separate it from its tray if necessary.



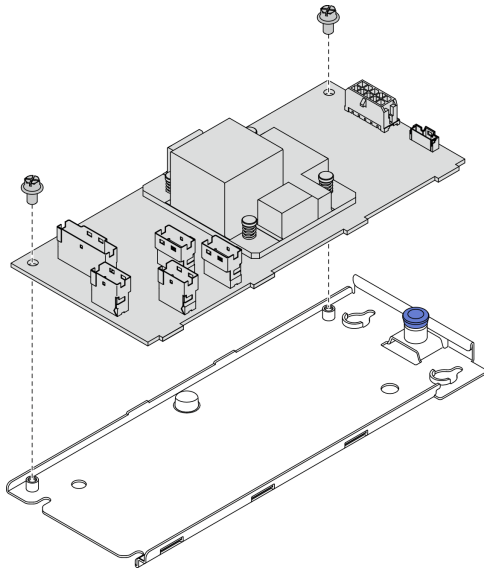


Figure 86. Internal CFF adapter tray removal

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install the internal CFF adapter

Use this information to install the internal CFF RAID adapter, internal CFF HBA adapter, or internal CFF RAID expander adapter.

### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Location of the internal CFF adapter.

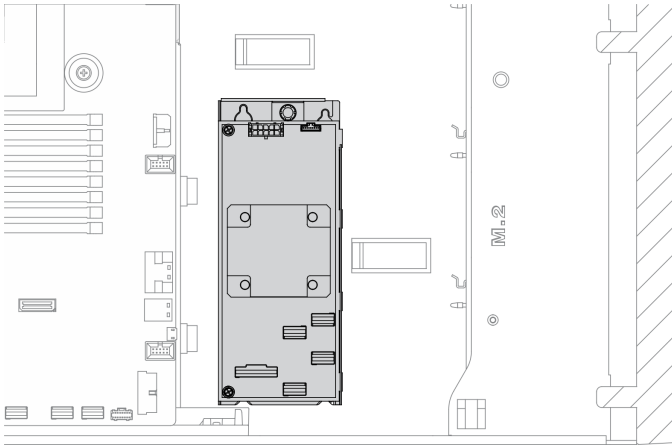


Figure 87. Internal CFF adapter location

### Procedure

- Step 1. Align the holes on the CFF adapter with those on its tray, put down the CFF adapter on its tray, and tighten the screws to secure them.

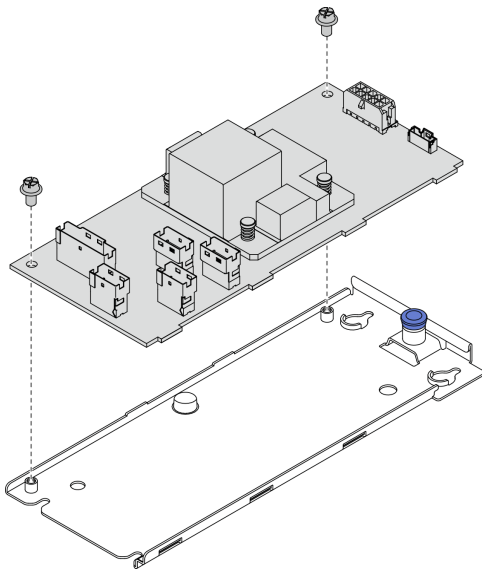


Figure 88. Internal CFF adapter tray installation

- Step 2. Align the notches on the tray with the pins on the chassis, place down the CFF adapter, and slightly slide it as shown to secure it on the chassis.

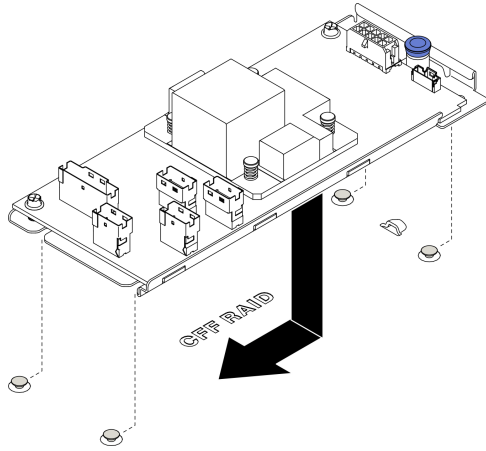


Figure 89. Internal CFF adapter installation

Step 3. Close the release pin to secure the CFF adapter into position.

Step 4. Connect the cables to the CFF adapter. See [“Internal CFF RAID adapter cable routing” on page 52.](#)

#### After you finish

1. Connect the cables to the backplane. See *ThinkSystem ST650 V2 Backplane/Backplate Cable Routing Guide*.
2. Reinstall the fan cage. See [“Install the fan cage assembly” on page 101.](#)
3. Reinstall all the fans. See [“Install a hot-swap fan” on page 99.](#)
4. Reinstall all the full-length GPU adapters. See [“Install a full-length GPU adapter” on page 117.](#)
5. Reinstall the air baffle. See [“Install the air baffle” on page 79.](#)
6. Reinstall all the flash power modules. See [“Install a flash power module” on page 105.](#)
7. Reinstall the server cover. See [“Install the server cover” on page 199.](#)
8. Complete the parts replacement. See [“Complete the parts replacement” on page 214.](#)

#### Demo video

[Watch the procedure on YouTube](#)

---

## Intrusion switch replacement

Use this information to remove and install the intrusion switch. The intrusion switch informs you that the server cover is not properly installed or closed by creating an event in the system event log (SEL).

### Remove the intrusion switch

Use this information to remove the intrusion switch.

#### About this task

#### S002



**CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

**Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

**Procedure**

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover” on page 197](#).
- b. Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).
- c. Remove the air baffle. See [“Remove the air baffle” on page 77](#).

Step 2. Disconnect the cable of the intrusion switch from the system board.

Step 3. Press the two tabs on the intrusion switch towards each other and carefully pull out the intrusion switch at the same time to remove it from the frame.

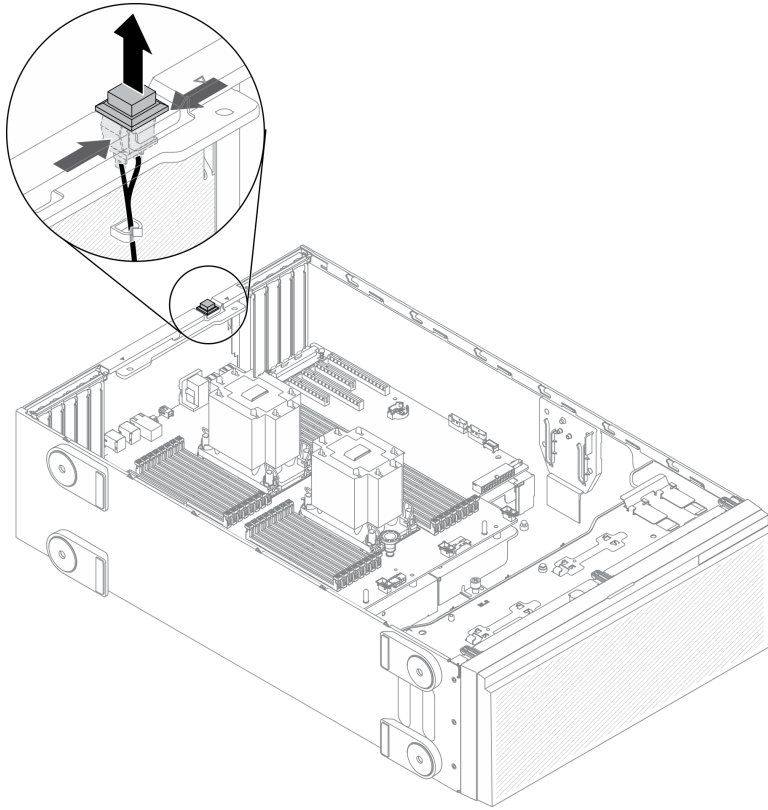


Figure 90. Intrusion switch removal

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install the intrusion switch

Use this information to install the intrusion switch.

### About this task

#### S002



#### **CAUTION:**


The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

**Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

**Procedure**

- Step 1. Insert the cable of the new intrusion switch and then the tab on the intrusion switch frame into the corresponding hole in the chassis. Then, push the intrusion switch in until it is securely seated.

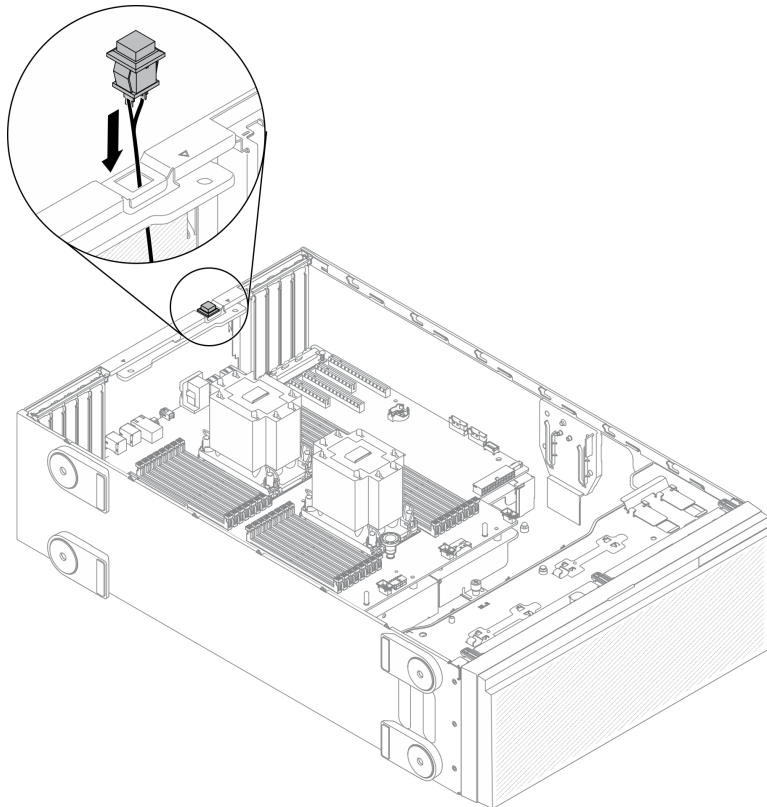

*Figure 91. Intrusion switch installation*

- Step 2. Connect the intrusion switch cable to the system board. See [“System board components” on page 33](#).

**After you finish**

1. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
2. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).
3. Reinstall the server cover. See [“Install the server cover” on page 199](#).
4. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

**Demo video**

[Watch the procedure on YouTube](#)

---

## M.2 boot adapter replacement

Use this information to remove and install the M.2 boot adapter.

### Remove the M.2 boot adapter

Use this information to remove the M.2 boot adapter.

#### About this task

#### S002



#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

#### Procedure

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover” on page 197](#).
- b. Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).
- c. Remove the air baffle. See [“Remove the air baffle” on page 77](#).
- d. Remove all the full-length GPU adapters. See [“Remove a full-length GPU adapter” on page 115](#).
- e. Remove all the fans. See [“Remove a hot-swap fan” on page 97](#).
- f. Remove the fan cage. See [“Remove the fan cage assembly” on page 100](#).
- g. Remove all the M.2 drives from the M.2 boot adapter. See [“Remove an M.2 drive” on page 136](#)

Step 2. Disconnect the cables from the M.2 boot adapter.

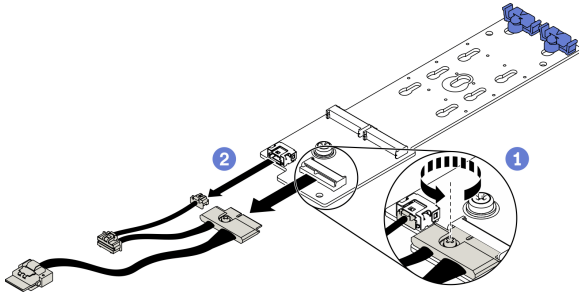


Figure 92. M.2 signal cable screw removal

- a. ① Loosen the screw that secures the M.2 signal cable to the M.2 boot adapter.
- b. ② Disconnect all the cables.

Step 3. Remove the M.2 boot adapter.

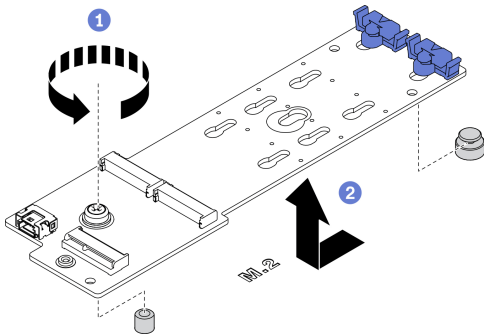


Figure 93. M.2 boot adapter removal

- a. ① Loosen the screw that secures the M.2 boot adapter to the chassis.
- b. ② Slightly slide the M.2 boot adapter as shown and carefully lift it out of the chassis.

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install the M.2 boot adapter

Use this information to install the M.2 boot adapter.

### About this task

#### S002





**CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

**Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

**Procedure**

Step 1. Install the M.2 boot adapter.

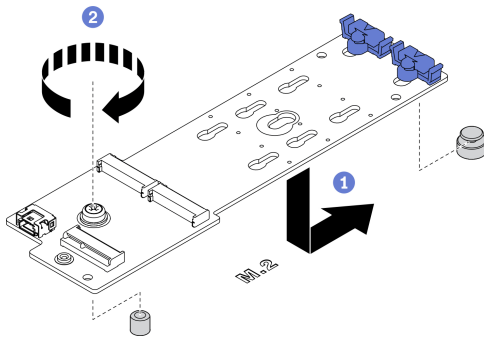


Figure 94. M.2 boot adapter installation

- 1 Insert the M.2 boot adapter into the chassis as shown.
- 2 Tighten the screw to secure the M.2 boot adapter to the chassis.

Step 2. Connect the cables to the M.2 boot adapter.

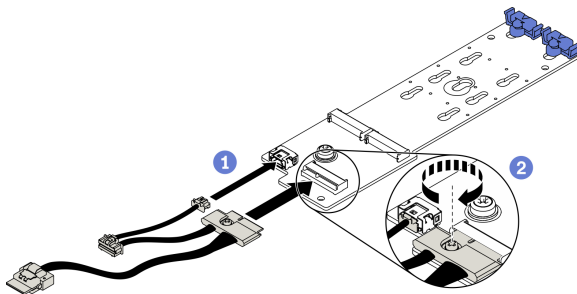


Figure 95. M.2 signal cable screw installation

- 1 Connect all the cables.
- 2 Tighten the screw that secures the M.2 signal cable to the M.2 boot adapter.

Step 3. Connect the power cable and the signal cable to the system board. See [“M.2 boot adapter cable routing” on page 53](#).

**After you finish**

1. Reinstall the M.2 drives to the M.2 boot adapter. See [“Install an M.2 drive” on page 138](#).
2. Reinstall the fan cage. See [“Install the fan cage assembly” on page 101](#).
3. Reinstall all the fans. See [“Install a hot-swap fan” on page 99](#).
4. Reinstall all the full-length GPU adapters. See [“Install a full-length GPU adapter” on page 117](#).
5. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
6. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).
7. Reinstall the server cover. See [“Install the server cover” on page 199](#).
8. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

### Demo video

[Watch the procedure on YouTube](#)

---

## M.2 drive replacement

Use this information to remove and install the M.2 drive.

### Remove an M.2 drive

Use this information to remove an M.2 drive.

#### About this task

#### S002



#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

#### Procedure

Step 1. Remove the server cover. See [“Remove the server cover” on page 197](#).

Step 2. Remove the M.2 drive.

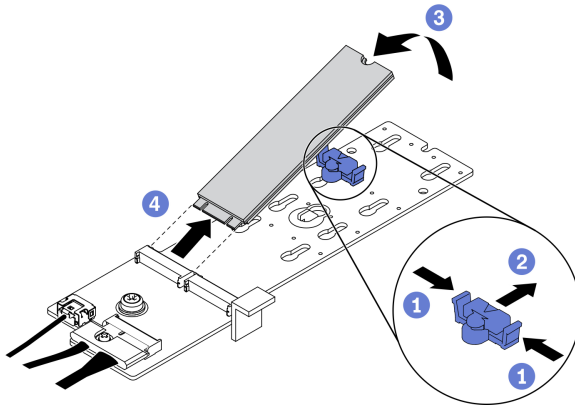


Figure 96. M.2 drive removal

- a. ① Press both sides of the retainer.
- b. ② Slide the retainer backward to loosen the M.2 drive from the M.2 boot adapter.
- c. ③ Pivot the M.2 drive away from the M.2 boot adapter.
- d. ④ Pull the M.2 drive away from the connector at an angle of approximately 30 degrees.

#### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

#### Demo video

[Watch the procedure on YouTube](#)

## Adjust the retainer on the M.2 boot adapter

Use this information to adjust the retainer on the M.2 boot adapter.

#### About this task

##### S002



#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### Attention:

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Before adjusting the retainer on the M.2 boot adapter, locate the correct keyhole that the retainer should be installed into to accommodate the particular size of the M.2 drive you wish to install.

**Note:** The M.2 boot adapter might be different from the following illustrations, but the adjustment method is the same.

### Procedure

Step 1. Adjust the retainer on the M.2 boot adapter.

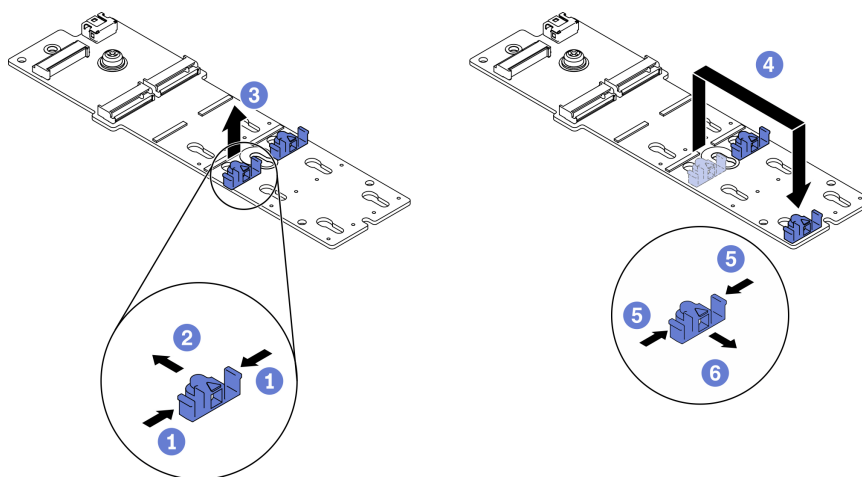


Figure 97. M.2 retainer adjustment

- 1 Press both sides of the retainers.
- 2 Move the retainer forward until it is in the large opening of the keyhole.
- 3 Take the retainer out of the keyhole.
- 4 Insert the retainer into the correct keyhole.
- 5 Press both sides of the retainer.
- 6 Slide the retainer backwards until it is seated in place.

### Demo video


[Watch the procedure on YouTube](#)

## Install an M.2 drive

Use this information to install an M.2 drive.

### About this task

#### S002

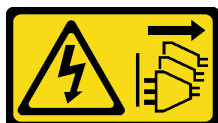

**CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

**Attention:**

- Read “Installation Guidelines” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

Locate the M.2 drive slot on the M.2 adapter.

**Note:** For some M.2 adapters that support two identical M.2 drives, install the M.2 drive in slot 0 first.

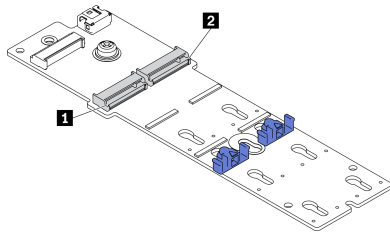


Figure 98. M.2 drive slot

Table 18. M.2 drive slot locations on M.2 boot adapter

<b>1</b> M.2 boot adapter slot 0	<b>2</b> M.2 boot adapter slot 1
----------------------------------	----------------------------------

**Procedure**

Step 1. Install the M.2 drive

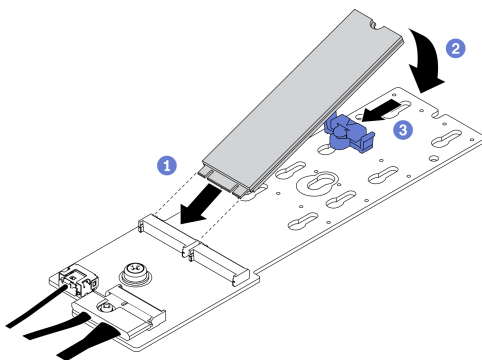


Figure 99. M.2 drive installation

- 1 Insert the M.2 drive at an angle of approximately 30 degrees into the connector.
- 2 Pivot the M.2 drive down until the notch catches on the lip of the retainer.
- 3 Slide the retainer forward (towards the connector) to secure the M.2 drive into place.

## After you finish

1. Reinstall the server cover. See [“Install the server cover” on page 199](#).
2. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

## Demo video

[Watch the procedure on YouTube](#)

---

## Memory module replacement


Use the following procedures to remove and install a memory module.

### Remove a memory module

Use this information to remove a memory module.

#### About this task

#### S002

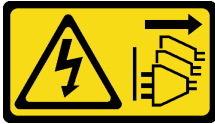

#### CAUTION:

**The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.**

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.
- Memory modules are sensitive to static discharge and require special handling. Refer to the standard guidelines for [“Handling static-sensitive devices” on page 62](#).
  - Always wear an electrostatic-discharge strap when removing or installing memory modules. Electrostatic-discharge gloves can also be used.
  - Never hold two or more memory modules together so that they do not touch each other. Do not stack memory modules directly on top of each other during storage.
  - Never touch the gold memory module connector contacts or allow these contacts to touch the outside of the memory module connector housing.
  - Handle memory modules with care: never bend, twist, or drop a memory module.
  - Do not use any metal tools (such as jigs or clamps) to handle the memory modules, because the rigid metals may damage the memory modules.
  - Do not insert memory modules while holding packages or passive components, which can cause package cracks or detachment of passive components by the high insertion force.

## Procedure

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover”](#) on page 197.
- b. Remove all the flash power modules. See [“Remove a flash power module”](#) on page 103.
- c. Remove the air baffle. See [“Remove the air baffle”](#) on page 77.
- d. Remove all the full-length GPU adapters. See [“Remove a full-length GPU adapter”](#) on page 115.
- e. Remove all the fans. See [“Remove a hot-swap fan”](#) on page 97.
- f. Remove the fan cage. See [“Remove the fan cage assembly”](#) on page 100.

Step 2. Remove the memory module from the slot.

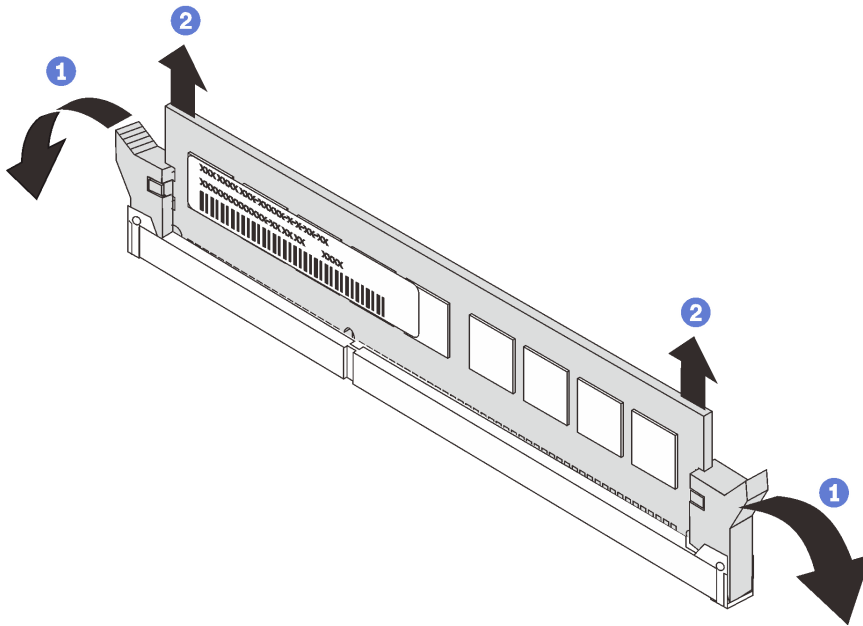


Figure 100. Memory module removal

- a. ① Open the retaining clip on each end of the memory module slot.

**Attention:** To avoid breaking the retaining clips or damaging the memory module slots, handle the clips gently.

- b. ② Grasp the memory module at both ends and carefully lift it out of the slot.

## After you finish

- Install a memory module filler or a new memory module to cover the slot. See [“Install a memory module”](#) on page 142.
- If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

## Demo video


[Watch the procedure on YouTube](#)

## Install a memory module

Use this information to install a memory module.

### About this task

#### S002

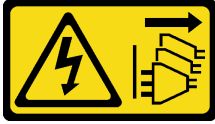

#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

See “Memory module installation order” in *Setup Guide* for detailed information about memory configuration and setup.

#### **Attention:**

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Memory modules are sensitive to static discharge and require special handling. Refer to the standard guidelines for “[Handling static-sensitive devices](#)” on page 62:
  - Always wear an electrostatic-discharge strap when removing or installing memory modules. Electrostatic-discharge gloves can also be used.
  - Never hold two or more memory modules together so that they do not touch each other. Do not stack memory modules directly on top of each other during storage.
  - Never touch the gold memory module connector contacts or allow these contacts to touch the outside of the memory module connector housing.
  - Handle memory modules with care: never bend, twist, or drop a memory module.
  - Do not use any metal tools (such as jigs or clamps) to handle the memory modules, because the rigid metals may damage the memory modules.
  - Do not insert memory modules while holding packages or passive components, which can cause package cracks or detachment of passive components by the high insertion force.

#### **Procedure**

Step 1. Touch the static-protective package that contains the memory module to any unpainted surface on the outside of the server. Then, take the memory module out of the package and place it on a static-protective surface.

Step 2. Locate the required memory module slot on the system board.

**Note:** Ensure that you observe the installation rules and sequence in “Technical rules for memory modules” in the *ThinkSystem ST650 V2 Setup Guide*.

Step 3. Install the memory module into the slot.



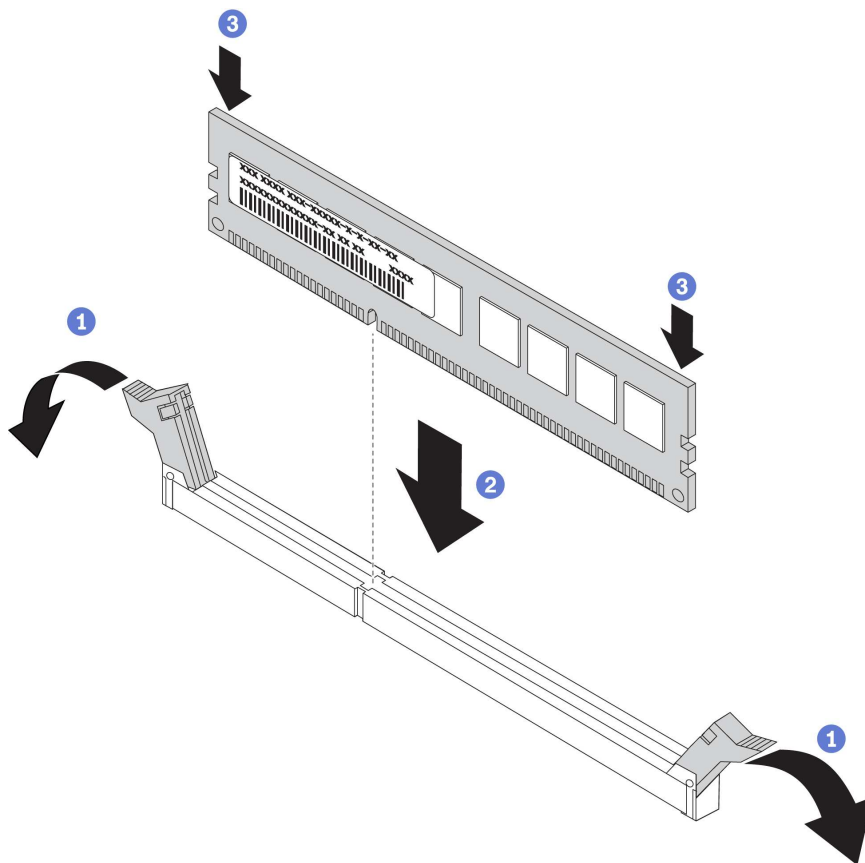


Figure 101. Memory module installation

- a. ① Open the retaining clip on each end of the memory module slot.

**Attention:** To avoid breaking the retaining clips or damaging the memory module slots, open and close the clips gently.

- b. ② Align the memory module with the slot, and gently place the memory module on the slot with both hands.
- c. ③ Firmly press both ends of the memory module straight down into the slot until the retaining clips snap into the locked position.

**Note:** If there is a gap between the memory module and the retaining clips, the memory module has not been correctly inserted. In this case, open the retaining clips, remove the memory module, and then reinsert it.

#### After you finish

1. Reinstall the fan cage. See [“Install the fan cage assembly” on page 101](#).
2. Reinstall all the fans. See [“Install a hot-swap fan” on page 99](#).
3. Reinstall all the full-length GPU adapters. See [“Install a full-length GPU adapter” on page 117](#).
4. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
5. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).
6. Reinstall the server cover. See [“Install the server cover” on page 199](#).
7. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

## Demo video

[Watch the procedure on YouTube](#)

---

## NVLink bridge replacement

Use this information to remove and install an NVLink bridge.

### Remove an NVLink bridge

Use this information to remove an NVLink bridge.

#### About this task

**Important:** Make sure you have a suction cup available for properly removing the NVLink bridge.

#### S002



#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

#### Procedure

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover” on page 197](#).
- b. Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).
- c. Remove the air baffle. See [“Remove the air baffle” on page 77](#).

Step 2. Press the suction cup against the NVLink bridge until it adheres; then, pull the suction cup and remove the NVLink bridge from the GPUs.

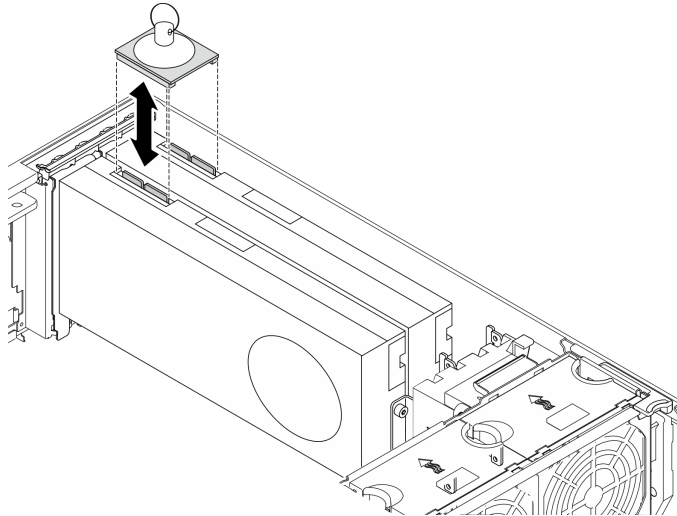


Figure 102. NVLink bridge removal

Step 3. Install the NVLink covers.

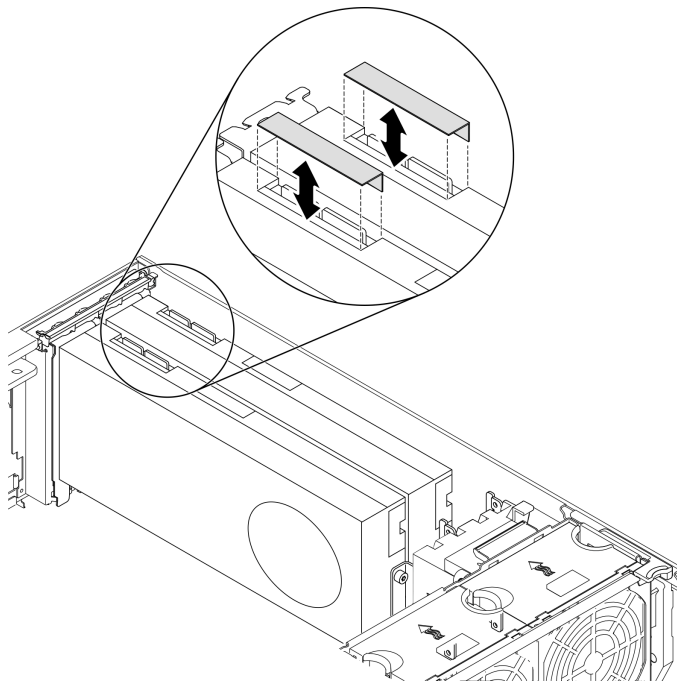


Figure 103. NVLink covers installation

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video


[Watch the procedure on YouTube](#)

## Install an NVLink bridge

Use this information to install an NVLink bridge.

### About this task

#### S002

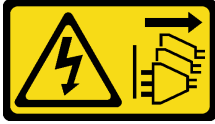

#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

#### Procedure

Step 1. Remove the NVLink covers.

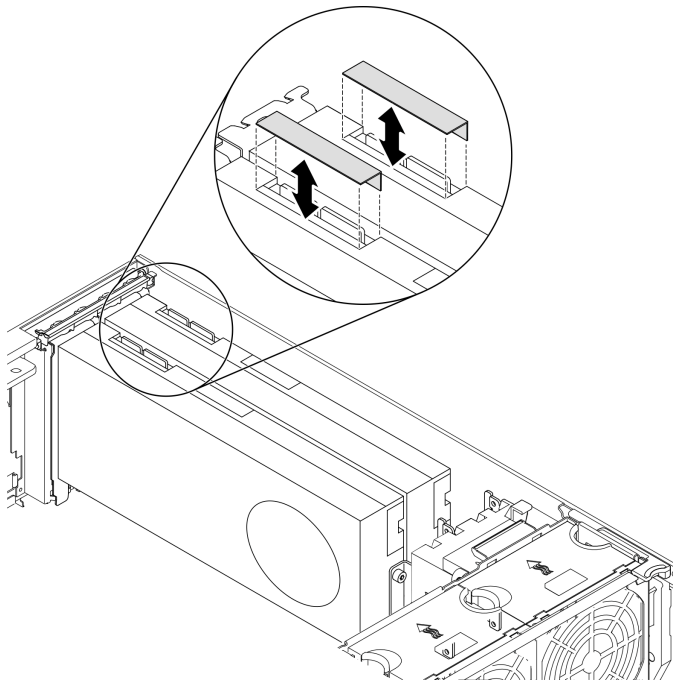


Figure 104. NVLink covers removal

Step 2. Note the orientation of the NVLink bridge; then, install the NVLink bridge as shown.

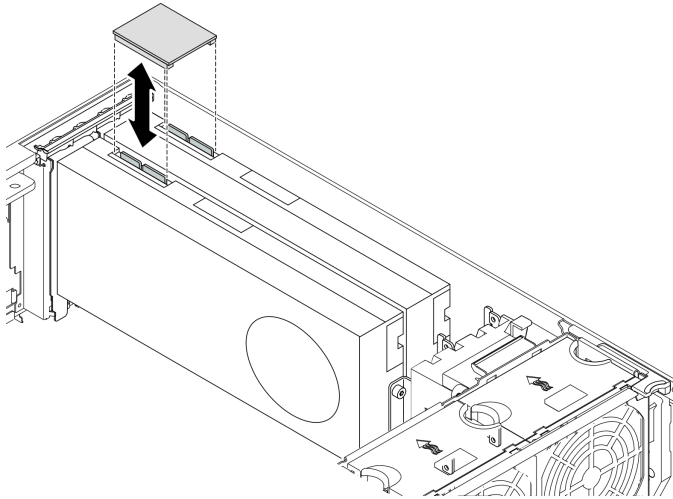


Figure 105. NVLink bridge installation

### After you finish

1. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
2. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).
3. Reinstall the server cover. See [“Install the server cover” on page 199](#).
4. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

### Demo video

[Watch the procedure on YouTube](#)

---

## Optical drive cage replacement

Use this information to remove and install the optical drive cage.

**Note:** This section applies only to server models that have the optical drive cage installed.

### Remove the optical drive cage

Use this information to remove the optical drive cage.

#### About this task

##### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.

## Procedure

Step 1. Make preparations for this task.

- Remove the server cover. See [“Remove the server cover” on page 197](#).
- Remove the security door. See [“Remove the security door” on page 195](#).
- Remove the front bezel. See [“Remove the front bezel” on page 109](#).
- Remove all installed optical drives, tape drives, and fillers (if any) from the optical drive cage. See [“Remove an optical drive or a tape drive” on page 150](#) and [“Remove the 5.25-inch drive bay adapter assembly” on page 157](#).

Step 2. Remove the optical drive cage.

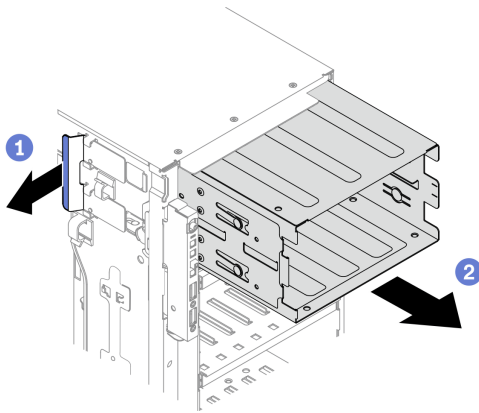


Figure 106. Optical drive cage removal

- ① Lift and hold the blue retention tab.
- ② Carefully pull the optical drive cage at the same time to slide it out of the opening in the chassis.

## After you finish

- Install an expansion drive cage or an optical drive cage. See [“Install the expansion drive cage” on page 96](#) or [“Install the optical drive cage” on page 148](#).
- If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

## Demo video

[Watch the procedure on YouTube](#)

## Install the optical drive cage

Use this information to install the optical drive cage.

## About this task

### S002



#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

#### Procedure

Step 1. Install the optical drive cage.

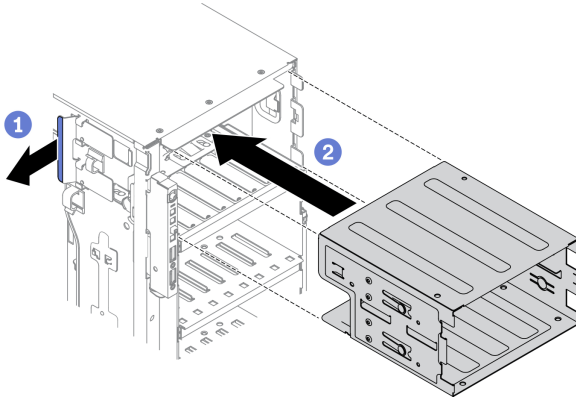


Figure 107. Optical drive cage installation

- a. ① Lift and hold the blue retention tab.
- b. ② Carefully push the optical drive cage at the same time to slide it into the bay until it snaps into position.

#### After you finish

1. Reinstall all the optical drives, tape drives, and fillers (if any) into the optical drive cage. See [“Install an optical drive or a tape drive” on page 153](#) and [“Install the 5.25-inch drive bay adapter assembly” on page 160](#).
2. Reinstall the front bezel. See [“Install the front bezel” on page 111](#).
3. Reinstall the security door. See [“Install the security door” on page 196](#).
4. Reinstall the server cover. See [“Install the server cover” on page 199](#).

5. Complete the parts replacement. See [“Complete the parts replacement”](#) on page 214.

### Demo video

[Watch the procedure on YouTube](#)

---

## Optical drive or tape drive replacement

Use this information to remove and install the optical drive or tape drive.


**Note:** This section applies only to server models that have an optical drive or a tape drive installed.

### Remove an optical drive or a tape drive

Use this information to remove an optical drive or a tape drive.

#### About this task

##### S002

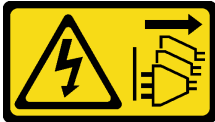

#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

##### S006



#### CAUTION:

When laser products (such as CD-ROMs, DVD drives, fiber optic devices, or transmitters) are installed, note the following:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

##### S007



#### CAUTION:

This product contains a Class 1M laser. Do not view directly with optical instruments.



**Note:** This section only applies to server models that come with an optical or tape drive. For those that come with a 5.25-inch drive bay adapter, see [“Remove the 5.25-inch drive bay adapter assembly” on page 157](#).

**Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.

**Note:** The following illustrations are based on the scenario that you remove an optical drive. The procedure is similar for removing a tape drive.


**Procedure**

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover” on page 197](#).
- b. Remove the security door. See [“Remove the security door” on page 195](#).
- c. Remove the front bezel. See [“Remove the front bezel” on page 109](#).

Step 2. Disconnect the cables from the rear of the optical drive or tape drive.

Step 3. Remove the optical drive or tape drive.

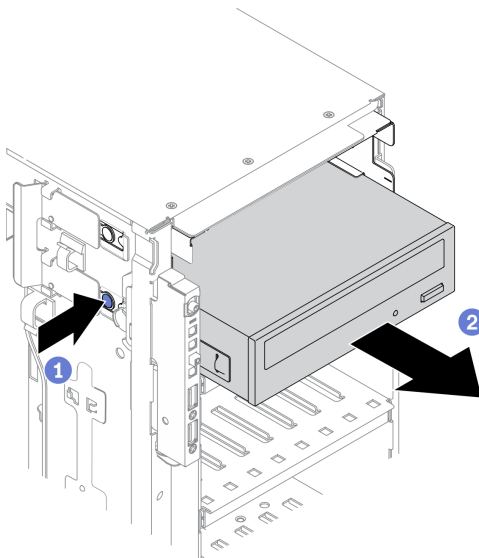

*Figure 108. Optical drive removal*

- a. ① Press and hold the release tab.
- b. ② Carefully pull the optical drive or tape drive at the same time to remove it from the chassis.

**After you finish**

1. Install a new optical drive, tape drive, or filler to cover the drive bay. See [“Install an optical drive or a tape drive” on page 153](#). To install a filler, complete the following steps:
  - a. Insert the filler to the vacant drive bay.

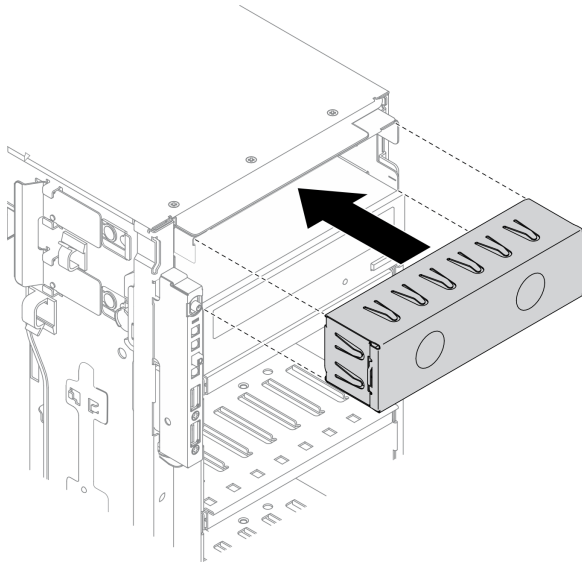


Figure 109. Drive bay filler installation

- b. Install the cover of the drive bay filler to the front bezel. Then, install the front bezel to the chassis.

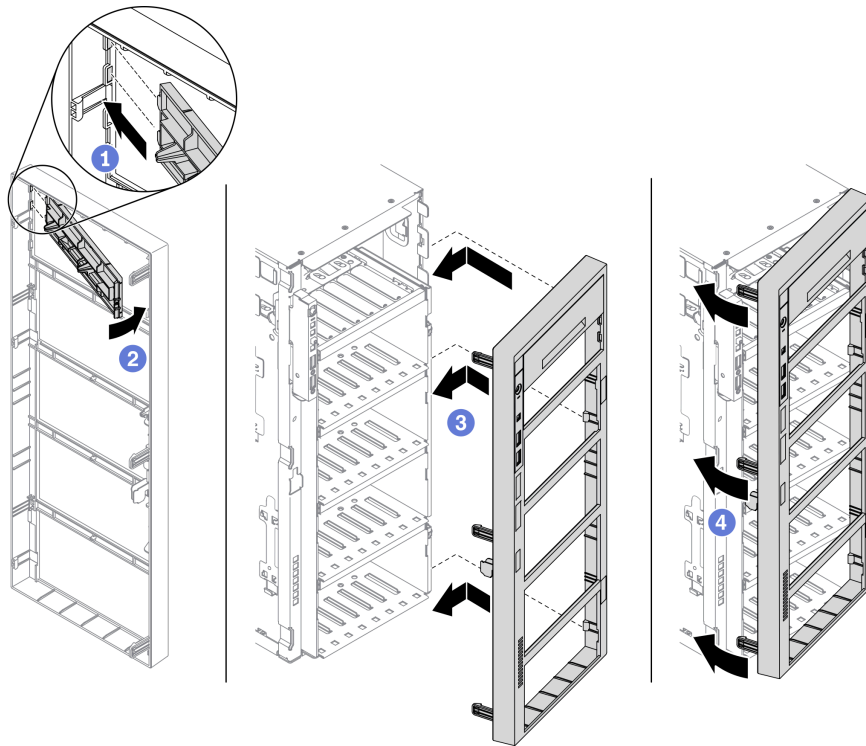


Figure 110. Drive bay filler cover installation

2. Remove the retainer from the removed optical drive or tape drive, and then install the retainer to the chassis.

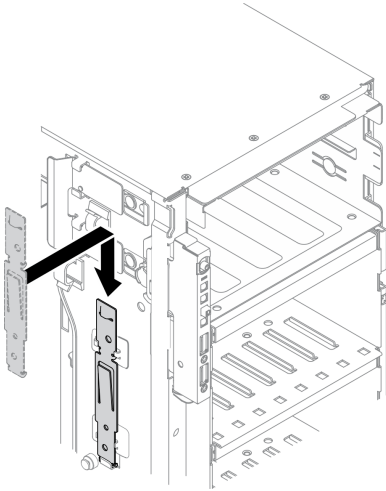


Figure 111. Drive retainer installation

3. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

#### Demo video

[Watch the procedure on YouTube](#)

## Install an optical drive or a tape drive

Use this information to install an optical drive or a tape drive.

#### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

## S006



### **CAUTION:**

When laser products (such as CD-ROMs, DVD drives, fiber optic devices, or transmitters) are installed, note the following:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

## S007



### **CAUTION:**

This product contains a Class 1M laser. Do not view directly with optical instruments.

### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

**Note:** The following illustrations are based on the scenario that you install an optical drive. The procedure is similar for installing a tape drive.

### **Procedure**

Step 1. If necessary, remove the cover of the drive bay filler from the front bezel.

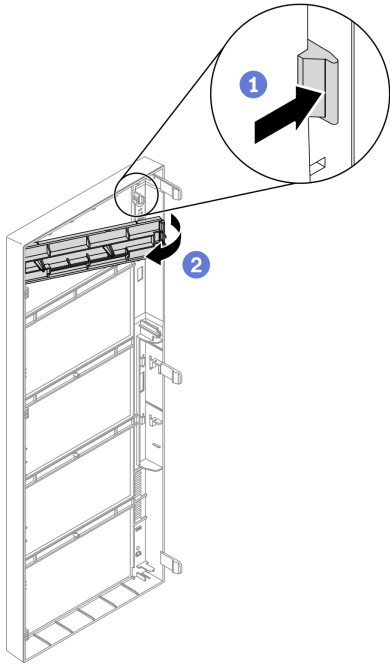


Figure 112. Drive bay filler cover removal

- a. ① Push the tab on the front bezel to release the cover of the drive bay filler.
- b. ② Remove the cover of the drive bay filler as shown.

Step 2. If necessary, remove the drive bay filler out of the chassis.

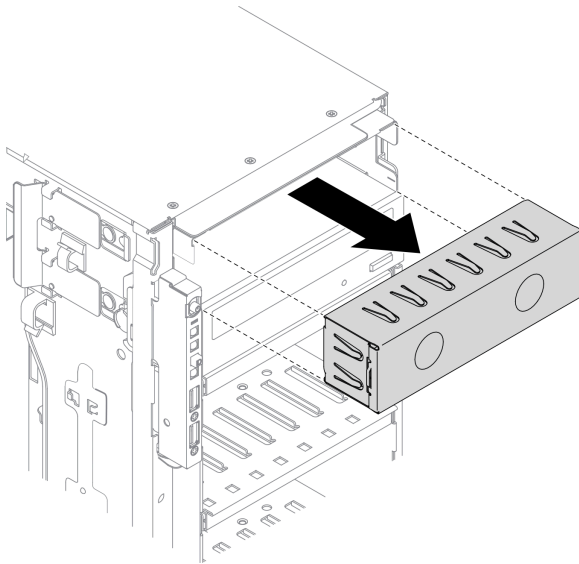


Figure 113. Drive bay filler removal

Step 3. Remove the retainer from the chassis.

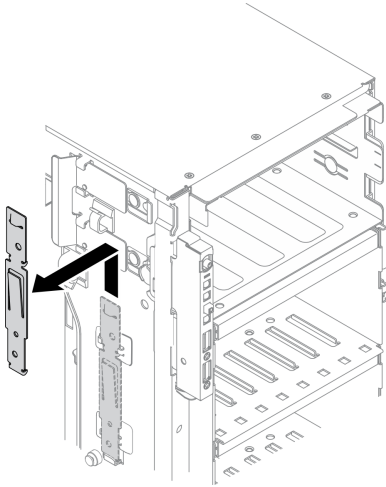


Figure 114. Drive retainer removal

Step 4. Install the retainer to only the left side of the optical drive or tape drive.

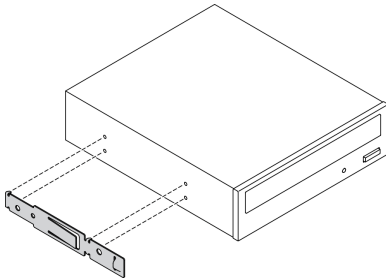


Figure 115. Optical drive retainer installation

Step 5. Hold the optical drive or tape drive in the correct orientation; then, slide it into the drive bay until it snaps into position.

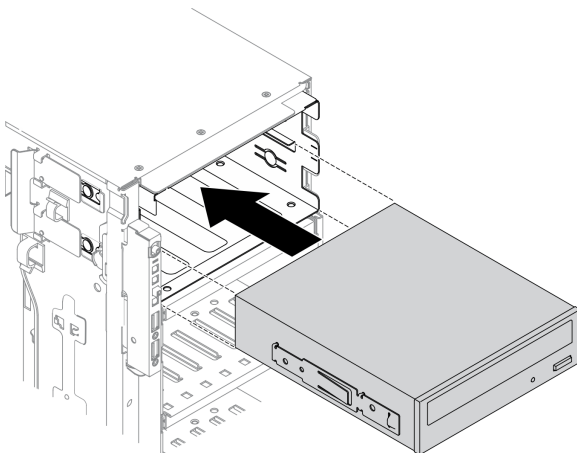


Figure 116. Optical drive installation

Step 6. Connect the power cable and the signal cable to the rear of the optical drive or tape drive. See [“Optical drive cable routing” on page 54](#) or [“Tape drive cable routing” on page 56](#).

## After you finish

1. Reinstall the front bezel. See [“Install the front bezel”](#) on page 111.
2. Reinstall the security door. See [“Install the security door”](#) on page 196.
3. Reinstall the server cover. See [“Install the server cover”](#) on page 199.
4. Complete the parts replacement. See [“Complete the parts replacement”](#) on page 214.

## Demo video

[Watch the procedure on YouTube](#)

## Remove the 5.25-inch drive bay adapter assembly

Use this information to remove the 5.25-inch drive bay adapter assembly.

### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### S006



#### **CAUTION:**

When laser products (such as CD-ROMs, DVD drives, fiber optic devices, or transmitters) are installed, note the following:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

#### S007



#### **CAUTION:**

This product contains a Class 1M laser. Do not view directly with optical instruments.

**Note:** This section only applies to server models that come with a 5.25-inch drive bay adapter. For those that come with an optical or tape drive, see [“Remove an optical drive or a tape drive” on page 150](#).

**Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.


**Procedure**

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover” on page 197](#).
- b. Remove the security door. See [“Remove the security door” on page 195](#).
- c. Remove the front bezel. See [“Remove the front bezel” on page 109](#).

Step 2. Disconnect every cable from the 5.25-inch drive bay adapter assembly.

Step 3. Remove the 5.25-inch drive bay adapter assembly.

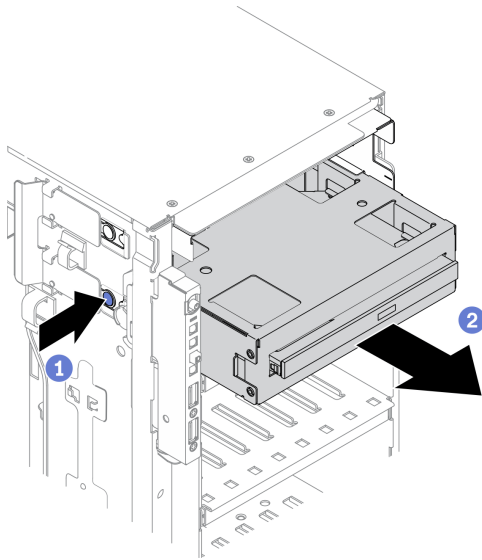

*Figure 117. 5.25-inch drive bay adapter assembly removal*

- a. **1** Press and hold the release tab.
- b. **2** Carefully pull the 5.25-inch drive bay adapter assembly at the same time to remove it from the chassis.

Step 4. Remove the slim optical drive out from the adapter.



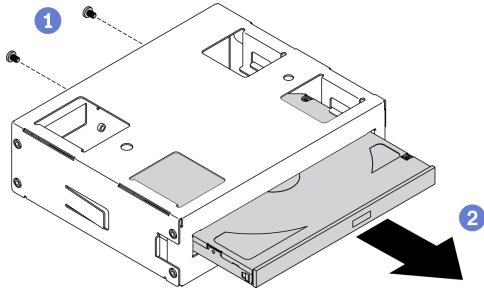


Figure 118. Removing slim optical drive from the drive bay adapter

- a. 1 Remove the two screws that secure the slim optical drive.
- b. 2 Slide the slim optical drive out from the adapter.

### After you finish

1. Install a new slim optical drive or install a filler to cover the drive bay. See [“Install the 5.25-inch drive bay adapter assembly” on page 160](#). To install a filler, complete the following steps:
  - a. Insert the filler to the vacant drive bay.

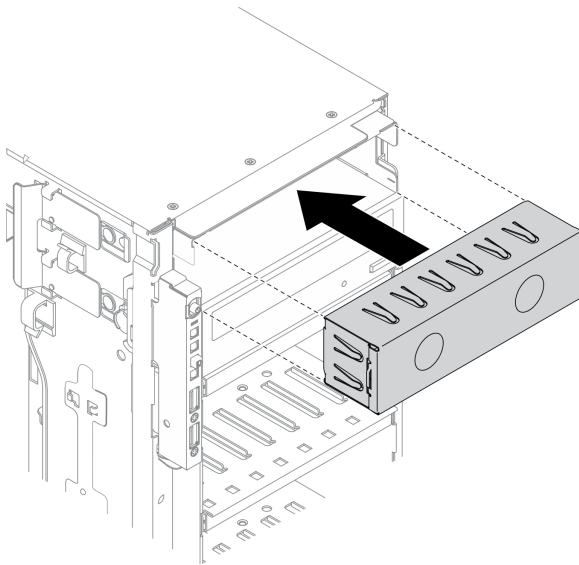


Figure 119. Drive bay filler installation

- b. Install the cover of the drive bay filler to the front bezel. Then, install the front bezel to the chassis.

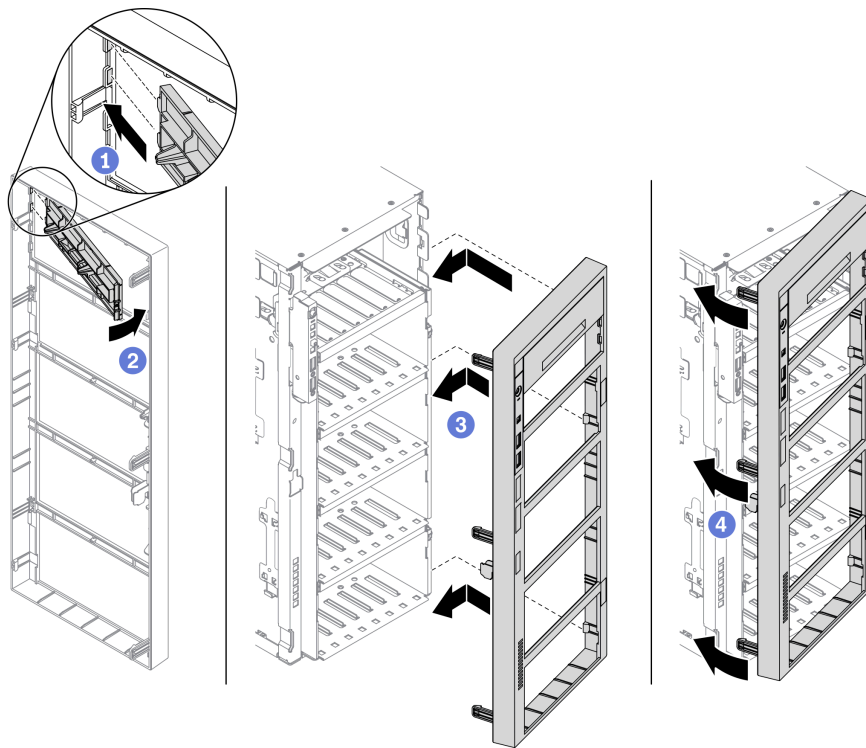


Figure 120. Drive bay filler cover installation

2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install the 5.25-inch drive bay adapter assembly

Use this information to install the 5.25-inch drive bay adapter assembly.

### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

## S006



### **CAUTION:**

When laser products (such as CD-ROMs, DVD drives, fiber optic devices, or transmitters) are installed, note the following:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

## S007



### **CAUTION:**

This product contains a Class 1M laser. Do not view directly with optical instruments.

### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

### **Procedure**

Step 1. If necessary, remove the cover of the drive bay filler from the front bezel.

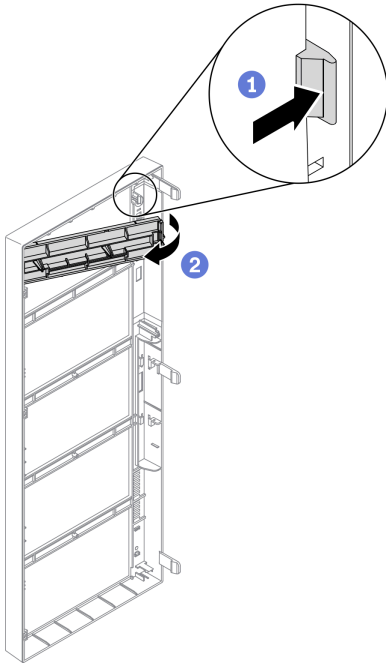


Figure 121. Drive bay filler cover removal

- a. ① Push the tab on the front bezel to release the cover of the drive bay filler.
- b. ② Remove the cover of the drive bay filler as shown.

Step 2. If necessary, remove the drive bay filler out of the chassis.

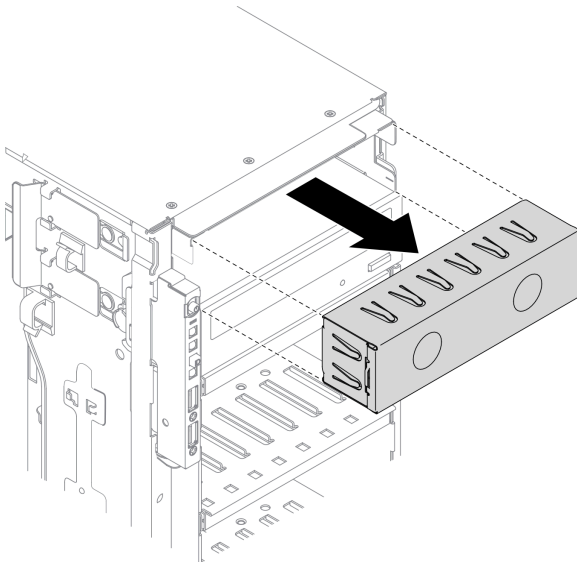


Figure 122. Drive bay filler removal

Step 3. Install the slim optical drive into the adapter.

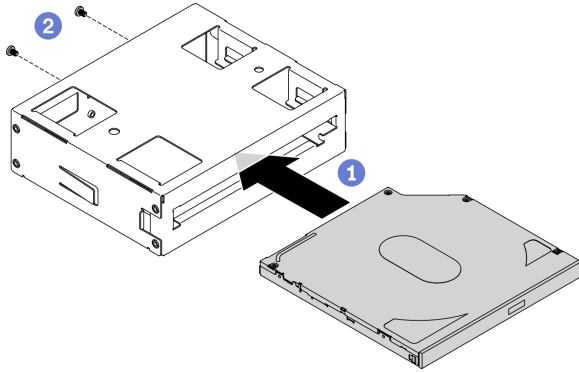


Figure 123. Installing slim optical drive into the drive bay adapter

- a. ① Slide the slim optical drive into the adapter.
- b. ② Secure the slim optical drive with two screws.

Step 4. Hold the 5.25-inch drive bay adapter assembly in the correct orientation; then, slide it into the drive bay until it snaps into position.

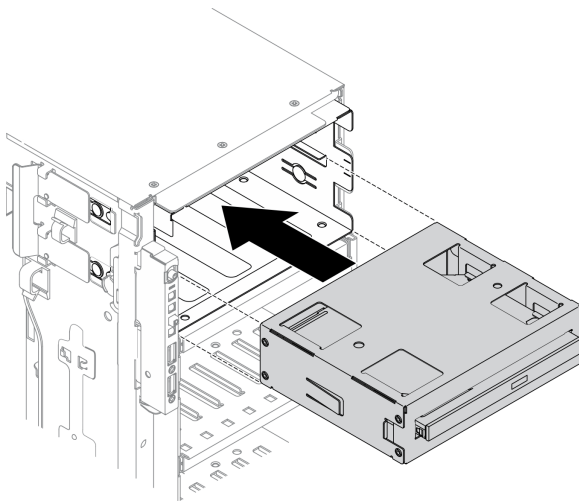


Figure 124. Optical drive installation

Step 5. Connect the power cable and the signal cable to the rear of the 5.25-inch drive bay adapter assembly. For more information about the cable routing. See [“Optical drive cable routing” on page 54](#).

#### After you finish

1. Reinstall the front bezel. See [“Install the front bezel” on page 111](#).
2. Reinstall the security door. See [“Install the security door” on page 196](#).
3. Reinstall the server cover. See [“Install the server cover” on page 199](#).
4. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

#### Demo video

[Watch the procedure on YouTube](#)

---

## PCIe adapter holder replacement


Use this information to remove and install a PCIe adapter holder, which helps to hold the full-length PCIe adapters.

### Remove a PCIe adapter holder

Use this information to remove a PCIe adapter holder.

#### About this task

#### S002

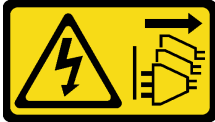

#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

#### **Procedure**

Step 1. Make preparations for this task.

- a. Remove the server cover. See [“Remove the server cover” on page 197](#).
- b. Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).
- c. Remove the air baffle. See [“Remove the air baffle” on page 77](#).
- d. Remove all the full-length GPU adapters. See [“Remove a full-length GPU adapter” on page 115](#).

Step 2. Press and hold the tab to release the PCIe adapter holder from the fan cage; then, remove the PCIe adapter holder in the direction as shown.

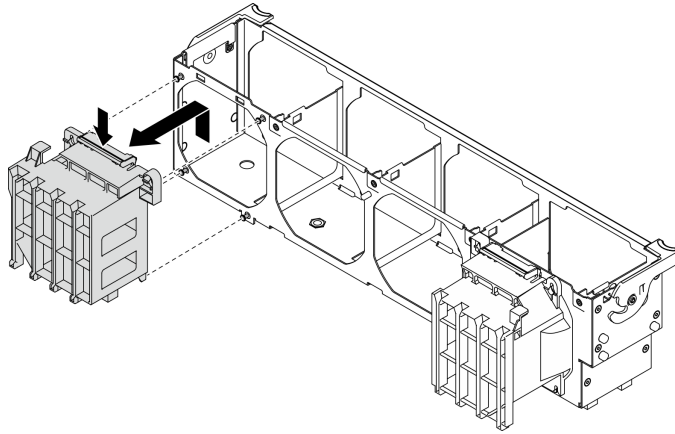


Figure 125. PCIe adapter holder removal

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install a PCIe adapter holder

Use this information to install a PCIe adapter holder.

### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

#### **Notes:**

- If you have installed one double-wide GPU adapter in PCIe slot 1, or three double-wide GPU adapters in PCIe slot 1, 3, and 7; install a GPU filler for proper cooling and airflow.
- If you have installed a full-length GPU adapter, install a PCIe adapter holder corresponding to the PCIe slot for your full-length GPU adapter.

### Procedure

Step 1. Align the PCIe adapter holder with the corresponding studs on the fan cage.

**Note:** The studs on the fan cage are positioned differently for the left PCIe adapter holder and right PCIe adapter holder.

Step 2. Insert the PCIe adapter holder onto the fan cage until it snaps into position.

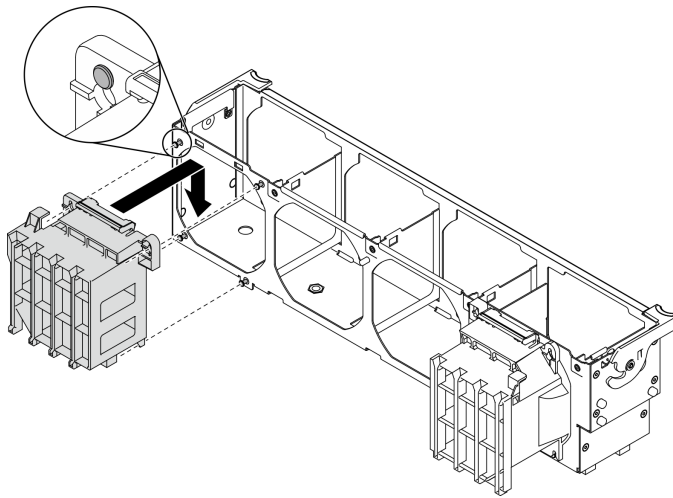


Figure 126. PCIe adapter holder installation

### After you finish

1. Reinstall all the full-length GPU adapters. See [“Install a full-length GPU adapter” on page 117.](#)
2. Reinstall the air baffle. See [“Install the air baffle” on page 79.](#)
3. Reinstall all the flash power modules. See [“Install a flash power module” on page 105.](#)
4. Reinstall the server cover. See [“Install the server cover” on page 199.](#)
5. Complete the parts replacement. See [“Complete the parts replacement” on page 214.](#)

### Demo video

[Watch the procedure on YouTube](#)

---

## PCIe adapter replacement

Use this information to remove and install a PCIe adapter.

Your server comes with nine PCIe slots. Depending on your needs, you can install a PCIe adapter to obtain the corresponding function or remove the adapter if necessary. The PCIe adapter can be an Ethernet adapter, a host bus adapter, a RAID adapter, a graphics adapter, or any other supported PCIe adapters. PCIe adapters vary by type, but the installation and removal procedures are the same.

### Notes:




- For a list of the supported PCIe adapters, see <https://serverproven.lenovo.com/>
- For instructions on how to remove and install a full-length GPU adapter, see “[Full-length GPU adapter replacement](#)” on page 115

## Remove a PCIe adapter

Use this information to remove a PCIe adapter.

### About this task

#### S002

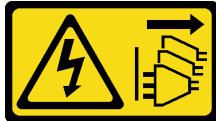

#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

#### **Notes:**

- Depending on the specific type, your PCIe adapter might look different from the illustration in this topic.
- Use any documentation that comes with the PCIe adapter and follow those instructions in addition to the instructions in this topic.

#### **Procedure**

- Step 1. Make preparations for this task.
  - a. Remove the server cover. See “[Remove the server cover](#)” on page 197.
  - b. Remove all the flash power modules. See “[Remove a flash power module](#)” on page 103.
  - c. Remove the air baffle. See “[Remove the air baffle](#)” on page 77.
- Step 2. Locate the PCIe adapter you want to remove. Depending on the type of PCIe adapter, you might also need to disconnect all cables from the PCIe adapter, the system board, or the drive backplane.
- Step 3. Remove the PCIe adapter.

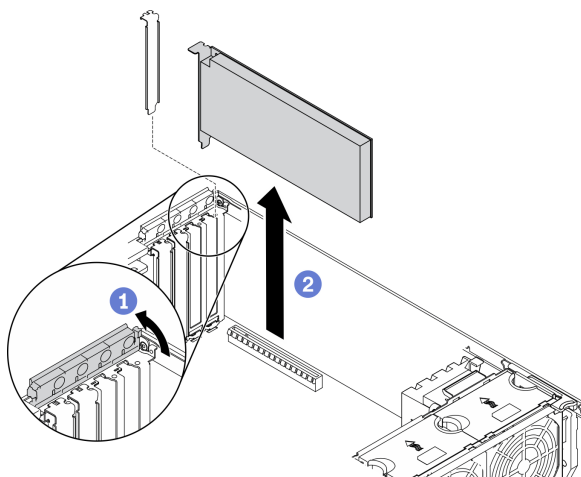


Figure 127. PCIe adapter removal

- a. ① Open the PCIe adapter retainer.
- b. ② Grasp the PCIe adapter by its edges and carefully pull it out of the slot.

#### After you finish

1. Install another PCIe adapter if necessary. See [“Install a PCIe adapter” on page 168](#). Otherwise, install a bracket to cover the vacancy and close the PCIe adapter retainer.
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

#### Demo video

[Watch the procedure on YouTube](#)

## Install a PCIe adapter

Use this information to install a PCIe adapter.

#### About this task

#### S002



#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

#### Notes:

- Depending on the specific type, your PCIe adapter might look different from the illustration in this topic.
- Use any documentation that comes with the PCIe adapter and follow those instructions in addition to the instructions in this topic.

#### Procedure

Step 1. Locate the applicable PCIe slot. See [“Specifications” on page 1](#) to identify the different types of PCIe slots in your server.

**Note:** Ensure that you observe the installation rules and sequence in “Technical rules for PCIe adapters” in the *ThinkSystem ST650 V2 Setup Guide*.

Step 2. If a bracket is installed in the PCIe slot, remove it. Store the bracket for the PCIe slot in case that you later remove the PCIe adapter and need the bracket to cover the place.

Step 3. Install the PCIe adapter.

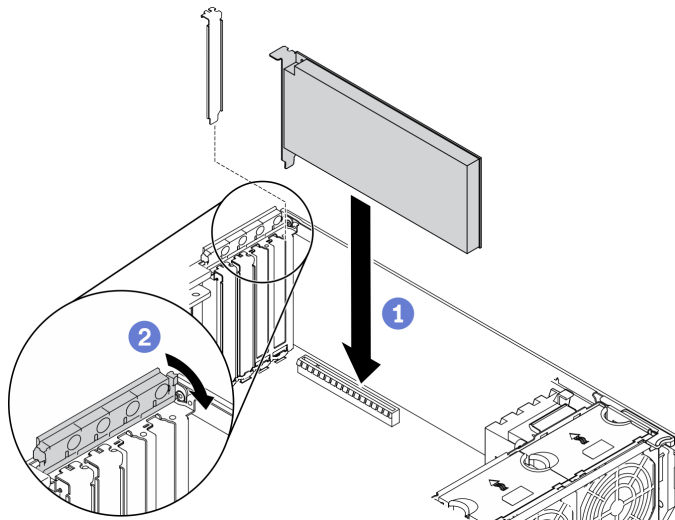


Figure 128. PCIe adapter installation

**Note:** Make sure the PCIe adapter retainer is in the opened position.

- 1 Align the PCIe adapter to the PCIe slot; then, gently press both ends of the PCIe adapter until it is securely seated in the PCIe slot.
- 2 Close the PCIe adapter retainer.

Step 4. Depending on the type of PCIe adapter, you might need to connect one or more cables. Refer to the documentation that comes with the PCIe adapter for specific information.

#### After you finish

1. If you have installed a T4 GPU adapter, install a T4 filler onto the server cover. See [“Install a T4 filler” on page 212](#).
2. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
3. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).

4. Reinstall the server cover. See [“Install the server cover” on page 199](#).
5. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

### Demo video

[Watch the procedure on YouTube](#)

---

## Power distribution board replacement


Use this information to remove and install the power distribution board.

### Remove the power distribution board

Use this information to remove the power distribution board.

#### About this task

#### S002

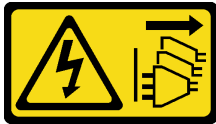

#### CAUTION:

**The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.**

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

#### Procedure

Step 1. Make preparations for this task.

- a. Remove the hot-swap redundant power supply. See [“Remove a hot-swap power supply” on page 177](#).
- b. Remove the server cover. See [“Remove the server cover” on page 197](#).
- c. Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).
- d. Remove the air baffle. See [“Remove the air baffle” on page 77](#).
- e. Remove all the PCIe adapters. See [“Remove a PCIe adapter” on page 167](#).
- f. Remove all the full-length GPU adapters. See [“Remove a full-length GPU adapter” on page 115](#).

- g. Remove all the fans. See [“Remove a hot-swap fan”](#) on page 97.
- h. Remove the fan cage. See [“Remove the fan cage assembly”](#) on page 100.
- i. Remove the system board. See [“Remove the system board”](#) on page 200.
- j. Remove the power distribution board cover. See [“Remove the power distribution board cover”](#) on page 173.

Step 2. Disconnect all the cables from the power distribution board.

Step 3. Remove the power distribution board.

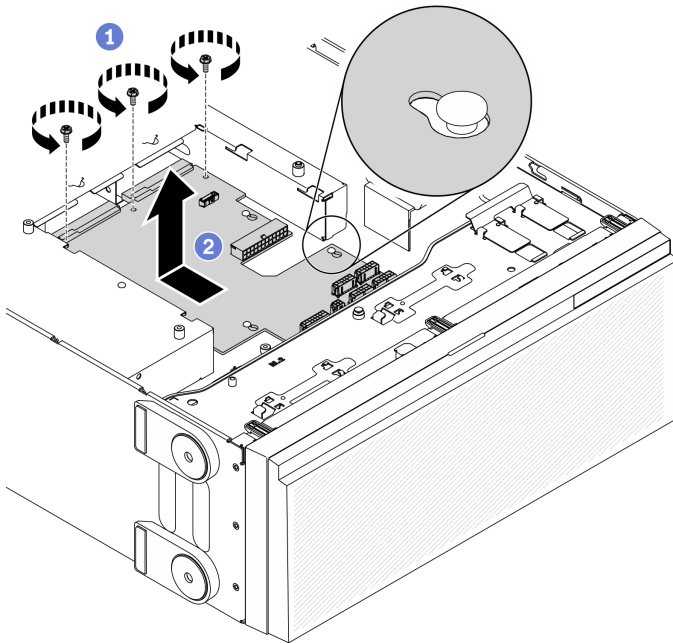


Figure 129. Power distribution board removal

- a. ① Remove the three screws that secure the power distribution board to the chassis.
- b. ② Slide the power distribution board towards the rear of the server to release it from the chassis; then, carefully hold the power distribution board by its edges and lift the power distribution board out of the chassis.

#### After you finish

- Install a power distribution board. See [“Install the power distribution board”](#) on page 171.
- If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

#### Demo video


[Watch the procedure on YouTube](#)

## Install the power distribution board

Use this information to install the power distribution board.

#### About this task

**S002**

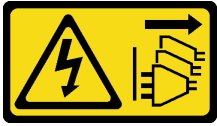

**CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

**Attention:**

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

**Procedure**

Step 1. Install the power distribution board.

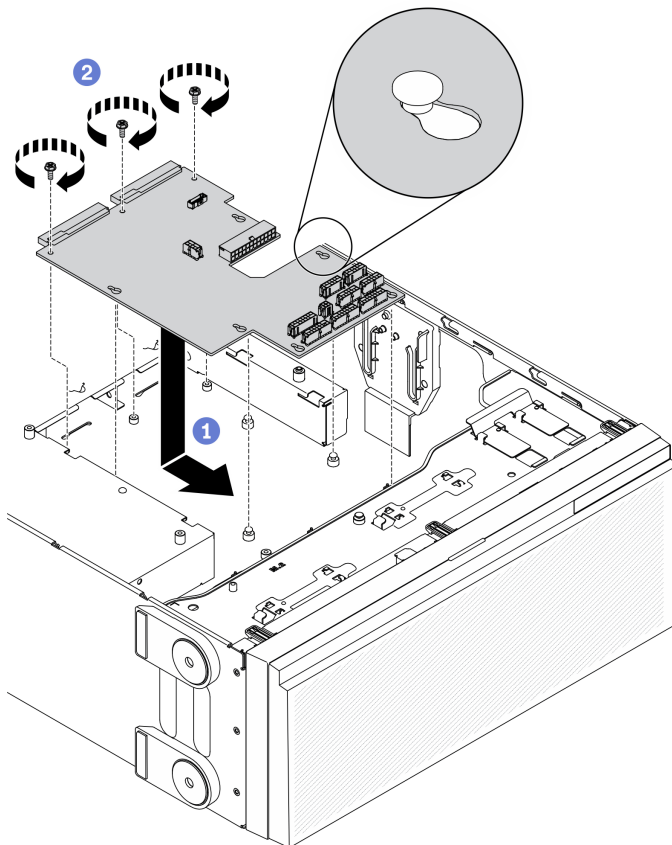


Figure 130. Power distribution board installation

- a. **1** Carefully hold the power distribution board by its edges and position it to the chassis. Ensure that the tabs on the chassis are inserted into the corresponding holes in the power distribution board; then, slide the power distribution board towards the front of the server.

- b. ② Install the three screws to secure the power distribution board to the chassis.

Step 2. Connect the cables to the PDB signal connector and Main power connector on the power distribution board. See [“Power distribution board connectors” on page 41](#).

### After you finish

1. Reinstall the power distribution board cover. See [“Install the power distribution board cover” on page 175](#).
2. Reinstall the system board. See [“Install the system board” on page 203](#).
3. Connect the cables from the power distribution board to the system board. See [“Power distribution board cable routing” on page 55](#).
4. Reinstall the fan cage. See [“Install the fan cage assembly” on page 101](#).
5. Reinstall all the fans. See [“Install a hot-swap fan” on page 99](#).
6. Reinstall all the full-length GPU adapters. See [“Install a full-length GPU adapter” on page 117](#).
7. Reinstall all the PCIe adapters. See [“Install a PCIe adapter” on page 168](#).
8. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
9. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).
10. Reinstall the server cover. See [“Install the server cover” on page 199](#).
11. Reinstall the hot-swap redundant power supply. See [“Install the hot-swap power supply” on page 180](#).
12. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

### Demo video

[Watch the procedure on YouTube](#)

---

## Power distribution board cover replacement


Use this information to remove and install the power distribution board cover.

### Remove the power distribution board cover

Use this information to remove the power distribution board cover.

#### About this task

#### S002

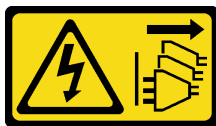

#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

## Procedure

Step 1. Make preparations for this task.

- Remove the hot-swap redundant power supply. See [“Remove a hot-swap power supply” on page 177](#).
- Remove the server cover. See [“Remove the server cover” on page 197](#).
- Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).
- Remove the air baffle. See [“Remove the air baffle” on page 77](#).
- Remove all the PCIe adapters. See [“Remove a PCIe adapter” on page 167](#).
- Remove all the full-length GPU adapters. See [“Remove a full-length GPU adapter” on page 115](#).
- Remove all the fans. See [“Remove a hot-swap fan” on page 97](#).
- Remove the fan cage. See [“Remove the fan cage assembly” on page 100](#).
- Remove the system board. See [“Remove the system board” on page 200](#).

Step 2. Remove the power distribution board cover.

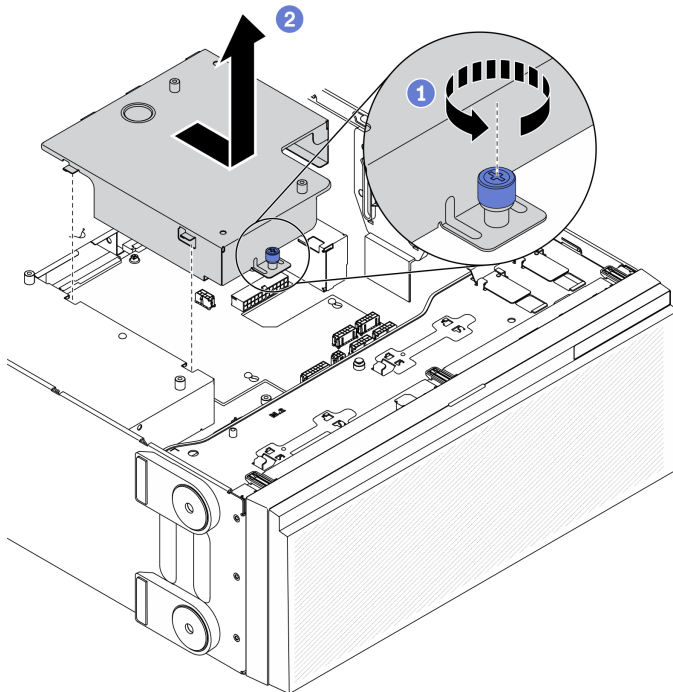


Figure 131. Power distribution board cover removal

- Loosen the captive screw.
- Remove the power distribution board cover in the direction as shown.



## After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

## Demo video

[Watch the procedure on YouTube](#)

## Install the power distribution board cover

Use this information to install the power distribution board cover.

### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

#### **Procedure**

Step 1. Install the power distribution board cover.

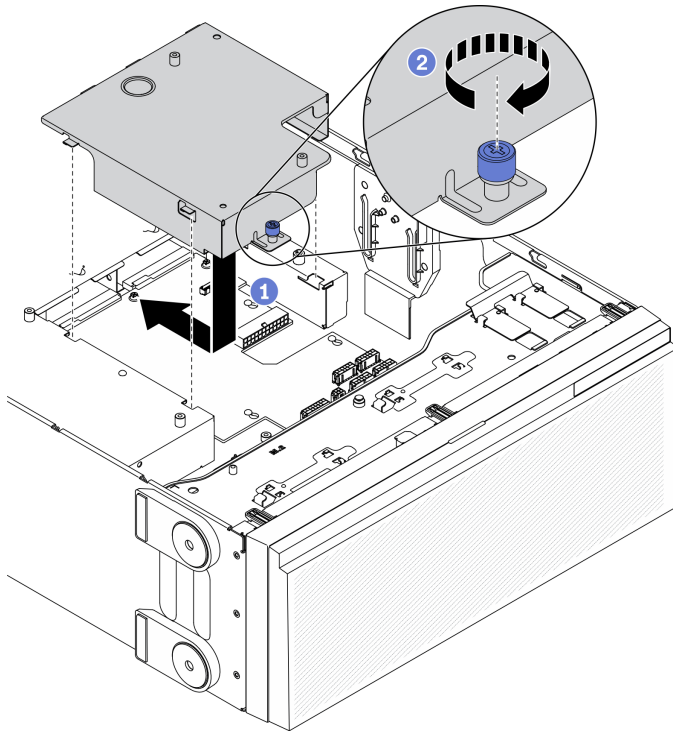


Figure 132. Power distribution board cover installation

- a. ① Install the power distribution board cover in the direction as shown.
- b. ② Fasten the captive screw to secure the power distribution board cover.

### After you finish

1. Reinstall the system board. See [“Install the system board” on page 203](#).
2. Connect the cables from the power distribution board to the system board. See [“Power distribution board cable routing” on page 55](#).
3. Reinstall the fan cage. See [“Install the fan cage assembly” on page 101](#).
4. Reinstall all the fans. See [“Install a hot-swap fan” on page 99](#).
5. Reinstall all the full-length GPU adapters. See [“Install a full-length GPU adapter” on page 117](#).
6. Reinstall all the PCIe adapters. See [“Install a PCIe adapter” on page 168](#).
7. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
8. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).
9. Reinstall the server cover. See [“Install the server cover” on page 199](#).
10. Reinstall the hot-swap redundant power supply. See [“Install the hot-swap power supply” on page 180](#).
11. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

### Demo video

[Watch the procedure on YouTube](#)

---

## Power supply unit replacement

Use this information to remove and install the redundant power supply unit.

## Remove a hot-swap power supply

Use this information to remove a hot-swap power supply.

### About this task

#### S001



Electrical current from power, telephone, and communication cables is hazardous.  
To avoid a shock hazard:

- Connect all power cords to a properly wired and grounded electrical outlet/source.
- Connect any equipment that will be attached to this product to properly wired outlets/sources.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- The device might have more than one power cord, to remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### S002



#### CAUTION:

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### S033



#### CAUTION:

Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

The following tips describe the information that you must consider when you remove a power supply with dc input.

**CAUTION:**

1. 240 V dc input (input range: 180-300 V dc) is **ONLY** supported in Chinese Mainland.
2. Power supplies with 240 V dc are not hot-swappable. To remove the power cord, ensure you have turned off the server or disconnected the dc power sources at the breaker panel.
3. In order for the ThinkSystem products to operate error free in both a DC or AC electrical environment, a TN-S earthing system which complies to 60364-1 IEC 2005 standard has to be present or installed.

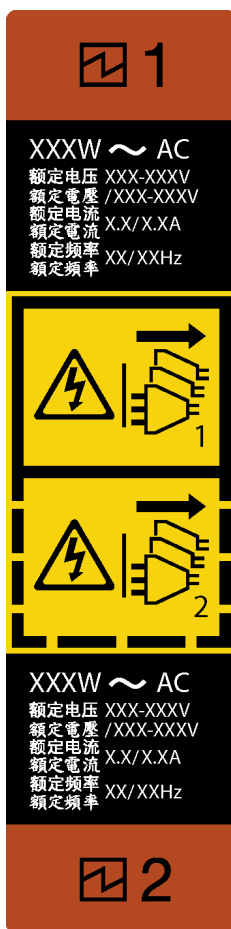


Figure 133. Hot-swap power supply label

**Attention:** This type of power supply is hot-swap only when two power supplies are installed for redundancy. If only one power supply is installed, you must power off the server first before removing the power supply.



在直流输入状态下，若电源供应器插座不支持热插拔功能，请务必不要对设备电源线进行热插拔，此操作可能导致设备损坏及数据丢失。因错误执行热插拔导致的设备故障或损坏，不属于保修范围。

NEVER CONNECT AND DISCONNECT THE POWER SUPPLY CABLE AND EQUIPMENT WHILE YOUR EQUIPMENT IS POWERED ON WITH DC SUPPLY (hot-plugging). Otherwise you may damage the equipment and result in data loss, the damages and losses result from incorrect operation of the equipment will not be covered by the manufacturers' warranty.

### Procedure

- Step 1. Locate the hot-swap power supply in the rear of your server and disconnect the power cord from the power supply.
- Step 2. Remove the hot-swap power supply.

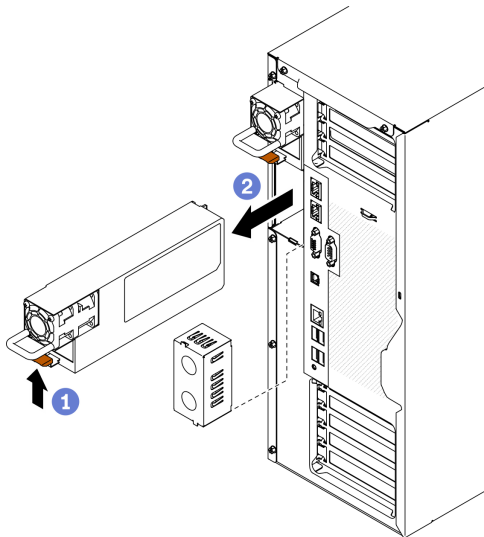


Figure 134. Hot-swap power supply removal

- a. ① Press and hold the release tab in the direction as shown.
- b. ② Carefully pull the handle at the same time to slide the hot-swap power supply out of the chassis.

### After you finish

1. Install a power supply or install the power-supply filler to cover the power supply bay. See [“Install the hot-swap power supply” on page 180](#).

**Important:** To ensure proper cooling during normal server operation, both of the power supply bays must be occupied. This means that each bay must have a power supply installed; or one has a power supply installed and the other has a power-supply filler installed.

2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install the hot-swap power supply

Use this information to install the hot-swap power supply.

### About this task


#### S001



Electrical current from power, telephone, and communication cables is hazardous.  
To avoid a shock hazard:

- Connect all power cords to a properly wired and grounded electrical outlet/source.
- Connect any equipment that will be attached to this product to properly wired outlets/sources.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- The device might have more than one power cord, to remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### S002

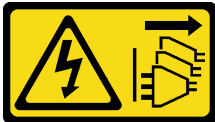

#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### S033



#### **CAUTION:**

Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.

- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

The following tips describe the type of power supply that the server supports and other information that you must consider when you install a power supply:

- The standard shipping has only one power supply installed in the server. For redundancy and hot-swap support, you must install an additional hot-swap power supply. Certain customized models might be shipped with two power supplies installed.
- Ensure that the devices that you are installing are supported. For a list of supported optional devices for the server, go to: <https://serverproven.lenovo.com/>

**CAUTION:**

- 1. 240 V dc input (input range: 180-300 V dc) is ONLY supported in Chinese Mainland.**
- 2. Power supplies with 240 V dc are not hot-swappable. To remove the power cord, ensure you have turned off the server or disconnected the dc power sources at the breaker panel.**
- 3. In order for the ThinkSystem products to operate error free in both a DC or AC electrical environment, a TN-S earthing system which complies to 60364-1 IEC 2005 standard has to be present or installed.**

**Notes:**

- Ensure that the two power supplies installed on the server have the same wattage.
- If you are replacing the existing power supply with a new power supply of different wattage, attach the power information label that comes with this option onto the existing label near the power supply.

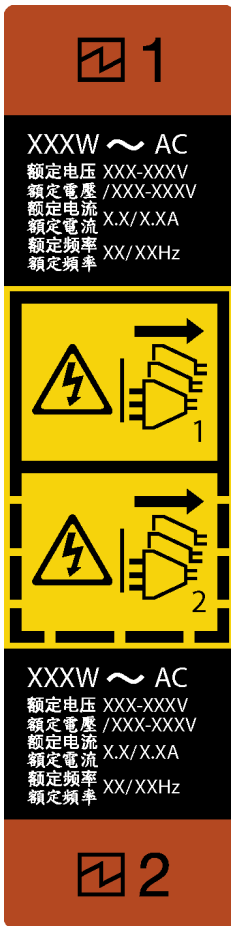


Figure 135. Hot-swap power supply label



在直流输入状态下，若电源供应器插座不支持热插拔功能，请务必不要对设备电源线进行热插拔，此操作可能导致设备损坏及数据丢失。因错误执行热插拔导致的设备故障或损坏，不属于保修范围。

NEVER CONNECT AND DISCONNECT THE POWER SUPPLY CABLE AND EQUIPMENT WHILE YOUR EQUIPMENT IS POWERED ON WITH DC SUPPLY (hot-plugging). Otherwise you may damage the equipment and result in data loss, the damages and losses result from incorrect operation of the equipment will not be covered by the manufacturers' warranty.

### Procedure

Step 1. If there is a power-supply-bay filler installed, remove it.

**Important:** To ensure proper cooling during normal server operation, both of the power supply bays must be occupied. This means that each bay must have a power supply installed; or one has a power supply installed and the other has a power-supply filler installed.

Step 2. Note the orientation of the hot-swap power supply; then, slide it into the chassis until it snaps into position.



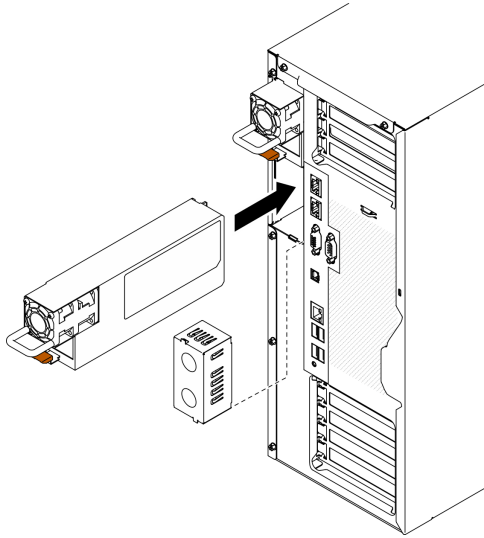


Figure 136. Hot-swap power supply installation

#### After you finish

1. Connect the power cable to the power supply and a properly grounded electrical outlet.
2. If the server is powered off, power on the server. Ensure that both the power input LED and the power output LED on the power supply are lit, indicating that the power supply is operating properly.
3. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

#### Demo video

[Watch the procedure on YouTube](#)

---

## Processor and heat sink replacement

Use this information to remove and install a processor and heat sink.

**Attention:** Before reusing a processor or heat sink, make sure you use Lenovo proven alcohol cleaning pad and thermal grease.


**Important:** The processor in your server can throttle in response to thermal conditions, temporarily lowering its speed to reduce heat output. In instances where a few processor cores are throttled for an extremely short time period (100 ms or less), the only indication might be an entry in the operating system event log with no corresponding entry in the system XCC event log. If this situation occurs, the event can be ignored and processor replacement is not required.

### Remove a processor and heat sink

This task has instructions for removing an assembled processor and heat sink, known as a processor-heat-sink module (PHM). This task requires a Torx T30 driver. This procedure must be executed by a trained technician.

#### About this task

**S002**

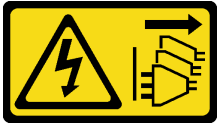

**CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

**Attention:**

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- Lay the server on its side for easier operation.
- Each processor socket must always contain a cover or a PHM. When removing or installing a PHM, protect empty processor sockets with a cover.
- Do not touch the processor socket or processor contacts. Processor-socket contacts are very fragile and easily damaged. Contaminants on the processor contacts, such as oil from your skin, can cause connection failures.
- Do not allow the thermal grease on the processor or heat sink to come in contact with anything. Contact with any surface can compromise the thermal grease, rendering it ineffective. Thermal grease can damage components, such as the electrical connectors in the processor socket.
- Remove and install only one PHM at a time. If the system board supports multiple processors, install the PHMs starting with the first processor socket.

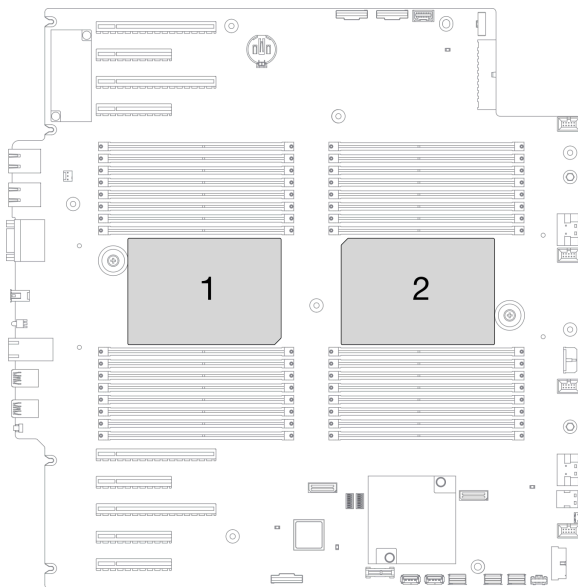


Figure 137. Processor locations on system board

**Note:** The heat sink, processor, and processor carrier for your system might be different from those shown in the illustrations.

The following illustration shows the components of the PHM.

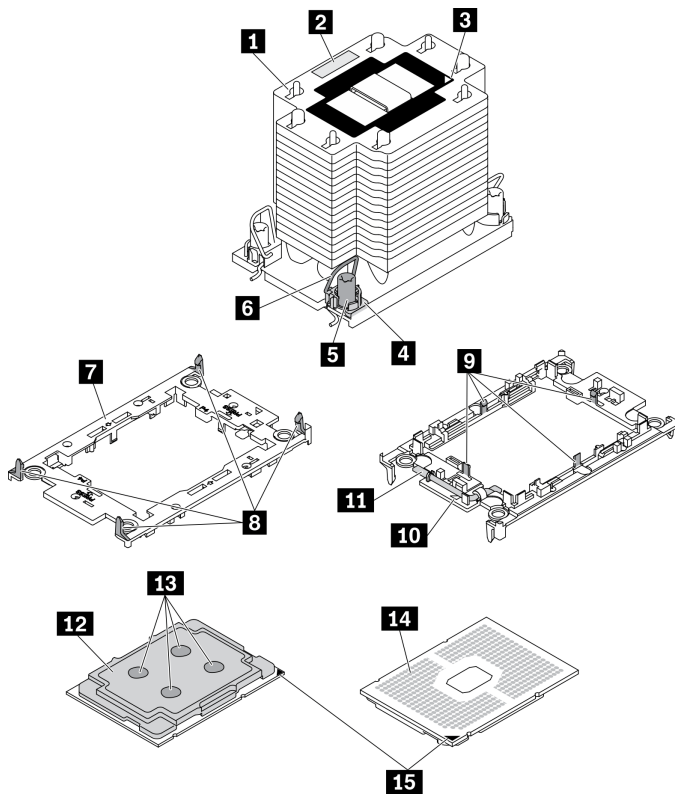


Figure 138. PHM components

<b>1</b> Heat sink	<b>9</b> Clips to secure processor in carrier
<b>2</b> Processor identification label	<b>10</b> Carrier triangular mark
<b>3</b> Heat sink triangular mark	<b>11</b> Processor ejector handle
<b>4</b> Nut and wire bail retainer	<b>12</b> Processor heat spreader
<b>5</b> Torx T30 nut	<b>13</b> Thermal grease
<b>6</b> Anti-tilt wire bail	<b>14</b> Processor contacts
<b>7</b> Processor carrier	<b>15</b> Processor triangular mark
<b>8</b> Clips to secure carrier to heat sink	

## Procedure

Step 1. Make preparations for this task.

- a. Remove the hot-swap redundant power supply. See [“Remove a hot-swap power supply” on page 177](#).
- b. Remove the server cover. See [“Remove the server cover” on page 197](#).
- c. Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).
- d. Remove the air baffle. See [“Remove the air baffle” on page 77](#).

Step 2. Remove the PHM from the system board.

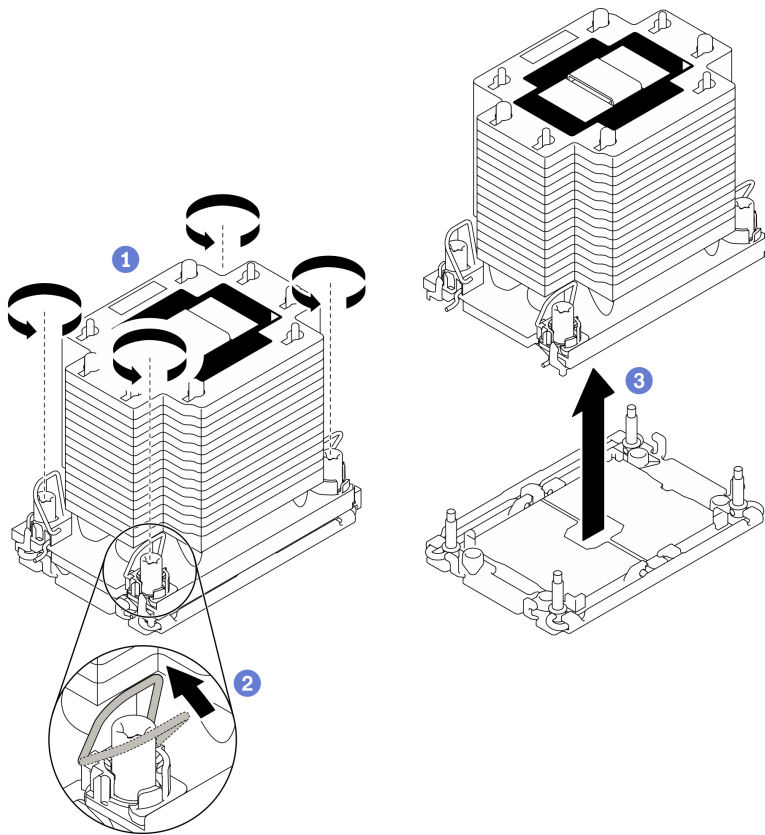


Figure 139. Removing a PHM

- a. ① Fully loosen the Torx T30 nuts on the PHM *in the removal sequence shown* on the heat-sink label.
- b. ② Rotate the anti-tilt wire bails inward.
- c. ③ Carefully lift the PHM from the processor socket. If the PHM cannot be fully lifted out of the socket, further loosen the Torx T30 nuts and try lifting the PHM again.

**Notes:**

- Do not touch the contacts on the bottom of the processor.
- Keep the processor socket clean from any object to prevent possible damages.

**After you finish**

- Each processor socket must always contain a cover or a PHM. Protect empty processor sockets with a cover or install a new PHM.
- If you are removing the PHM as part of a system board replacement, set the PHM aside.
- If you are reusing the processor or heat sink, separate the processor from its retainer. See [“Separate the processor from carrier and heat sink” on page 187](#)
- If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

**Demo video**


[Watch the procedure on YouTube](#)

## Separate the processor from carrier and heat sink

This task has instructions for separating a processor and its carrier from an assembled processor and heat sink, known as a processor-heat-sink module (PHM). This procedure must be executed by a trained technician.

### About this task

#### S002



#### **CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

#### **Attention:**

- Read “[Installation Guidelines](#)” on [page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- Do not touch the processor contacts. Contaminants on the processor contacts, such as oil from your skin, can cause connection failures.
- Do not allow the thermal grease on the processor or heat sink to come in contact with anything. Contact with any surface can compromise the thermal grease, rendering it ineffective. Thermal grease can damage components, such as the electrical connectors in the processor socket.

**Note:** The heat sink, processor, and processor carrier for your system might be different from those shown in the illustrations.

#### **Procedure**

Step 1. Separate the processor from the heat sink and carrier.

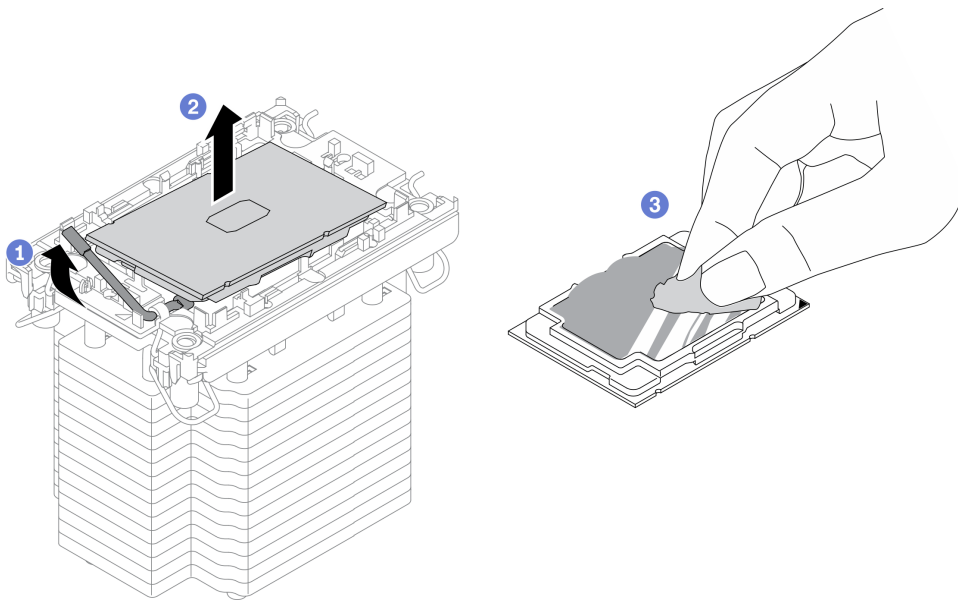


Figure 140. Separating a processor from the heat sink and carrier

**Note:** Do not touch the contacts on the processor.

- a. ① Lift the handle to release the processor from the carrier.
- b. ② Hold the processor by its edges; then, lift the processor from the heat sink and carrier.
- c. ③ Without putting the processor down, wipe the thermal grease from the top of the processor with an alcohol cleaning pad; then, place the processor on a static protective surface with the processor-contact side up.

Step 2. Separate the processor carrier from the heat sink.

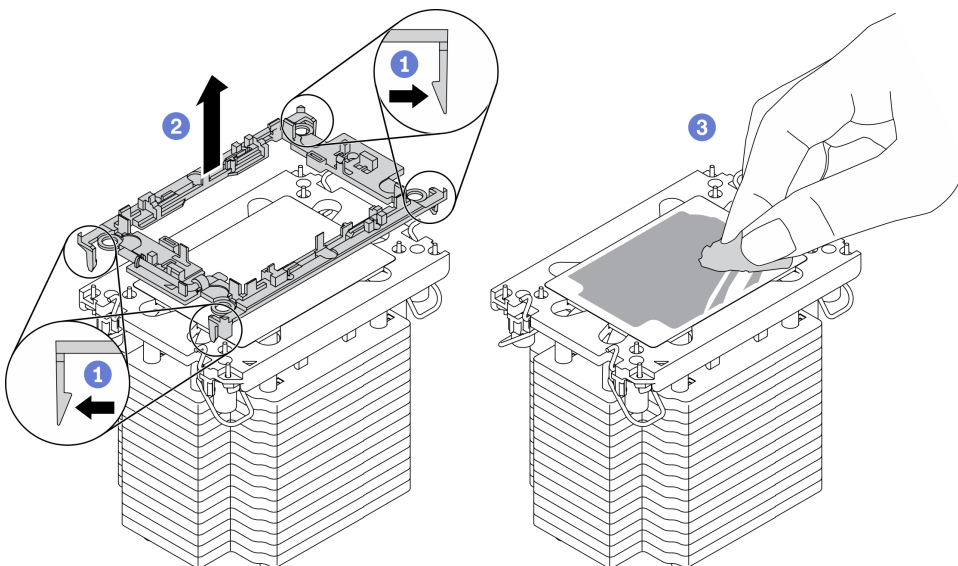


Figure 141. Separating a processor carrier from the heat sink

**Note:** The processor carrier will be discarded and replaced with a new one.

- a. ① Release the retaining clips from the heat sink.

- b. ② Lift the carrier from the heat sink.
- c. ③ Wipe the thermal grease from the bottom of the heat sink with an alcohol cleaning pad.

### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install a processor and heat sink

This task has instructions for installing an assembled processor and heat sink, known as a processor-heat-sink module (PHM). This task requires a Torx T30 driver. This procedure must be executed by a trained technician.

### About this task

#### S002



#### **CAUTION:**

**The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.**

#### **Attention:**

- Read “[Installation Guidelines](#)” on [page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- Each processor socket must always contain a cover or a PHM. When removing or installing a PHM, protect empty processor sockets with a cover.
- Do not touch the processor socket or processor contacts. Processor-socket contacts are very fragile and easily damaged. Contaminants on the processor contacts, such as oil from your skin, can cause connection failures.
- Do not allow the thermal grease on the processor or heat sink to come in contact with anything. Contact with any surface can compromise the thermal grease, rendering it ineffective. Thermal grease can damage components, such as the electrical connectors in the processor socket.
- Remove and install only one PHM at a time. If the system board supports multiple processors, install the PHMs starting with the first processor socket.

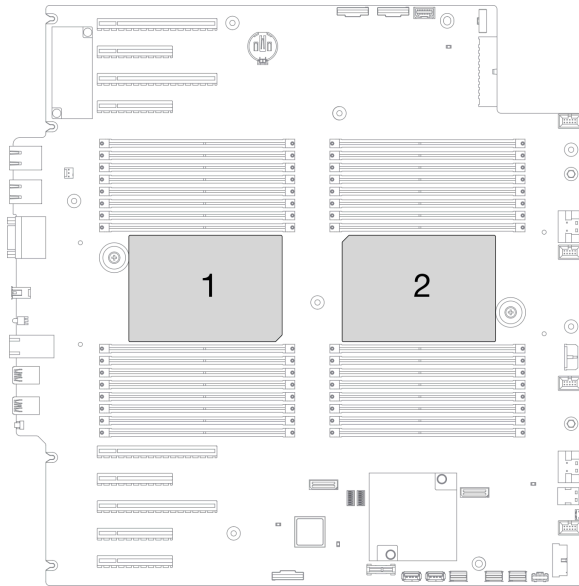


Figure 142. Processor locations on system board

**Notes:**

- The heat sink, processor, and processor carrier for your system might be different from those shown in the illustrations.
- PHMs are keyed for the socket where they can be installed and for their orientation in the socket.
- See <https://serverproven.lenovo.com/> for a list of processors supported for your server. All processors on the system board must have the same speed, number of cores, and frequency.
- Before you install a new PHM or replacement processor, update your system firmware to the latest level. See “Update the firmware” in the *ThinkSystem ST650 V2 Setup Guide*.
- Installing an additional PHM can change the memory requirements for your system. See “Technical rules for memory modules” in the *ThinkSystem ST650 V2 Setup Guide* for a list of processor-to-memory relationships.

The following illustration shows the components of the PHM.



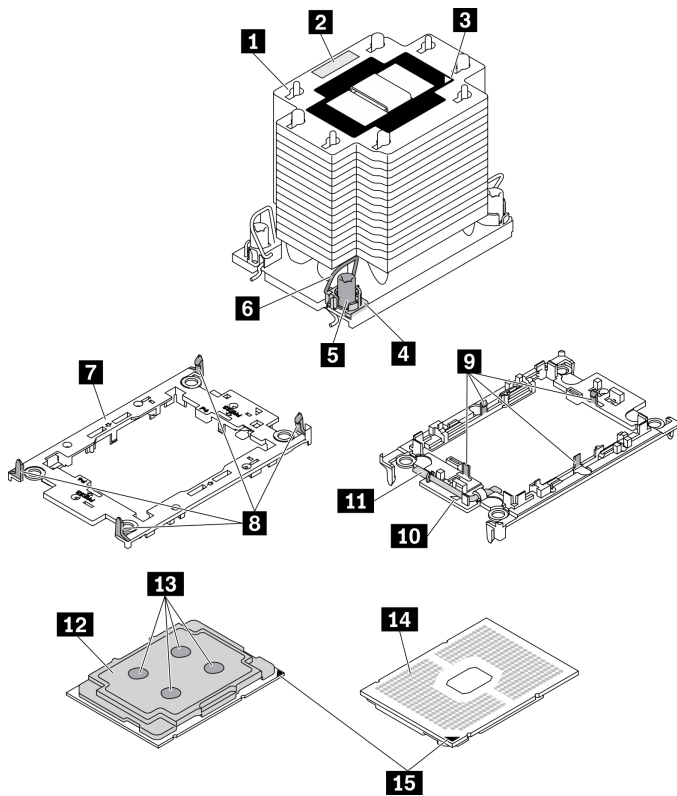


Figure 143. PHM components

<b>1</b> Heat sink	<b>9</b> Clips to secure processor in carrier
<b>2</b> Processor identification label	<b>10</b> Carrier triangular mark
<b>3</b> Heat sink triangular mark	<b>11</b> Processor ejector handle
<b>4</b> Nut and wire bail retainer	<b>12</b> Processor heat spreader
<b>5</b> Torx T30 nut	<b>13</b> Thermal grease
<b>6</b> Anti-tilt wire bail	<b>14</b> Processor contacts
<b>7</b> Processor carrier	<b>15</b> Processor triangular mark
<b>8</b> Clips to secure carrier to heat sink	

## Procedure

Step 1. If you are replacing a processor and reusing the heat sink.

- a. Remove the processor identification label from the heat sink and replace it with the new label that comes with the replacement processor.
- b. If there is any old thermal grease on the heat sink, wipe the thermal grease from the bottom of the heat sink with an alcohol cleaning pad.

Step 2. If you are replacing a heat sink and reusing the processor.

- a. Remove the processor identification label from the old heat sink and place it on the new heat sink in the same location.

**Note:** If you are unable to remove the label and place it on the new heat sink, or if the label is damaged during transfer, write the processor serial number from the processor identification

label on the new heat sink in the same location as the label would be placed using a permanent marker.

- b. Install processor in new carrier.

**Note:** Replacement heat sinks come with both gray and black processor carriers. Make sure to use the carrier with the same color as the one you discarded earlier.

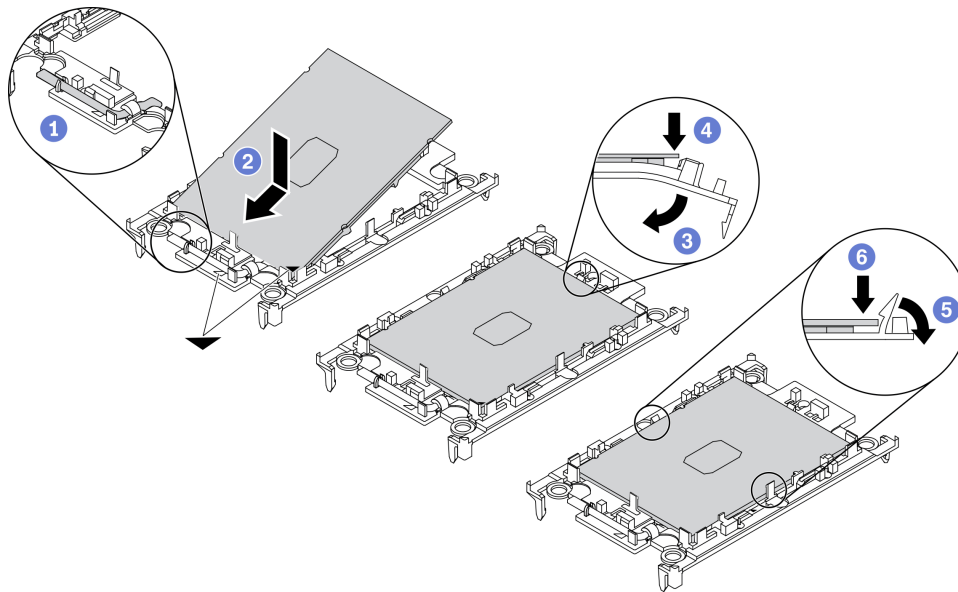


Figure 144. Installing a processor carrier

1. 1 Make sure the handle on the carrier is in the closed position.
2. 2 Align the processor on the new carrier so that the triangular marks align; then, insert the marked end of the processor into the carrier.
3. 3 Hold the inserted end of the processor in place; then, pivot the unmarked end of the carrier down and away from the processor.
4. 4 Press the processor and secure the unmarked end under the clip on the carrier.
5. 5 Carefully pivot the sides of the carrier down and away from the processor.
6. 6 Press the processor and secure the sides under the clips on the carrier.

**Note:** To prevent the processor from falling out of the carrier, keep the processor-contact side up and hold the processor-carrier assembly by the sides of the carrier.

### Step 3. Apply thermal grease.

- a. Carefully place the processor and carrier in the shipping tray with the processor-contact side down. Make sure the triangular mark on the carrier is aligned with the triangular mark in the shipping tray.
- b. If there is any old thermal grease on the processor, gently wipe the top of the processor with an alcohol cleaning pad.

**Note:** Make sure the alcohol has fully evaporated before applying new thermal grease.

- c. Apply the thermal grease on the top of the processor with syringe by forming four uniformly spaced dots, while each dot consists of about 0.1 ml of thermal grease.

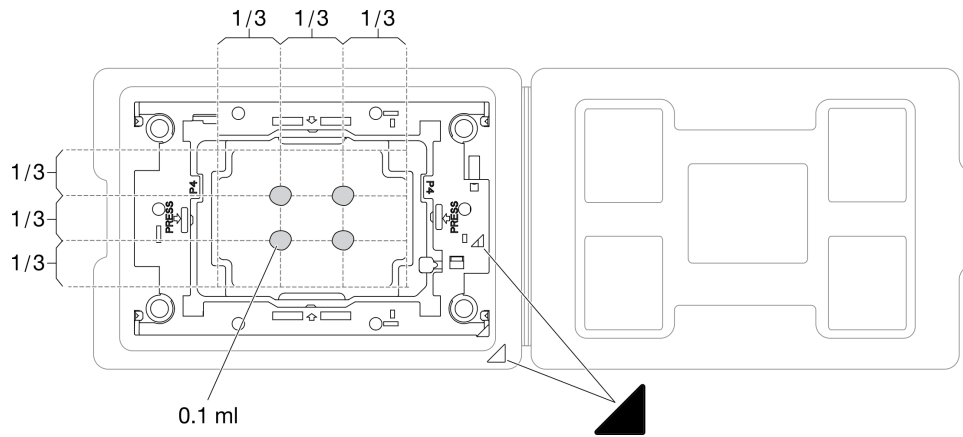


Figure 145. Thermal grease application with processor in shipping tray

Step 4. Assemble the processor and heat sink.

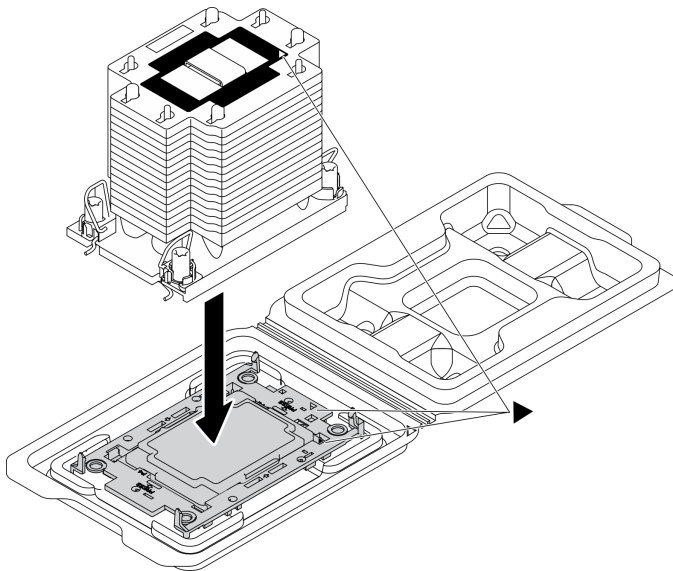


Figure 146. Assembling the PHM with processor in shipping tray

- a. Align the triangular mark on the heat sink label with the triangular mark on the processor carrier and processor.
- b. Install the heat sink onto the processor-carrier.
- c. Press the carrier into place until the clips at all four corners engage.

Step 5. Install the processor-heat-sink module into the system board socket.

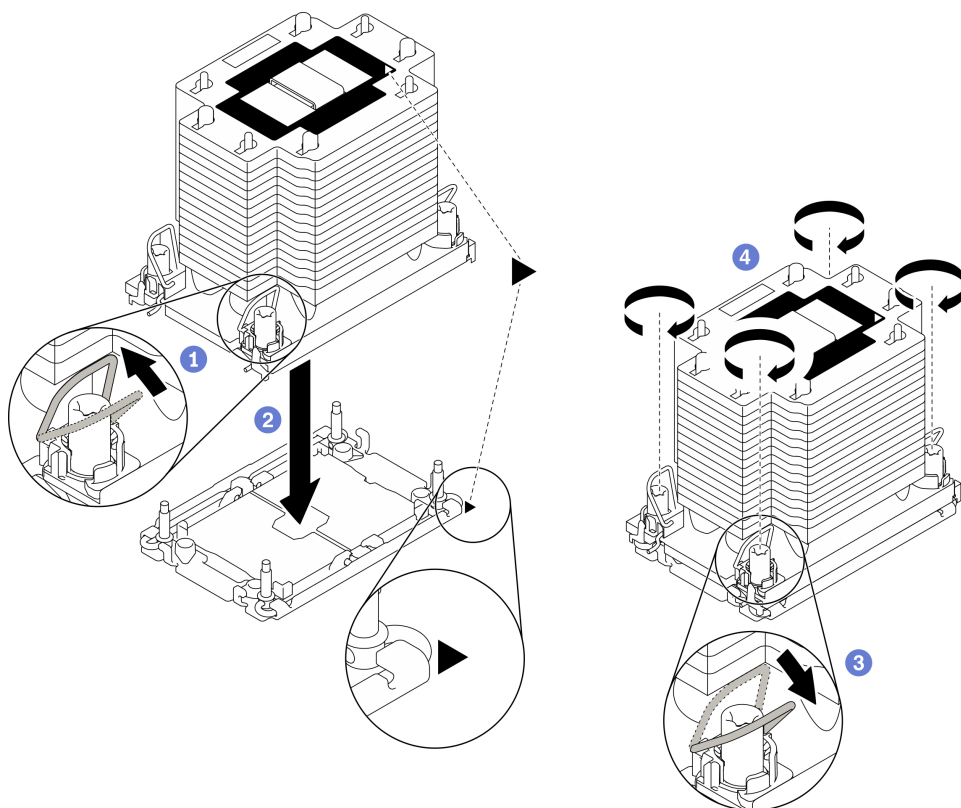


Figure 147. Installing a PHM

- a. ❶ Rotate the anti-tilt wire bails inward.
- b. ❷ Align the triangular mark and four Torx T30 nuts on the PHM with the triangular mark and threaded posts of the processor socket; then, insert the PHM into the processor socket.
- c. ❸ Rotate the anti-tilt wire bails outward until they engage with the hooks in the socket.
- d. ❹ Fully tighten the Torx T30 nuts *in the installation sequence shown* on the heat-sink label. Tighten the screws until they stop; then, visually inspect to make sure that there is no gap between the screw shoulder beneath the heat sink and the processor socket. (For reference, the torque required for the fasteners to fully tighten is 1.1 newton-meters, 10 inch-pounds).

### After you finish

1. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
2. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).
3. Reinstall the server cover. See [“Install the server cover” on page 199](#).
4. Reinstall the hot-swap redundant power supply. See [“Install the hot-swap power supply” on page 180](#).
5. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

### Demo video

[Watch the procedure on YouTube](#)

---

## Front door replacement

Use this information to remove and install the security door.

**Note:** This section applies only to server models that have a security door installed.

## Remove the security door

Use this information to remove the security door.

### About this task

#### S033



#### CAUTION:

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

#### Procedure

Step 1. Remove the security door.

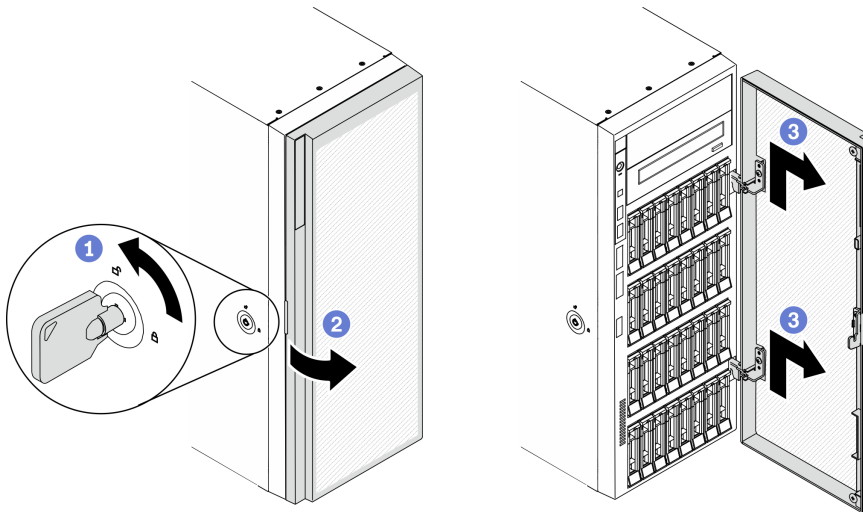


Figure 148. Security door removal

- a. ① Use the key attached on the rear of the server to turn the cover lock to the unlocked position.
- b. ② Open the security door.
- c. ③ Lift the security door slightly upwards until you can completely remove it.

#### After you finish

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

### Demo video

[Watch the procedure on YouTube](#)

## Install the security door

Use this information to install the security door.

### About this task

#### S033



#### CAUTION:

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

#### Attention:

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

### Procedure

Step 1. Install the security door.

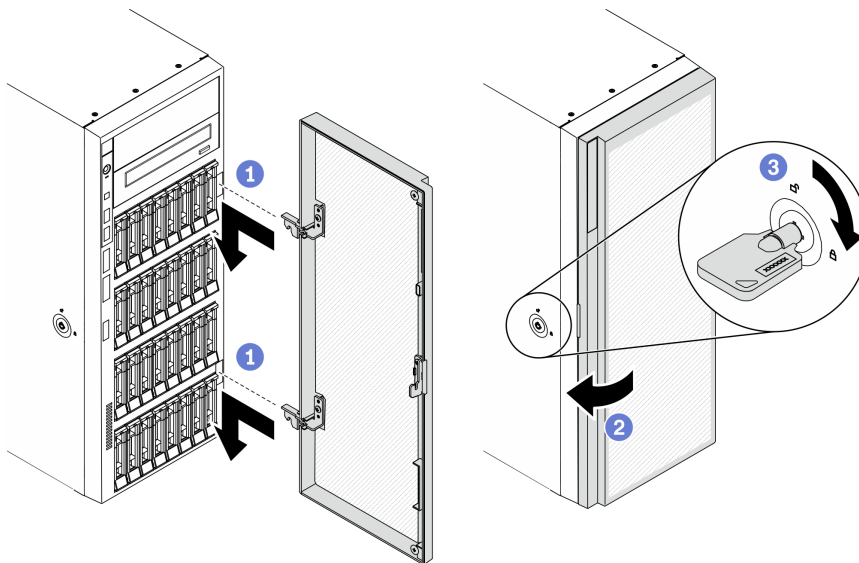


Figure 149. Security door installation

- a. ① Align the two hooks on the security door with the corresponding holes in the front bezel; then, move the security door inwards and then pull it slightly downwards until it is secured in place by the hooks.
- b. ② Close the security door.
- c. ③ Lock the server cover.

### After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

### Demo video

[Watch the procedure on YouTube](#)

---

## Server cover replacement

Use this information to remove and install the server cover.

### Remove the server cover

Use this information to remove the server cover.

#### About this task

##### S014



#### CAUTION:

Hazardous voltage, current, and energy levels might be present. Only a qualified service technician is authorized to remove the covers where the label is attached.

##### S017



#### CAUTION:

Hazardous moving fan blades nearby. Keep fingers and other body parts away.

##### S033



#### CAUTION:

Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.

**Attention:**

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.

**Procedure**

Step 1. Remove the server cover.

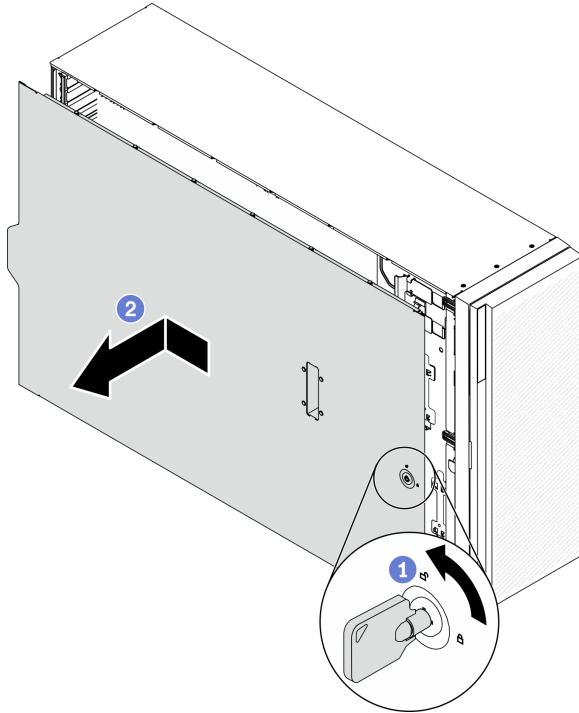


Figure 150. Server cover removal

**Attention:** For proper cooling, always install the server cover before powering on the server. Operating the server without the cover properly installed might result in server component damage.

- a. ① Use the key attached on the rear of the server to turn the cover lock to the unlocked position.
- b. ② Slide the server cover towards the rear of the server until the server cover is disengaged from the chassis. Then, lift the server cover off the chassis and place it on a flat clean surface.

**After you finish**

If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

**Demo video**

[Watch the procedure on YouTube](#)



## Install the server cover

Use this information to install the server cover.

### About this task

#### S014



#### **CAUTION:**

**Hazardous voltage, current, and energy levels might be present. Only a qualified service technician is authorized to remove the covers where the label is attached.**

#### S017



#### **CAUTION:**

**Hazardous moving fan blades nearby. Keep fingers and other body parts away.**

#### S033



#### **CAUTION:**

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

#### **Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- Ensure that all adapters and other components are installed and seated correctly and that you have not left loose tools or parts inside the server.
- Ensure that all internal cables are correctly routed. See [Chapter 3 “Internal cable routing” on page 49](#).
- If you are installing a new server cover, attach the service label to the inside of the new server cover first if necessary.

**Note:** A new server cover comes without a service label attached. If you need a service label, order it together with the new server cover. The service label is free of charge.

### **Procedure**

Step 1. Install the server cover.

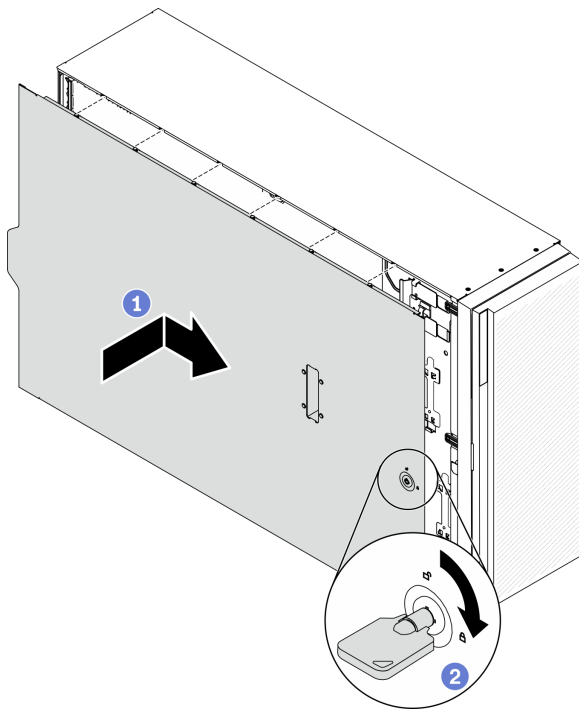


Figure 151. Server cover installation

**Note:** Before you slide the cover forward, ensure that all the tabs of the cover engage the chassis correctly. If all the tabs do not engage the chassis correctly, it will be very difficult to remove the cover later.

- a. ① Lower the server cover onto the chassis until all tabs on both sides of the server cover engage the chassis. Then, slide the server cover towards the front of the chassis until the server cover stops and the front edge of the cover aligns with the edge of the front bezel.
- b. ② Use the key to turn the cover lock to the locked position.

### After you finish

Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).

### Demo video

[Watch the procedure on YouTube](#)

---

## System board replacement (trained technician only)

Use this information to remove and install the system board.

**Note:** This task must be operated by trained technicians.

### Remove the system board

Use this information to remove the system board.

### About this task

#### S002

**CAUTION:**

The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

**Attention:**

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

**Procedure**

Step 1. Make preparations for this task.

- a. Record all system configuration information, such as Lenovo XClarity Controller IP addresses, vital product data, and the machine type, model number, serial number, Universally Unique Identifier, and asset tag of the server.
- b. Save the system configuration to an external device with Lenovo XClarity Essentials.
- c. Save the system event log to external media.
- d. Remove the server cover. See [“Remove the server cover” on page 197](#).
- e. Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).
- f. Remove the air baffle. See [“Remove the air baffle” on page 77](#).
- g. Remove all the PCIe adapters. See [“Remove a PCIe adapter” on page 167](#).
- h. Remove all the full-length GPU adapters. See [“Remove a full-length GPU adapter” on page 115](#).
- i. Remove all the fans. See [“Remove a hot-swap fan” on page 97](#).
- j. Remove the fan cage. See [“Remove the fan cage assembly” on page 100](#).
- k. Remove the intrusion switch. See [“Remove the intrusion switch” on page 129](#).
- l. Remove the CMOS battery. See [“Remove the CMOS battery \(CR2032\)” on page 81](#).
- m. Label the slot number on each memory module, then remove all the memory modules from the system board and set them aside on a static-protective surface for reinstallation. See [“Remove a memory module” on page 140](#).
- n. Remove the processor and the heat sink. See [“Remove a processor and heat sink” on page 183](#).
- o. Make note of where the cables are connected to the system board; then, disconnect all the cables.

**Note:** Disengage all latches, cable clips, release tabs, or locks on cable connectors beforehand. Failing to release them before removing the cables will damage the cable

connectors on the system board. Any damage to the cable connectors may require replacing the system board.

Step 2. Remove the nine screws that secure the system board.

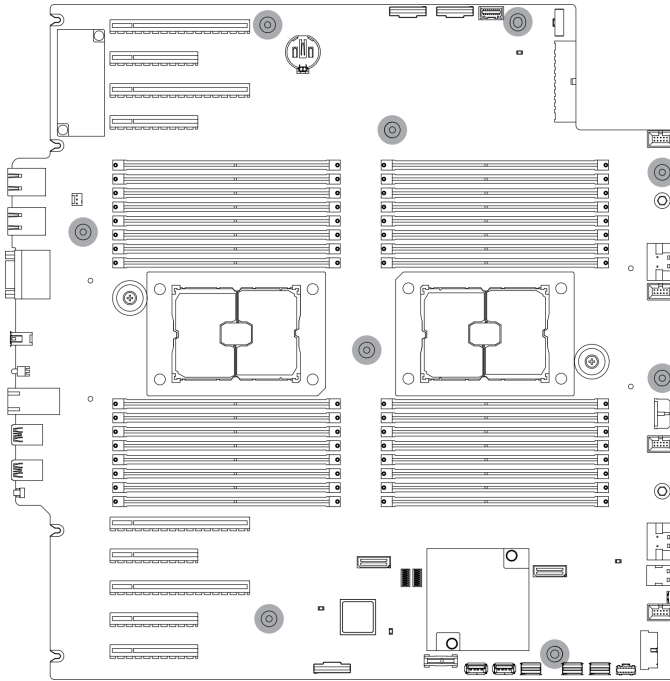


Figure 152. System board screws removal

Step 3. Move the system board towards the front of the server. Ensure that the rear connectors on the system board are disengaged from the corresponding holes in the rear panel.

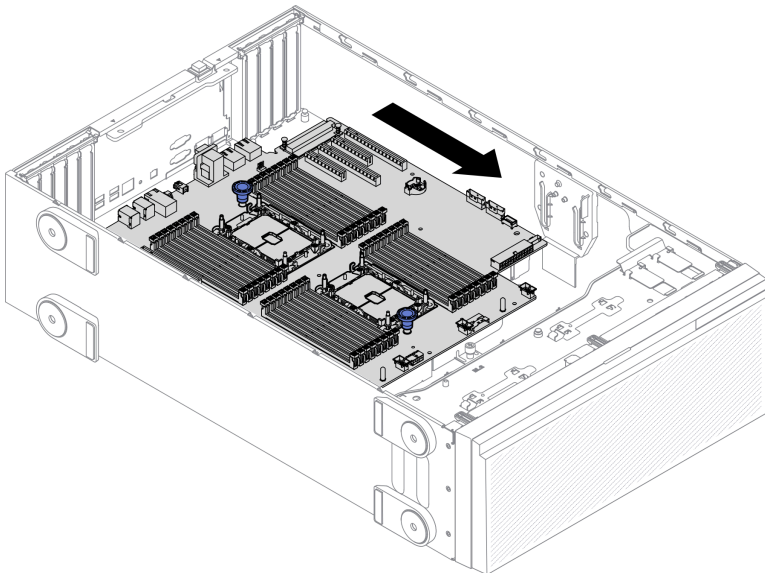


Figure 153. Disengaging the system board from chassis

Step 4. Grasp the plungers and remove the system board in the direction as shown.

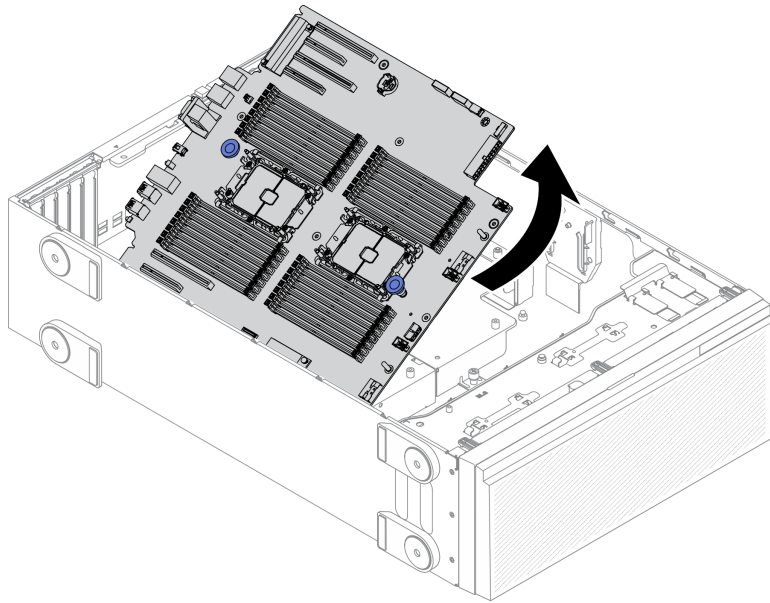


Figure 154. System board removal

Step 5. Place the old system board on a clean, flat, and static-protective surface.

#### After you finish

- Install a system board. See [“Install the system board” on page 203](#).
- If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

**Important:** Before you return the system board, make sure that you install the processor socket dust covers from the new system board. To replace a processor socket dust cover:

1. Take a dust cover from the processor socket assembly on the new system board and orient it correctly above the processor socket assembly on the removed system board.
2. Gently press down the dust cover legs to the processor socket assembly, pressing on the edges to avoid damage to the socket pins. You might hear a click on the dust cover is securely attached.
3. **Make sure** that the dust cover is securely attached to the processor socket assembly.

#### Demo video

[Watch the procedure on YouTube](#)

## Install the system board

Use this information to install the system board.

#### About this task

#### S002



**CAUTION:**


The power-control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

**Attention:**

- Read “[Installation Guidelines](#)” on page 59 to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

**Procedure**

Step 1. Grasp the system board by the plungers and gently lower the system board into the chassis as shown.

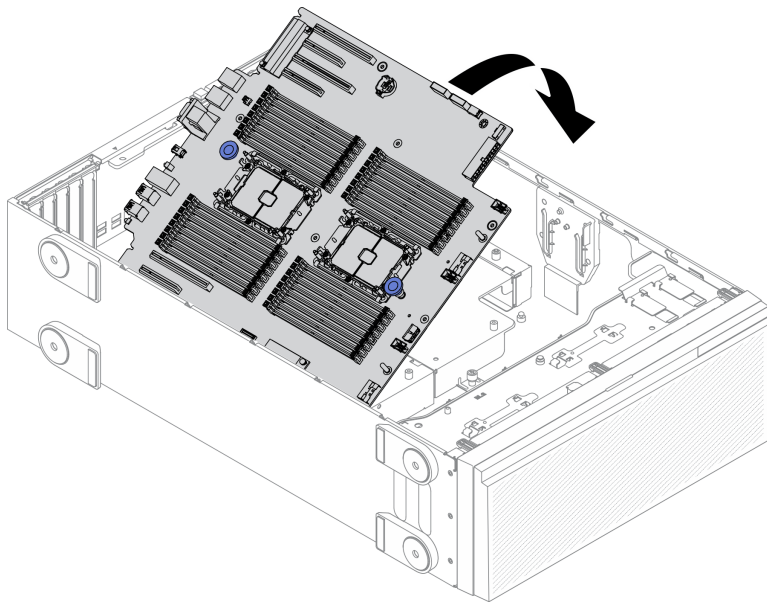

*Figure 155. System board installation*

Step 2. Move the system board towards the rear of the server. Ensure that the rear connectors on the new system board are inserted into the corresponding holes in the rear panel.

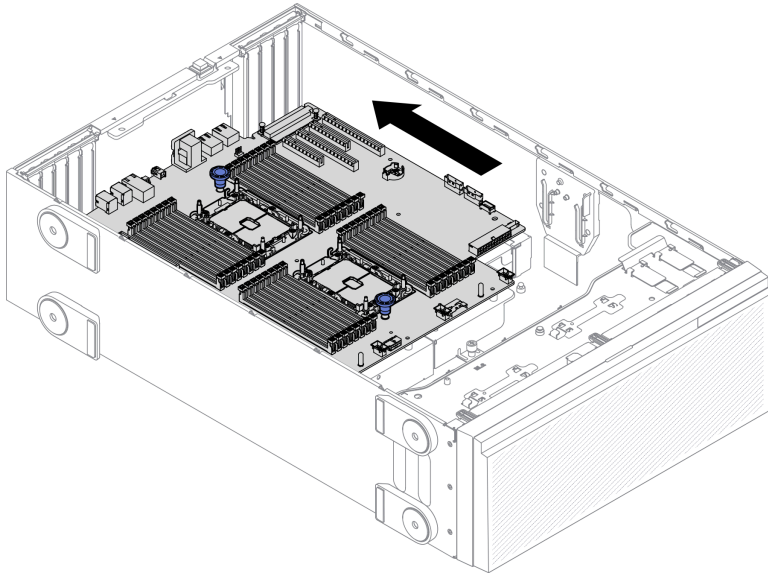


Figure 156. Engaging the system board to chassis

Step 3. Install the nine screws to secure the system board in place.

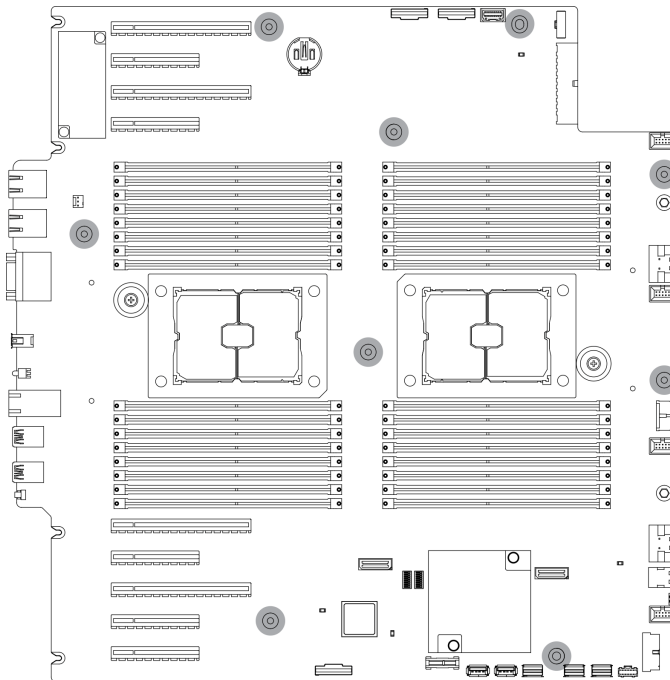


Figure 157. System board screws installation

#### After you finish

1. Reconnect all the required cables. See [Chapter 3 “Internal cable routing” on page 49](#).
2. Reinstall the processor and the heat sink. See [“Install a processor and heat sink” on page 189](#).
3. Reinstall all the memory modules. See [“Install a memory module” on page 142](#).
4. Reinstall the CMOS battery. See [“Install the CMOS battery \(CR2032\)” on page 83](#).
5. Reinstall the intrusion switch. See [“Install the intrusion switch” on page 131](#).

6. Reinstall the fan cage. See [“Install the fan cage assembly” on page 101](#).
7. Reinstall all the fans. See [“Install a hot-swap fan” on page 99](#).
8. Reinstall all the full-length GPU adapters. See [“Install a full-length GPU adapter” on page 117](#).
9. Reinstall all the PCIe adapters. See [“Install a PCIe adapter” on page 168](#).
10. Reinstall the air baffle. See [“Install the air baffle” on page 79](#).
11. Reinstall all the flash power modules. See [“Install a flash power module” on page 105](#).
12. Reinstall the server cover. See [“Install the server cover” on page 199](#).
13. Complete the parts replacement. See [“Complete the parts replacement” on page 214](#).
14. Update the machine type and serial number with new vital product data (VPD). Use the Lenovo XClarity Provisioning Manager to update the machine type and serial number. See [“Update the machine type and serial number” on page 206](#).
15. Enable TPM/TCM. See [“Enable TPM/TCM” on page 208](#).
16. Optionally, enable Secure Boot. See [“Enable UEFI Secure Boot” on page 210](#).

### Demo video

[Watch the procedure on YouTube](#)

## Update the machine type and serial number

After the system board is replaced by trained service technicians, the machine type and serial number must be updated.

There are two methods available to update the machine type and serial number:

- From Lenovo XClarity Provisioning Manager

To update the machine type and serial number from Lenovo XClarity Provisioning Manager:

1. Start the server and press the key according to the on-screen instructions to display the Lenovo XClarity Provisioning Manager interface.
2. If the power-on Administrator password is required, enter the password.
3. From the System Summary page, click **Update VPD**.
4. Update the machine type and serial number.

- From Lenovo XClarity Essentials OneCLI

Lenovo XClarity Essentials OneCLI sets the machine type and serial number in the Lenovo XClarity Controller. Select one of the following methods to access the Lenovo XClarity Controller and set the machine type and serial number:

- Operate from the target system, such as LAN or keyboard console style (KCS) access
- Remote access to the target system (TCP/IP based)

To update the machine type and serial number from Lenovo XClarity Essentials OneCLI:

1. Download and install Lenovo XClarity Essentials OneCLI.

To download Lenovo XClarity Essentials OneCLI, go to the following site:

<https://datacentersupport.lenovo.com/solutions/HT116433>

2. Copy and unpack the OneCLI package, which also includes other required files, to the server. Make sure that you unpack the OneCLI and the required files to the same directory.



3. After you have Lenovo XClarity Essentials OneCLI in place, type the following commands to set the machine type and serial number:

```
onecli config set SYSTEM_PROD_DATA.SysInfoProdName <m/t_model> [access_method]
onecli config set SYSTEM_PROD_DATA.SysInfoSerialNum <s/n> [access_method]
onecli config set SYSTEM_PROD_DATA.SysInfoProdIdentifier <system model> [access_method]
onecli config set SYSTEM_PROD_DATA.SysInfoProdIdentifierEx <system model> --override [access_method]
```

Where:

*<m/t\_model>*

The server machine type and model number. Type xxxxyyy, where xxxx is the machine type and yyy is the server model number.

*<s/n>*

The serial number on the server. Type zzzzzzz, where zzzzzzz is the serial number.

*<system model>*

The system model. Type system yyyyyyyy, where yyyyyyyy is the product identifier.

*[access\_method]*

The access method that you select to use from the following methods:

- Online authenticated LAN access, type the command:  
[`--bmc-username <xcc_user_id> --bmc-password <xcc_password>`]

Where:

*xcc\_user\_id*

The BMC/IMM/XCC account name (1 of 12 accounts). The default value is USERID.

*xcc\_password*

The BMC/IMM/XCC account password (1 of 12 accounts).

Example commands are as follows:

```
onecli config set SYSTEM_PROD_DATA.SysInfoProdName <m/t_model> --bmc-username <xcc_user_id>
--bmc-password <xcc_password>
onecli config set SYSTEM_PROD_DATA.SysInfoSerialNum <s/n> --bmc-username <xcc_user_id> --bmc-
password <xcc_password>
onecli config set SYSTEM_PROD_DATA.SysInfoProdIdentifier <system model> --bmc-username xcc_user_
id --bmc-password xcc_password
onecli config set SYSTEM_PROD_DATA.SysInfoProdIdentifierEx <system model> --override --bmc-
username xcc_user_id --bmc-password xcc_password
```

- Online KCS access (unauthenticated and user restricted):

You do not need to specify a value for *access\_method* when you use this access method.

Example commands are as follows:

```
onecli config set SYSTEM_PROD_DATA.SysInfoProdName <m/t_model>
onecli config set SYSTEM_PROD_DATA.SysInfoSerialNum <s/n>
onecli config set SYSTEM_PROD_DATA.SysInfoProdIdentifier <system model>
onecli config set SYSTEM_PROD_DATA.SysInfoProdIdentifierEx <system model> --override
```

**Note:** The KCS access method uses the IPMI/KCS interface, which requires that the IPMI driver be installed.

- Remote LAN access, type the command:  
[`--bmc <xcc_user_id>:<xcc_password>@<xcc_external_ip>`]

Where:

*xcc\_external\_ip*

The BMC/IMM/XCC IP address. There is no default value. This parameter is required.

*xcc\_user\_id*

The BMC/IMM/XCC account (1 of 12 accounts). The default value is USERID.

*xcc\_password*

The BMC/IMM/XCC account password (1 of 12 accounts).

**Note:** BMC, IMM, or XCC internal LAN/USB IP address, account name, and password are all valid for this command.

Example commands are as follows:

```
onecli config set SYSTEM_PROD_DATA.SysInfoProdName <m/t_model> --bmc <xcc_user_id>:<xcc_
password>@<xcc_external_ip>
onecli config set SYSTEM_PROD_DATA.SysInfoSerialNum <s/n> --bmc <xcc_user_id>:<xcc_
password>@<xcc_external_ip>
```

```
onecli config set SYSTEM_PROD_DATA.SysInfoProdIdentifier <system model> --bmc xcc_user_id:xcc_
password@xcc_external_ip
onecli config set SYSTEM_PROD_DATA.SysInfoProdIdentifierEx <system model> --override --bmc xcc_
user_id:xcc_password@xcc_external_ip
```

4. Reset the Lenovo XClarity Controller to the factory defaults. See “Resetting the BMC to Factory Default” section in the XCC documentation compatible with your server at [https://sysmgt.lenovofiles.com/help/topic/lxcc\\_frontend/lxcc\\_overview.html](https://sysmgt.lenovofiles.com/help/topic/lxcc_frontend/lxcc_overview.html).

## Enable TPM/TCM

The server supports Trusted Platform Module (TPM).

**Note:** For customers in the Chinese Mainland, integrated TPM is not supported. However, customers in the Chinese Mainland can install a Trusted Cryptographic Module (TCM) adapter or a TPM adapter (sometimes called a daughter card).

When a system board is replaced, you must make sure that the TPM/TCM policy is set correctly.

### CAUTION:

**Take special care when setting the TPM/TCM policy. If it is not set correctly, the system board can become unusable.**

## Set the TPM policy

By default, a replacement system board is shipped with the TPM policy set to **undefined**. You must modify this setting to match the setting that was in place for the system board that is being replaced.

There are two methods available to set the TPM policy:

- From Lenovo XClarity Provisioning Manager

To set the TPM policy from Lenovo XClarity Provisioning Manager:

1. Start the server and press the key according to the on-screen instructions to display the Lenovo XClarity Provisioning Manager interface.
2. If the power-on Administrator password is required, enter the password.
3. From the System Summary page, click **Update VPD**.
4. Set the policy to one of the following settings.
  - **NationZ TPM 2.0 enabled - China only**. Customers in the Chinese Mainland should choose this setting if a NationZ TPM 2.0 adapter is installed.
  - **TPM enabled - ROW**. Customers outside of the Chinese Mainland should choose this setting.

- **Permanently disabled.** Customers in the Chinese Mainland should use this setting if no TPM adapter is installed.

**Note:** Although the setting **undefined** is available as a policy setting, it should not be used.

- From Lenovo XClarity Essentials OneCLI

**Note:** Please note that a Local IPMI user and password must be setup in Lenovo XClarity Controller for remote accessing to the target system.

To set the TPM policy from Lenovo XClarity Essentials OneCLI:

1. Read TpmTcmPolicyLock to check whether the TPM\_TCM\_POLICY has been locked:  
`OneCli.exe config show imm.TpmTcmPolicyLock --override --imm <userid>:<password>@<ip_address>`

**Note:** The imm.TpmTcmPolicyLock value must be 'Disabled', which means TPM\_TCM\_POLICY is NOT locked and changes to the TPM\_TCM\_POLICY are permitted. If the return code is 'Enabled' then no changes to the policy are permitted. The planar may still be used if the desired setting is correct for the system being replaced.

2. Configure the TPM\_TCM\_POLICY into XCC:
  - For customers in Chinese Mainland with no TPM, or customers that require to disable TPM:  
`OneCli.exe config set imm.TpmTcmPolicy "NeitherTpmNorTcm" --override --imm <userid>:<password>@<ip_address>`
  - For customers in Chinese Mainland that require to enable TPM:  
`OneCli.exe config set imm.TpmTcmPolicy "NationZTPM20Only" --override --imm <userid>:<password>@<ip_address>`
  - For customers outside Chinese Mainland that require to enable TPM:  
`OneCli.exe config set imm.TpmTcmPolicy "TpmOnly" --override --imm <userid>:<password>@<ip_address>`
3. Issue reset command to reset system:  
`OneCli.exe misc ospower reboot --imm <userid>:<password>@<ip_address>`
4. Read back the value to check whether the change has been accepted:  
`OneCli.exe config show imm.TpmTcmPolicy --override --imm <userid>:<password>@<ip_address>`

**Notes:**

- If the read back value is matched it means the TPM\_TCM\_POLICY has been set correctly.

imm.TpmTcmPolicy is defined as below:

- Value 0 use string "Undefined", which means UNDEFINED policy.
- Value 1 use string "NeitherTpmNorTcm", which means TPM\_PERM\_DISABLED.
- Value 2 use string "TpmOnly", which means TPM\_ALLOWED.
- Value 4 use string "NationZTPM20Only", which means NationZ\_TPM20\_ALLOWED.
- Below 4 steps must also be used to 'lock' the TPM\_TCM\_POLICY when using OneCli/ASU commands:

5. Read TpmTcmPolicyLock to check whether the TPM\_TCM\_POLICY has been locked, command as below:

`OneCli.exe config show imm.TpmTcmPolicyLock --override --imm <userid>:<password>@<ip_address>`

The value must be 'Disabled', it means TPM\_TCM\_POLICY is NOT locked and must be set.

6. Lock the TPM\_TCM\_POLICY:  
`OneCli.exe config set imm.TpmTcmPolicyLock "Enabled" --override --imm <userid>:<password>@<ip_address>`
7. Issue reset command to reset system, command as below:  
`OneCli.exe misc ospower reboot --imm <userid>:<password>@<ip_address>`

During the reset, UEFI will read the value from `imm.TpmTcmPolicyLock`, if the value is 'Enabled' and the `imm.TpmTcmPolicy` value is valid, UEFI will lock the `TPM_TCM_POLICY` setting.

**Note:** The valid values for `imm.TpmTcmPolicy` include 'NeitherTpmNorTcm', 'TpmOnly', and 'NationZTPM20Only'.

If the `imm.TpmTcmPolicyLock` is set as 'Enabled' but `imm.TpmTcmPolicy` value is invalid, UEFI will reject the 'lock' request and change `imm.TpmTcmPolicyLock` back to 'Disabled'.

8. Read back the value to check whether the 'Lock' is accepted or rejected. Command as below:  
`OneCli.exe config show imm.TpmTcmPolicy --override --imm <userid>:<password>@<ip_address>`

**Note:** If the read back value is changed from 'Disabled' to 'Enabled' that means the `TPM_TCM_POLICY` has been locked successfully. There is no method to unlock a policy once it has been set other than replacing system board.

`imm.TpmTcmPolicyLock` is defined as below:

Value 1 uses string "Enabled" , which means lock the policy. Other values are not accepted.

## Enable UEFI Secure Boot

Optionally, you can enable UEFI Secure Boot.

There are two methods available to enable UEFI Secure Boot:

- From Lenovo XClarity Provisioning Manager

To enable UEFI Secure Boot from Lenovo XClarity Provisioning Manager:

1. Start the server and press the key specified in the on-screen instructions to display the Lenovo XClarity Provisioning Manager interface. (For more information, see the "Startup" section in the LXPM documentation compatible with your server at [https://sysmgmt.lenovofiles.com/help/topic/lxpm\\_frontend/lxpm\\_product\\_page.html](https://sysmgmt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html).)
2. If the power-on Administrator password is required, enter the password.
3. From the UEFI Setup page, click **System Settings** → **Security** → **Secure Boot**.
4. Enable Secure Boot and save the settings.

- From Lenovo XClarity Essentials OneCLI

To enable UEFI Secure Boot from Lenovo XClarity Essentials OneCLI:

1. Download and install Lenovo XClarity Essentials OneCLI.

To download Lenovo XClarity Essentials OneCLI, go to the following site:

<https://datacentersupport.lenovo.com/solutions/HT116433>

2. Run the following command to enable Secure Boot:  
`OneCli.exe config set SecureBootConfiguration.SecureBootSetting Enabled --bmc <userid>:<password>@<ip_address>`

where:

- `<userid>:<password>` are the credentials used to access the BMC (Lenovo XClarity Controller interface) of your server. The default user ID is `USERID`, and the default password is `PASSWORD` (zero, not an uppercase o)
- `<ip_address>` is the IP address of the BMC.

For more information about the Lenovo XClarity Essentials OneCLI `set` command, see:

[http://sysmgmt.lenovofiles.com/help/topic/toolstr\\_cli\\_lenovo/onecli\\_r\\_set\\_command.html](http://sysmgmt.lenovofiles.com/help/topic/toolstr_cli_lenovo/onecli_r_set_command.html)

**Note:** If disabling UEFI secure boot is needed, run the following command:

```
OneCli.exe config set SecureBootConfiguration.SecureBootSetting Disabled --bmc <userid>:<password>@<ip_
address>
```

---

## T4 filler replacement

Use this information to remove and install the T4 filler.

### Remove a T4 filler

Use this information to remove a T4 filler.

#### About this task

##### S017



#### CAUTION:

**Hazardous moving fan blades nearby. Keep fingers and other body parts away.**

##### S033



#### CAUTION:

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**

#### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

**Note:** If you have installed a T4 GPU adapter, install a T4 filler onto the server cover for proper cooling and airflow.

#### Procedure

- Step 1. Remove the server cover. See [“Remove the server cover” on page 197](#).
- Step 2. Turn the server cover over and locate the T4 filler you want to remove.
- Step 3. Remove the T4 filler.

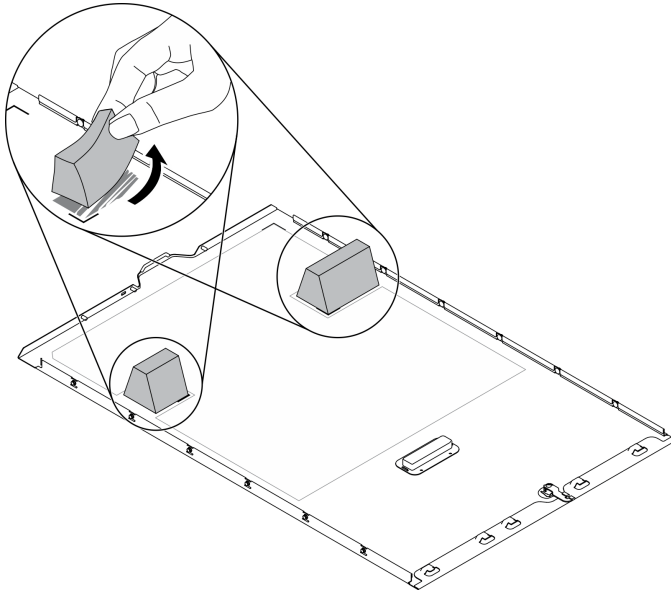


Figure 158. T4 filler removal

#### After you finish

1. Install a new T4 filler. See [“Install a T4 filler” on page 212](#).
2. If you are instructed to return the component or optional device, follow all packaging instructions, and use any packaging materials for shipping that are supplied to you.

## Install a T4 filler

Use this information to install a T4 filler.

#### About this task

##### S017



#### **CAUTION:**

**Hazardous moving fan blades nearby. Keep fingers and other body parts away.**

##### S033



#### **CAUTION:**

**Hazardous energy present. Voltages with hazardous energy might cause heating when shorted with metal, which might result in spattered metal, burns, or both.**


#### **Attention:**

- Read “[Installation Guidelines](#)” on [page 59](#) to ensure that you work safely.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.

**Note:** If you have installed a T4 GPU adapter, install a T4 filler onto the server cover for proper cooling and airflow.

### Procedure

- Step 1. Locate the corresponding location on the bottom of the server cover for the applicable PCIe slot.
- Step 2. Wipe the surface with an alcohol cleaning pad.

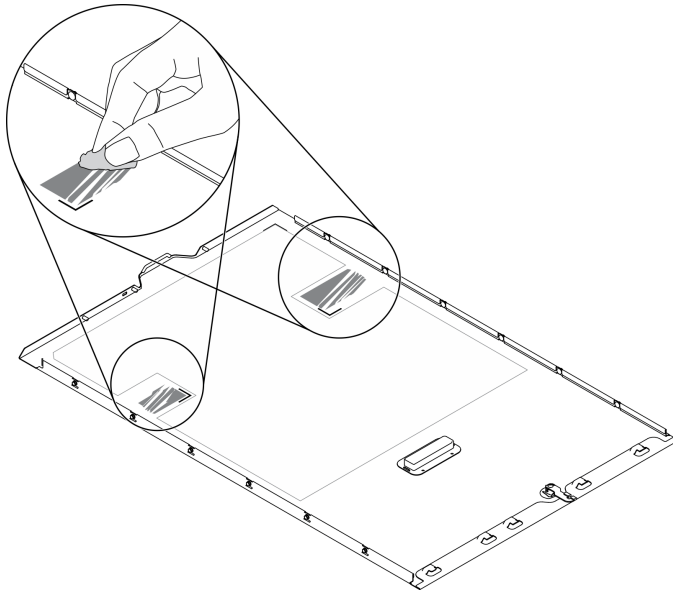

*Figure 159. Cleaning surface*

- Step 3. Peel away the plastic and apply the T4 filler. Make sure the T4 filler is aligned to the  corner mark.

**Note:** Make sure the alcohol has fully evaporated before applying the new T4 filler.

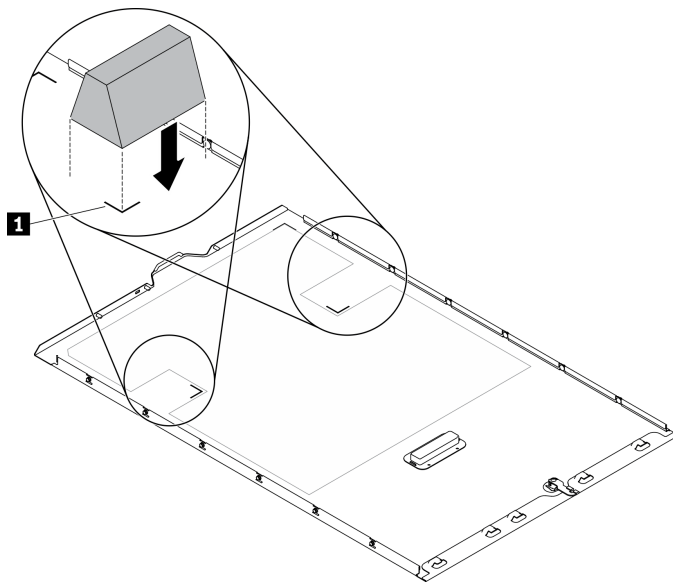


Figure 160. T4 filler installation

### After you finish

1. Reinstall the server cover. See “Install the server cover” on page 199.
2. Complete the parts replacement. See “Complete the parts replacement” on page 214.

---

## Complete the parts replacement

Use this information to complete the parts replacement.

To complete the parts replacement, do the following:

1. Ensure that all components have been reassembled correctly and that no tools or loose screws are left inside your server.
2. Properly route and secure the cables in the server. Refer to the cable connecting and routing information for each component.
3. If you have removed the server cover, reinstall it. See “Install the server cover” on page 199.
4. Reconnect external cables and power cords to the server.

**Attention:** To avoid component damage, connect the power cords last.

5. Update the server configuration.
  - Download and install the latest device drivers: <http://datacentersupport.lenovo.com>.
  - Update the system firmware. See “Firmware updates” on page 9.
  - Update the UEFI configuration.
  - Reconfigure the disk arrays if you have installed or removed a hot-swap drive or a RAID adapter. See the Lenovo XClarity Provisioning Manager User Guide, which is available for download at: <http://datacentersupport.lenovo.com>.

**Note:** Make sure the latest version of ThinkSystem M.2 with Mirroring Enablement Kit Firmware is applied to avoid virtual disk/array missing after system board replacement.



---

## Chapter 5. Problem determination

Use the information in this section to isolate and resolve issues that you might encounter while using your server.

Lenovo servers can be configured to automatically notify Lenovo Support if certain events are generated. You can configure automatic notification, also known as Call Home, from management applications, such as the Lenovo XClarity Administrator. If you configure automatic problem notification, Lenovo Support is automatically alerted whenever a server encounters a potentially significant event.

To isolate a problem, you should typically begin with the event log of the application that is managing the server:

- If you are managing the server from the Lenovo XClarity Administrator, begin with the Lenovo XClarity Administrator event log.
- If you are using some other management application, begin with the Lenovo XClarity Controller event log.

---

### Event logs

An *alert* is a message or other indication that signals an event or an impending event. Alerts are generated by the Lenovo XClarity Controller or by UEFI in the servers. These alerts are stored in the Lenovo XClarity Controller Event Log. If the server is managed by the Chassis Management Module 2 or by the Lenovo XClarity Administrator, alerts are automatically forwarded to those management applications.

**Note:** For a listing of events, including user actions that might need to be performed to recover from an event, see the *Messages and Codes Reference*, which is available at:[http://thinksystem.lenovofiles.com/help/topic/7Z74/pdf\\_files.html](http://thinksystem.lenovofiles.com/help/topic/7Z74/pdf_files.html)

#### Lenovo XClarity Administrator event log

If you are using Lenovo XClarity Administrator to manage server, network, and storage hardware, you can view the events from all managed devices through the XClarity Administrator.

## Logs

The Event log provides a history of hardware and management conditions that have been detected.

Show:

All Event Sources

All Dates

Severity	Serviceability	Date and Time	System	Event	System Type	Source ID
Warning	Support	Jan 30, 2017, 7:48:07 AM	Chassis114:...	Node Node 08 device	Chassis	Jan 30, 20
Warning	Support	Jan 30, 2017, 7:48:07 AM	Chassis114:...	Node Node 02 device	Chassis	Jan 30, 20
Warning	User	Jan 30, 2017, 7:48:07 AM	Chassis114:...	I/O module IO Module	Chassis	Jan 30, 20
Warning	User	Jan 30, 2017, 7:48:07 AM	Chassis114:...	Node Node 08 incom	Chassis	Jan 30, 20

Figure 161. Lenovo XClarity Administrator event log

For more information about working with events from XClarity Administrator, see:

[http://sysmgt.lenovofiles.com/help/topic/com.lenovo.lxca.doc/events\\_vieweventlog.html](http://sysmgt.lenovofiles.com/help/topic/com.lenovo.lxca.doc/events_vieweventlog.html)

### Lenovo XClarity Controller event log

The Lenovo XClarity Controller monitors the physical state of the server and its components using sensors that measure internal physical variables such as temperature, power-supply voltages, fan speeds, and component status. The Lenovo XClarity Controller provides various interfaces to systems management software and to system administrators and users to enable remote management and control of a server.

The Lenovo XClarity Controller monitors all components of the server and posts events in the Lenovo XClarity Controller event log.

ThinkSystem System name: XCC0023579PK

Event Log Audit Log Maintenance History

Customize Table Clear Logs Refresh

Type: All Source All Date

Severity	Source	Event ID	Message	Date
	System	0X4000000E00000000	Remote login successful. Login ID: userid from webguis at IP address: 10.104.194.180.	27 Jul 2015, 08:11:04 AM
	System	0X4000000E00000000	Remote login successful. Login ID: userid from webguis at IP address: 10.104.194.180.	27 Jul 2015, 08:11:04 AM
	System	0X4000000E00000000	Remote login successful. Login ID: userid from webguis at IP address: 10.104.194.180.	27 Jul 2015, 08:11:04 AM
	System	0X4000000E00000000	Remote login successful. Login ID: userid from webguis at IP address: 10.104.194.180.	27 Jul 2015, 08:11:04 AM

Figure 162. Lenovo XClarity Controller event log

For more information about accessing the Lenovo XClarity Controller event log, see:

“Viewing Event Logs” section in the XCC documentation compatible with your server at [https://sysmgt.lenovofiles.com/help/topic/ixcc\\_frontend/ixcc\\_overview.html](https://sysmgt.lenovofiles.com/help/topic/ixcc_frontend/ixcc_overview.html)

---

## Light path diagnostics

Light path diagnostics is a system of LEDs on various external and internal components of the server that leads you to the failed component. When an error occurs, LEDs are lit on the front panel on the front of the server and on the rear of the server, then on the failed component. By viewing the LEDs in a particular order, you can often identify the source of the error.

- “Front panel” on page 21
  - “External LCD diagnostics handset” on page 27
  - “Rear view LEDs” on page 26
  - “System board LEDs” on page 35
- 

## General problem determination procedures

Use the information in this section to resolve problems if the event log does not contain specific errors or the server is inoperative.

If you are not sure about the cause of a problem and the power supplies are working correctly, complete the following steps to attempt to resolve the problem:

1. Power off the server.
2. Make sure that the server is cabled correctly.
3. Remove or disconnect the following devices if applicable, one at a time, until you find the failure. Power on and configure the server each time you remove or disconnect a device.
  - Any external devices.
  - Surge-suppressor device (on the server).
  - Printer, mouse, and non-Lenovo devices.
  - Each adapter.
  - Hard disk drives.
  - Memory modules until you reach the minimum configuration that is supported for the server.

See “Specifications” on page 1 to determine the minimum configuration for your server.

4. Power on the server.

If the problem is solved when you remove an adapter from the server, but the problem recurs when you install the same adapter again, suspect the adapter. If the problem recurs when you replace the adapter with a different one, try a different PCIe slot.

If the problem appears to be a networking problem and the server passes all system tests, suspect a network cabling problem that is external to the server.

## Resolving suspected power problems

Power problems can be difficult to solve. For example, a short circuit can exist anywhere on any of the power distribution buses. Usually, a short circuit will cause the power subsystem to shut down because of an overcurrent condition.

Complete the following steps to diagnose and resolve a suspected power problem.

Step 1. Check the event log and resolve any errors related to the power.

**Note:** Start with the event log of the application that is managing the server. For more information about event logs, see [“Event logs” on page 215](#).

- Step 2. Check for short circuits, for example, if a loose screw is causing a short circuit on a circuit board.
- Step 3. Remove the adapters and disconnect the cables and power cords to all internal and external devices until the server is at the minimum configuration that is required for the server to start. See [“Specifications” on page 1](#) to determine the minimum configuration for your server.
- Step 4. Reconnect all ac power cords and turn on the server. If the server starts successfully, reseal the adapters and devices one at a time until the problem is isolated.

If the server does not start from the minimum configuration, replace the components in the minimum configuration one at a time until the problem is isolated.

## Resolving suspected Ethernet controller problems

The method that you use to test the Ethernet controller depends on which operating system you are using. See the operating-system documentation for information about Ethernet controllers, and see the Ethernet controller device-driver readme file.

Complete the following steps to attempt to resolve suspected problems with the Ethernet controller.

- Step 1. Make sure that the correct device drivers, which come with the server are installed and that they are at the latest level.
  - Step 2. Make sure that the Ethernet cable is installed correctly.
    - The cable must be securely attached at all connections. If the cable is attached but the problem remains, try a different cable.
    - If you set the Ethernet controller to operate at 100 Mbps or 1000 Mbps, you must use Category 5 cabling.
- Note:** Use CAT6A UTP cables rated at 625 MHz bandwidth for the 10Gb on-board LAN.
- Step 3. Determine whether the hub supports auto-negotiation. If it does not, try configuring the integrated Ethernet controller manually to match the speed and duplex mode of the hub.
  - Step 4. Check the Ethernet controller LEDs on the rear panel of the server. These LEDs indicate whether there is a problem with the connector, cable, or hub.
    - The Ethernet link status LED is lit when the Ethernet controller receives a link pulse from the hub. If the LED is off, there might be a defective connector or cable or a problem with the hub.
    - The Ethernet transmit/receive activity LED is lit when the Ethernet controller sends or receives data over the Ethernet network. If the Ethernet transmit/receive activity is off, make sure that the hub and network are operating and that the correct device drivers are installed.
  - Step 5. Check the Network activity LED on the rear of the server. The Network activity LED is lit when data is active on the Ethernet network. If the Network activity LED is off, make sure that the hub and network are operating and that the correct device drivers are installed.
  - Step 6. Check for operating-system-specific causes of the problem, and also make sure that the operating system drivers are installed correctly.
  - Step 7. Make sure that the device drivers on the client and server are using the same protocol.

If the Ethernet controller still cannot connect to the network but the hardware appears to be working, the network administrator must investigate other possible causes of the error.

---

## Troubleshooting by symptom

Follow this procedure to find solutions to problems that have identifiable symptoms.

To use the symptom-based troubleshooting information in this section, complete the following steps:

1. Check the event log of the application that is managing the server and follow the suggested actions to resolve any event codes.
  - If you are managing the server from the Lenovo XClarity Administrator, begin with the Lenovo XClarity Administrator event log.
  - If you are using some other management application, begin with the Lenovo XClarity Controller event log.

For more information about event logs, see [“Event logs” on page 215](#).

2. Review this section to find the symptoms that you are experiencing and follow the suggested actions to resolve the issue.
3. If the problem persists, contact support (see [“Contacting Support” on page 243](#)).

## Hard disk drive problems

Use this information to resolve issues related to the hard disk drives.

- [“Server cannot recognize a hard drive” on page 219](#)
- [“Multiple hard drives fail” on page 220](#)
- [“Multiple hard drives are offline” on page 220](#)
- [“A replacement hard disk drive does not rebuild” on page 220](#)
- [“Green hard disk drive activity LED does not represent actual state of associated drive” on page 220](#)
- [“Yellow hard disk drive status LED does not represent actual state of associated drive” on page 221](#)

### Server cannot recognize a hard drive

Complete the following steps until the problem is solved.

1. Observe the associated yellow hard disk drive status LED. If the LED is lit, it indicates a drive fault.
2. If the status LED is lit, remove the drive from the bay, wait 45 seconds, and reinsert the drive, making sure that the drive assembly connects to the hard disk drive backplane.
3. Observe the associated green hard disk drive activity LED and the yellow status LED and perform corresponding operations in different situations:
  - If the green activity LED is flashing and the yellow status LED is not lit, the drive is recognized by the controller and is working correctly. Run the diagnostics tests for the hard disk drives. When you start a server and press the key according to the on-screen instructions, the LXPM is displayed by default. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at [https://sysmgmt.lenovofiles.com/help/topic/lxpm\\_frontend/lxpm\\_product\\_page.html](https://sysmgmt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html).) You can perform hard drive diagnostics from this interface. From the Diagnostic page, click **Run Diagnostic → HDD test/Disk Drive Test.\***
  - If the green activity LED is flashing and the yellow status LED is flashing slowly, the drive is recognized by the controller and is rebuilding.
  - If neither LED is lit or flashing, check whether the hard disk drive backplane is correctly seated. For details, go to step 4.
  - If the green activity LED is flashing and the yellow status LED is lit, replace the drive. If the activity of the LEDs remains the same, go to step Hard disk drive problems. If the activity of the LEDs changes, return to step 1.
4. Make sure that the hard disk drive backplane is correctly seated. When it is correctly seated, the drive assemblies correctly connect to the backplane without bowing or causing movement of the backplane.
5. Reseat the backplane power cable and repeat steps 1 through 3.

6. Reseat the backplane signal cable and repeat steps 1 through 3.
7. Suspect the backplane signal cable or the backplane:
  - Replace the affected backplane signal cable.
  - Replace the affected backplane.
8. Run the diagnostics tests for the hard disk drives. When you start a server and press the key according to the on-screen instructions, the LXPM is displayed by default. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at [https://sysmgt.lenovofiles.com/help/topic/lxpm\\_frontend/lxpm\\_product\\_page.html](https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html).) You can perform hard drive diagnostics from this interface. From the Diagnostic page, click **Run Diagnostic → HDD test/Disk Drive Test.**\*

Based on those tests:

- If the backplane passes the test but the drives are not recognized, replace the backplane signal cable and run the tests again.
- Replace the backplane.
- If the adapter fails the test, disconnect the backplane signal cable from the adapter and run the tests again.
- If the adapter fails the test, replace the adapter.

### **Multiple hard drives fail**

Complete the following steps until the problem is solved:

- View the Lenovo XClarity Controller event log for events related to power supplies or vibration issues and resolve those events.
- Make sure that the device drivers and firmware for the hard disk drive and server are at the latest level

**Important:** Some cluster solutions require specific code levels or coordinated code updates. If the device is part of a cluster solution, verify that the latest level of code is supported for the cluster solution before you update the code.

### **Multiple hard drives are offline**

Complete the following steps until the problem is solved:

- View the Lenovo XClarity Controller event log for events related to power supplies or vibration issues and resolve those events.
- View the storage subsystem log for events related to the storage subsystem and resolve those events.

### **A replacement hard disk drive does not rebuild**

Complete the following steps until the problem is solved:

1. Make sure that the hard disk drive is recognized by the adapter (the green hard disk drive activity LED is flashing).
2. Review the SAS/SATA RAID adapter documentation to determine the correct configuration parameters and settings.

### **Green hard disk drive activity LED does not represent actual state of associated drive**

Complete the following steps until the problem is solved:

1. If the green hard disk drive activity LED does not flash when the drive is in use, run the diagnostics tests for the hard disk drives. When you start a server and press the key according to the on-screen instructions, the LXPM is displayed by default. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at [https://sysmgt.lenovofiles.com/help/topic/lxpm\\_](https://sysmgt.lenovofiles.com/help/topic/lxpm_)

[frontend/lxpm\\_product\\_page.html](#).) You can perform hard drive diagnostics from this interface. From the Diagnostic page, click **Run Diagnostic → HDD test/Disk Drive Test**.\*

2. If the drive passes the test, replace the backplane.
3. If the drive fails the test, replace the drive.

### **Yellow hard disk drive status LED does not represent actual state of associated drive**

Complete the following steps until the problem is solved:

1. Turn off the server.
2. Reseat the SAS/SATA adapter.
3. Reseat the backplane signal cable and backplane power cable.
4. Reseat the hard disk drive.
5. Power on the server and observe the activity of the hard disk drive LEDs.

**Note:** \*Depending on the LXPM version, you may see **HDD test** or **Disk Drive Test**.

## **Fan problems**

See this section to resolve issues related the to fans.

- [“Abnormally high RPM \(revolutions per minute\)” on page 221](#)

### **Abnormally high RPM (revolutions per minute)**

Complete the following steps until the problem is solved.

1. Check to see if the system inlet perforation or heatsinks are clogged.
2. Make sure that all air baffles are correctly installed in the server.
3. Check the thermal grease on the processor, and make sure it's not contaminated.

## **Intermittent problems**

Use this information to solve intermittent problems.

- [“Intermittent external device problems” on page 221](#)
- [“Intermittent KVM problems” on page 222](#)
- [“Intermittent unexpected reboots” on page 222](#)

### **Intermittent external device problems**

Complete the following steps until the problem is solved.

1. Update the UEFI and XCC firmware to the latest versions.
2. Make sure that the correct device drivers are installed. See the manufacturer's website for documentation.
3. For a USB device:
  - a. Make sure that the device is configured correctly.

Restart the server and press the key according to the on-screen instructions to display the LXPM system setup interface. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at [https://sysmgmt.lenovofiles.com/help/topic/lxpm\\_frontend/lxpm\\_product\\_page.html](https://sysmgmt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html).) Then, click **System Settings → Devices and I/O Ports → USB Configuration**.

- b. Connect the device to another port. If using a USB hub, remove the hub and connect the device directly to the server. Make sure that the device is configured correctly for the port.

## Intermittent KVM problems

Complete the following steps until the problem is solved.

### Video problems:

1. Make sure that all cables and the console breakout cable are properly connected and secure.
2. Make sure that the monitor is working properly by testing it on another server.
3. Test the console breakout cable on a working server to ensure that it is operating properly. Replace the console breakout cable if it is defective.

### Keyboard problems:

Make sure that all cables and the console breakout cable are properly connected and secure.

### Mouse problems:

Make sure that all cables and the console breakout cable are properly connected and secure.

## Intermittent unexpected reboots

**Note:** Some uncorrectable errors require that the server reboot so that it can disable a device, such as a memory DIMM or a processor to allow the machine to boot up properly.

1. If the reset occurs during POST and the POST watchdog timer is enabled, make sure that sufficient time is allowed in the watchdog timeout value (POST Watchdog Timer).

To check the POST watchdog time, restart the server and press the key according to the on-screen instructions to display the LXPM system setup interface. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at [https://sysmgmt.lenovofiles.com/help/topic/lxpm\\_frontend/lxpm\\_product\\_page.html](https://sysmgmt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html).) Then, click **BMC Settings → POST Watchdog Timer**.

2. If the reset occurs after the operating system starts, do one of the followings:
  - Enter the operating system when the system operates normally and set up operating system kernel dump process (Windows and Linux base operating systems will be using different method). Enter the UEFI setup menus and disable the feature, or disable it with the following OneCli command.  
`OneCli.exe config set SystemRecovery.RebootSystemOnNMI Disable --bmc XCC_USER:XCC_PASSWORD@XCC_IPAddress`
  - Disable any automatic server restart (ASR) utilities, such as the Automatic Server Restart IPMI Application for Windows, or any ASR devices that are installed.
3. See the management controller event log to check for an event code that indicates a reboot. See “[Event logs](#)” on page 215 for information about viewing the event log. If you are using Linux base operating system, then capture all logs back to Lenovo support for further investigation.

## Keyboard, mouse, KVM switch or USB-device problems

Use this information to solve problems related to a keyboard, mouse, KVM switch or USB-device problems.

- “[All or some keys on the keyboard do not work](#)” on page 222
- “[Mouse does not work](#)” on page 223
- “[KVM switch problems](#)” on page 223
- “[USB-device does not work](#)” on page 223

### All or some keys on the keyboard do not work

1. Make sure that:
  - The keyboard cable is securely connected.
  - The server and the monitor are turned on.



2. If you are using a USB keyboard, run the Setup utility and enable keyboardless operation.
3. If you are using a USB keyboard and it is connected to a USB hub, disconnect the keyboard from the hub and connect it directly to the server.
4. Replace the keyboard.

### Mouse does not work

1. Make sure that:
  - The mouse cable is securely connected to the server.
  - The mouse device drivers are installed correctly.
  - The server and the monitor are turned on.
  - The mouse option is enabled in the Setup utility.
2. If you are using a USB mouse and it is connected to a USB hub, disconnect the mouse from the hub and connect it directly to the server.
3. Replace the mouse.

### KVM switch problems

1. Make sure that the KVM switch is supported by your server.
2. Make sure that the KVM switch is powered on correctly.
3. If the keyboard, mouse or monitor can be operated normally with direct connection to the server, then replace the KVM switch.

### USB-device does not work

1. Make sure that:
  - The correct USB device driver is installed.
  - The operating system supports USB devices.
2. Make sure that the USB configuration options are set correctly in system setup.

Restart the server and press the key according to the on-screen instructions to display the LXPM system setup interface. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at [https://sysmgt.lenovofiles.com/help/topic/lxpm\\_frontend/lxpm\\_product\\_page.html](https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html).)

Then, click **System Settings** → **Devices and I/O Ports** → **USB Configuration**.

3. If you are using a USB hub, disconnect the USB device from the hub and connect it directly to the server.

## Memory problems

See this section to resolve issues related to memory.

- “Displayed system memory is less than installed physical memory” on page 224
- “Multiple memory modules in a channel identified as failing” on page 225
- “Attempt to change to another PMEM mode fails” on page 225
- “Extra namespace appears in an interleaved region” on page 225
- “Migrated PMEMs are not supported” on page 225
- “Invalid memory population detected” on page 226
- “PMEMs installed in wrong slots after system board replacement” on page 226
- “After PMEMs are reconfigured, error messages and LEDs persist to indicate PMEMs are installed in wrong slots” on page 227

- [“Cannot create goal successfully when installing PMEMs to the system for the first time” on page 227](#)

### Displayed system memory is less than installed physical memory

Complete the following procedure to solve the problem.

**Note:** Each time you install or remove a memory module, you must disconnect the server from the power source; then, wait 10 seconds before restarting the server.

1. Make sure that:

- No error LEDs are lit on the operator information panel.
- No memory module error LEDs are lit on the system board.
- Memory mirrored channel does not account for the discrepancy.
- The memory modules are seated correctly.
- You have installed the correct type of memory module (see “PMEM rules” in *Setup Guide* for requirements).
- After changing or replacing a memory module, memory configuration is updated accordingly in the Setup Utility.
- All banks of memory are enabled. The server might have automatically disabled a memory bank when it detected a problem, or a memory bank might have been manually disabled.
- There is no memory mismatch when the server is at the minimum memory configuration.
- When PMEMs are installed:
  - a. If the memory is set in App Direct Mode, all the saved data have been backed up, and created namespaces are deleted before any PMEM is replaced or added.
  - b. Refer to “PMEM rules” in *Setup Guide* and see if the displayed memory fits the mode description.
  - c. If PMEMs are recently set in Memory Mode, turn it back to App Direct Mode and examine if there is namespace that has not been deleted.
  - d. Go to the Setup Utility, select **System Configuration and Boot Management → Intel Optane PMEMs → Security**, and make sure security of all the PMEM units is disabled.

2. Reseat the memory modules, and then restart the server.

3. Check the POST error log:

- If a memory module was disabled by a systems-management interrupt (SMI), replace the memory module.
- If a memory module was disabled by the user or by POST, reseat the memory module; then, run the Setup utility and enable the memory module.

4. Run memory diagnostics. When you start a solution and press the key specified in the on-screen instructions, the LXPM interface is displayed by default. You can perform memory diagnostics with this interface. From the Diagnostic page, go to **Run Diagnostic → Memory test** or **PMEM test**.

**Notes:** When PMEMs are installed, run diagnostics based on the mode that is set presently:

- App Direct Mode:
  - Run Memory Test for DRAM memory modules.
  - Run PMEM Test for PMEMs.
- Memory Mode:

Run both Memory Test and PMEM Test for PMEMs.

5. Reverse the modules between the channels (of the same processor), and then restart the server. If the problem is related to a memory module, replace the failing memory module.

**Note:** When PMEMs are installed, only adopt this method in Memory Mode.

6. Re-enable all memory modules using the Setup utility, and then restart the server.
7. (Trained technician only) Install the failing memory module into a memory module connector for processor 2 (if installed) to verify that the problem is not the processor or the memory module connector.
8. (Trained technician only) Replace the system board.

### Multiple memory modules in a channel identified as failing

**Note:** Each time you install or remove a memory module, you must disconnect the server from the power source; then, wait 10 seconds before restarting the server.

Complete the following procedure to solve the problem.

1. Reseat the memory modules; then, restart the server.
2. Remove the highest-numbered memory module of those that are identified and replace it with an identical known good memory module; then, restart the server. Repeat as necessary. If the failures continue after all identified memory modules are replaced, go to step 4.
3. Return the removed memory modules, one at a time, to their original connectors, restarting the server after each memory module, until a memory module fails. Replace each failing memory module with an identical known good memory module, restarting the server after each memory module replacement. Repeat step 3 until you have tested all removed memory modules.
4. Replace the highest-numbered memory module of those identified; then, restart the server. Repeat as necessary.
5. Reverse the memory modules between the channels (of the same processor), and then restart the server. If the problem is related to a memory module, replace the failing memory module.
6. (Trained technician only) Install the failing memory module into a memory module connector for processor 2 (if installed) to verify that the problem is not the processor or the memory module connector.
7. (Trained technician only) Replace the system board.

### Attempt to change to another PMEM mode fails

After the PMEM mode is changed and the system is successfully restarted, if the PMEM mode stays the same instead of being changed, check the DRAM DIMMs and PMEM capacity to see if it meets the requirement of the new mode (see “PMEM rules” in *Setup Guide*).

### Extra namespace appears in an interleaved region

If there are two created namespaces in one interleaved region, VMware ESXi ignores the created namespaces and creates an extra new namespace during system booting. Delete the created namespaces in either the Setup Utility or the operating system before the first booting with ESXi.

### Migrated PMEMs are not supported

Intel Optane PMEM interleave set (DIMM X) is migrated from another system (Platform ID: 0x00), these migrated PMEMs are not supported nor warranted in this system.

If this warning message appears, complete the following steps:

1. Move the modules back to the original system with the exact same configuration as the previous one.
2. Back up stored data in PMEM namespaces.
3. Disable PMEM security with one of the following options:
  - **LXPM**

Go to **UEFI Setup → System Settings → Intel Optane PMEMs → Security → Press to Disable Security**, and input passphrase to disable security.

- **Setup Utility**

Go to **System Configuration and Boot Management → System Settings → Intel Optane PMEMs → Security → Press to Disable Security**, and input passphrase to disable security.

4. Delete namespaces with command corresponding to the operating system that is installed:

- **Linux** command:

```
ndctl destroy-namespace all -f
```

- **Windows** Powershell command

```
Get-PmemDisk | Remove-PmemDisk
```

5. Clear Platform Configuration Data (PCD) and Namespace Label Storage Area (LSA) with the following ipmctl command (for both Linux and Windows).

```
ipmctl delete -pcd
```

**Notes:** See the following links to learn how to download and use ipmctl in different operating systems:

- Windows: <https://datacentersupport.lenovo.com/us/en/videos/YTV101407>
- Linux: <https://datacentersupport.lenovo.com/us/en/solutions/HT508642>

6. Reboot the system, and press F1 to enter Setup Utility.

7. Power off the system.

8. Remove the modules to be reused for a new system or configuration.

### Invalid memory population detected

Invalid memory population (unsupported DIMM population) detected. Please verify memory configuration is valid.

If this warning message appears, complete the following steps:

1. See “Memory module installation rules and order” in *Setup Guide* to make sure the present memory module population sequence is supported.
2. If the present sequence is indeed supported, see if any of the modules is displayed as “disabled” in Setup Utility.
3. Reseat the module that is displayed as “disabled,” and reboot the system.
4. If the problem persists, replace the memory module.

### PMEMs installed in wrong slots after system board replacement

DIMM X of Intel Optane PMEM persistent interleave set should be moved to DIMM Y.

If this warning message appears, complete the following steps:

1. Record each of the instructions of changing PMEM slot from XCC events.
2. Power off the system, and remove the PMEMs that are mentioned in the warning messages. It is suggested to label these PMEMs to avoid confusion.
3. Install the PMEMs in the correct slot number indicated in the warning messages. Remove the labels to avoid blocking airflow and cooling.
4. Complete replacement and power on the system. Make sure there is no similar warning messages in XCC.

**Note:** Do not perform any provisioning on PMEM to avoid data lost when the messages are still present in XCC events.

**After PMEMs are reconfigured, error messages and LEDs persist to indicate PMEMs are installed in wrong slots**

AC the system or restart XCC to solve this problem.

**Cannot create goal successfully when installing PMEMs to the system for the first time**

When seeing ones of the following messages:

- ERROR: Cannot retrieve memory resources info
- ERROR: One or more PMEM modules do not have PCD data. A platform reboot is recommended to restore valid PCD data.

Complete the following steps to solve the problem.

1. If the PMEMs have been installed in another system with stored data, perform the following steps to erase the data.
  - a. Based on the original population order, install the PMEMs to the original system where they were installed previously, and back up the data from the PMEMs to other storage devices.
  - b. Disable PMEM security with one of the following options:
    - **LXPM**  
Go to **UEFI Setup → System Settings → Intel Optane PMEMs → Security → Press to Disable Security**, and input passphrase to disable security.
    - **Setup Utility**  
Go to **System Configuration and Boot Management → System Settings → Intel Optane PMEMs → Security → Press to Disable Security**, and input passphrase to disable security.
  - c. Delete namespaces with command corresponding to the operating system that is installed:
    - **Linux** command:  

```
ndctl destroy-namespace all -f
```
    - **Windows** Powershell command  

```
Get-PmemDisk | Remove-PmemDisk
```
  - d. Clear Platform Configuration Data (PCD) and Namespace Label Storage Area (LSA) with the following ipmctl command (for both Linux and Windows).  

```
ipmctl delete -pcd
```

**Notes:** See the following links to learn how to download and use ipmctl in different operating systems:

    - Windows: <https://datacentersupport.lenovo.com/us/en/videos/YTV101407>
    - Linux: <https://datacentersupport.lenovo.com/us/en/solutions/HT508642>
2. Install the PMEMs back to the target system, and upgrade system firmware to the latest version without entering Setup Utility.
3. If the problem persists, overwrite PMEMs with the following ndctl command.  

```
ndctl sanitize-dimm --overwrite all
```
4. Monitor the overwrite status with the following command.  

```
watch -n 1 "ipmctl show -d OverwriteStatus -dimm"
```
5. When seeing all PMEM OverwriteStatus=Completed, reboot the system and see if the problem persists.

## Monitor and video problems

See this section to solve problems related to a monitor or video.

- [“Incorrect characters are displayed” on page 228](#)
- [“Screen is blank” on page 228](#)
- [“Screen goes blank when you start some application programs” on page 228](#)
- [“The monitor has screen jitter, or the screen image is wavy, unreadable, rolling, or distorted.” on page 228](#)
- [“The wrong characters appear on the screen” on page 229](#)
- [“Management controller remote presence cannot work” on page 229](#)

### Incorrect characters are displayed

Complete the following steps:

1. Verify that the language and locality settings are correct for the keyboard and operating system.
2. If the wrong language is displayed, update the server firmware to the latest level. See [“Firmware updates” on page 9](#).

### Screen is blank

1. If the server is attached to a KVM switch, bypass the KVM switch to eliminate it as a possible cause of the problem: connect the monitor cable directly to the correct connector on the rear of the server.
2. If the server installed with the graphical adapters while turning on the server, the Lenovo logo displays on the screen after approximately 3 minutes. This is normal operation while the system loads.
3. Make sure that:
  - The server is turned on and there is power supplied to the server.
  - The monitor cables are connected correctly.
  - The monitor is turned on and the brightness and contrast controls are adjusted correctly.
4. Make sure that the correct server is controlling the monitor, if applicable.
5. Make sure that the video output is not affected by corrupted server firmware; see [“Firmware updates” on page 9](#).
6. If the problem remains, contact Lenovo Support.

### Screen goes blank when you start some application programs

1. Make sure that:
  - The application program is not setting a display mode that is higher than the capability of the monitor.
  - You installed the necessary device drivers for the application.

### The monitor has screen jitter, or the screen image is wavy, unreadable, rolling, or distorted.

1. If the monitor self-tests show that the monitor is working correctly, consider the location of the monitor. Magnetic fields around other devices (such as transformers, appliances, fluorescents, and other monitors) can cause screen jitter or wavy, unreadable, rolling, or distorted screen images. If this happens, turn off the monitor.

**Attention:** Moving a color monitor while it is turned on might cause screen discoloration.

Move the device and the monitor at least 305 mm (12 in.) apart, and turn on the monitor.

#### Notes:

- a. To prevent diskette drive read/write errors, make sure that the distance between the monitor and any external diskette drive is at least 76 mm (3 in.).

- b. Non-Lenovo monitor cables might cause unpredictable problems.
2. Reseat the monitor cable.
3. Replace the components listed in step 2 one at a time, in the order shown, restarting the server each time:
  - a. Monitor cable
  - b. Video adapter (if one is installed)
  - c. Monitor
  - d. (Trained technician only) System board.

### **The wrong characters appear on the screen**

Complete the following steps until the problem is solved:

1. Verify that the language and locality settings are correct for the keyboard and operating system.
2. If the wrong language is displayed, update the server firmware to the latest level. See [“Firmware updates” on page 9](#).

### **Management controller remote presence cannot work**

The management controller remote presence function is unable to display the system screen when an optional video adapter is present. To use the management controller remote presence function, remove the optional video adapter or use the onboard VGA as the display device.

## **Network problems**

See this section to resolve issues related to networking.

- [“Could not log in using LDAP account with SSL enabled” on page 229](#)

### **Could not log in using LDAP account with SSL enabled**

Complete the following steps until the problem is resolved:

1. Make sure that the license key is valid.
2. Generate a new license key and log in again.

## **Observable problems**

Use this information to solve observable problems.

- [“Server hangs during the UEFI boot process” on page 230](#)
- [“The server immediately displays the POST Event Viewer when it is turned on” on page 230](#)
- [“Server is unresponsive \(POST is complete and operating system is running\)” on page 230](#)
- [“Server is unresponsive \(POST failed and cannot start System Setup\)” on page 231](#)
- [“Voltage planar fault is displayed in the event log” on page 231](#)
- [“Unusual smell” on page 231](#)
- [“Server seems to be running hot” on page 231](#)
- [“Cannot enter legacy mode after installing a new adapter” on page 232](#)
- [“Cracked parts or cracked chassis” on page 232](#)

## Server hangs during the UEFI boot process

If the system hangs during the UEFI boot process with the message UEFI: DXE INIT on the display, make sure that Option ROMs were not configured with a setting of **Legacy**. You can remotely view the current settings for Option ROMs by running the following command using the Lenovo XClarity Essentials OneCLI:

```
onecli config show EnableDisableAdapterOptionROMSupport --bmc xcc_userid:xcc_password@xcc_ipaddress
```

To recover a system that hangs during the boot process with Legacy Option ROM settings, see the following Tech Tip:

<https://datacentersupport.lenovo.com/us/en/solutions/ht506118>

If legacy Option ROMs must be used, do not set slot Option ROMs to **Legacy** on the Devices and I/O Ports menu. Instead, set slot Option ROMs to **Auto** (the default setting), and set the System Boot Mode to **Legacy Mode**. Legacy option ROMs will be invoked shortly before the system boots.

## The server immediately displays the POST Event Viewer when it is turned on

Complete the following steps until the problem is solved.

1. Correct any errors that are indicated by the light path diagnostics LEDs.
2. Make sure that the server supports all the processors and that the processors match in speed and cache size.

You can view processor details from system setup.

To determine if the processor is supported for the server, see <https://serverproven.lenovo.com/>.

3. (Trained technician only) Make sure that processor 1 is seated correctly
4. (Trained technician only) Remove processor 2 and restart the server.
5. Replace the following components one at a time, in the order shown, restarting the server each time:
  - a. (Trained technician only) Processor
  - b. (Trained technician only) System board

## Server is unresponsive (POST is complete and operating system is running)

Complete the following steps until the problem is solved.

- If you are in the same location as the compute node, complete the following steps:
  1. If you are using a KVM connection, make sure that the connection is operating correctly. Otherwise, make sure that the keyboard and mouse are operating correctly.
  2. If possible, log in to the compute node and verify that all applications are running (no applications are hung).
  3. Restart the compute node.
  4. If the problem remains, make sure that any new software has been installed and configured correctly.
  5. Contact your place of purchase of the software or your software provider.
- If you are accessing the compute node from a remote location, complete the following steps:
  1. Make sure that all applications are running (no applications are hung).
  2. Attempt to log out of the system and log back in.
  3. Validate the network access by pinging or running a trace route to the compute node from a command line.



- a. If you are unable to get a response during a ping test, attempt to ping another compute node in the enclosure to determine whether it is a connection problem or compute node problem.
  - b. Run a trace route to determine where the connection breaks down. Attempt to resolve a connection issue with either the VPN or the point at which the connection breaks down.
4. Restart the compute node remotely through the management interface.
  5. If the problem remains, verify that any new software has been installed and configured correctly.
  6. Contact your place of purchase of the software or your software provider.

### **Server is unresponsive (POST failed and cannot start System Setup)**

Configuration changes, such as added devices or adapter firmware updates, and firmware or application code problems can cause the server to fail POST (the power-on self-test).

If this occurs, the server responds in either of the following ways:

- The server restarts automatically and attempts POST again.
- The server hangs, and you must manually restart the server for the server to attempt POST again.

After a specified number of consecutive attempts (automatic or manual), the server reverts to the default UEFI configuration and starts System Setup so that you can make the necessary corrections to the configuration and restart the server. If the server is unable to successfully complete POST with the default configuration, there might be a problem with the system board.

You can specify the number of consecutive restart attempts in System Setup. Restart the server and press the key according to the on-screen instructions to display the LXPM system setup interface. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at [https://sysmgt.lenovofiles.com/help/topic/lxpm\\_frontend/lxpm\\_product\\_page.html](https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html).) Then, click **System Settings** → **Recovery and RAS** → **POST Attempts** → **POST Attempts Limit**. Available options are 3, 6, 9, and disable.

### **Voltage planar fault is displayed in the event log**

Complete the following steps until the problem is solved.

1. Revert the system to the minimum configuration. See “Specifications” on page 1 for the minimally required number of processors and DIMMs.
2. Restart the system.
  - If the system restarts, add each of the removed items one at a time and restart the system each time until the error occurs. Replace the item for which the error occurs.
  - If the system does not restart, suspect the system board.

### **Unusual smell**

Complete the following steps until the problem is solved.

1. An unusual smell might be coming from newly installed equipment.
2. If the problem remains, contact Lenovo Support.

### **Server seems to be running hot**

Complete the following steps until the problem is solved.

Multiple compute nodes or chassis:

1. Make sure that the room temperature is within the specified range (see “Specifications” on page 1).
2. Make sure that the fans are installed correctly.
3. Update the UEFI and XCC to the latest versions.

4. Make sure that the fillers in the server are installed correctly (see *Maintenance Manual* for detailed installation procedures).
5. Use the IPMI command to ramp up the fan speed to the full fan speed to see whether the issue can be resolved.

**Note:** The IPMI raw command should only be used by trained technician and the each system has its own specific PMI raw command.

6. Check the management processor event log for rising temperature events. If there are no events, the compute node is running within normal operating temperatures. Note that you can expect some variation in temperature.

### **Cannot enter legacy mode after installing a new adapter**

Complete the following procedure to solve the problem.

1. Go to **UEFI Setup → Devices and I/O Ports → Set Option ROM Execution Order**.
2. Move the RAID adapter with operation system installed to the top of the list.
3. Select **Save**.
4. Reboot the system and auto boot to operation system.

### **Cracked parts or cracked chassis**

Contact Lenovo Support.

## **Optional-device problems**

Use this information to solve problems related to optional devices.

- [“External USB device is not recognized” on page 232](#)
- [“PCIe adapter is not recognized or is not functioning” on page 232](#)
- [“Insufficient PCIe resources are detected.” on page 233](#)
- [“A Lenovo optional device that was just installed does not work.” on page 233](#)
- [“A Lenovo optional device that worked previously does not work now” on page 234](#)

### **External USB device is not recognized**

Complete the following steps until the problem is resolved:

1. Update the UEFI firmware to the latest version.
2. Make sure that the proper drivers are installed on the compute node. See the product documentation for the USB device for information about device drivers.
3. Use the Setup utility to make sure that the device is configured correctly.
4. If the USB device is plugged into a hub or the console breakout cable, unplug the device and plug it directly into the USB port on the front of the compute node.

### **PCIe adapter is not recognized or is not functioning**

Complete the following steps until the problem is resolved:

1. Update the UEFI firmware to the latest version.
2. Check the event log and resolve any issues related to the device.
3. Validate that the device is supported for the server (see <https://serverproven.lenovo.com/>). Make sure that the firmware level on the device is at the latest supported level and update the firmware if applicable.
4. Make sure that the adapter is installed in a correct slot.

5. Make sure that the proper device drivers are installed for the device.
6. Resolve any resource conflicts if running legacy mode (UEFI). Check legacy ROM boot orders and modify the UEFI setting for MM config base.

**Note:** Ensure that you modify the ROM boot order associated with the PCIe adapter to the first execution order.

7. Check <http://datacentersupport.lenovo.com> for any tech tips (also known as retain tips or service bulletins) that might be related to the adapter.
8. Ensure any adapter external connections are correct and that the connectors are not physically damaged.
9. Make sure that the PCIe adapter is installed with the supported operating system.

### **Insufficient PCIe resources are detected.**

If you see an error message stating “Insufficient PCI Resources Detected,” complete the following steps until the problem is resolved:

1. Press Enter to access System Setup Utility.
2. Select **System Settings → Devices and I/O Ports → MM Config Base**; then, modify the setting to increase the device resources. For example, modify 3 GB to 2 GB or modify 2 GB to 1 GB.
3. Save the settings and restart the system.
4. If the error recurs with the highest device resource setting (1GB), shutdown the system and remove some PCIe devices; then, power on the system.
5. If the reboot failed, repeat step 1 to step 4.
6. If the error recurs, press Enter to access System Setup Utility.
7. Select **System Settings → Devices and I/O Ports → PCI 64–Bit Resource Allocation**, then; modify the setting from **Auto** to **Enable**.
8. If the Boot Device does not support MMIO above 4GB for Legacy Boot, use UEFI Boot Mode or remove/disable some PCIe devices.
9. DC cycle the system and ensure the system is enter UEFI boot menu or the operating system; then, capture the FFDC log.
10. Contact Lenovo technical support.

### **A Lenovo optional device that was just installed does not work.**

1. Make sure that:
  - The device is supported for the server (see <https://serverproven.lenovo.com/>).
  - You followed the installation instructions that came with the device and the device is installed correctly.
  - You have not loosened any other installed devices or cables.
  - You updated the configuration information in system setup. When you start a server and press the key according to the on-screen instructions to display the Setup Utility. (For more information, see the “Startup” section in the LXPM documentation compatible with your server at [https://sysmgt.lenovofiles.com/help/topic/lxpm\\_frontend/lxpm\\_product\\_page.html](https://sysmgt.lenovofiles.com/help/topic/lxpm_frontend/lxpm_product_page.html).) Whenever memory or any other device is changed, you must update the configuration.
2. Reseat the device that you have just installed.
3. Replace the device that you have just installed.
4. Reseat the cable connection and check there is no physical damage to the cable.
5. If there is any cable damages, then replace the cable.

### **A Lenovo optional device that worked previously does not work now**

1. Make sure that all of the cable connections for the device are secure.
2. If the device comes with test instructions, use those instructions to test the device.
3. Reseat the cable connection and check if any physical parts have been damaged, .
4. Replace the cable.
5. Reseat the failing device.
6. Replace the failing device.

## **Power on and power off problems**

Follow this procedure to resolve issues when powering on or powering off the server.

- [“Embedded hypervisor is not in the boot list” on page 234](#)
- [“The power button does not work \(server does not start\)” on page 234](#)
- [“Server does not power on” on page 235](#)
- [“Server does not power off” on page 235](#)

### **Embedded hypervisor is not in the boot list**

Complete the following steps until the problem is solved.

1. If the server has been installed, moved, or serviced recently, or if this is the first time the embedded hypervisor is being used, make sure that the device is connected properly and that there is no physical damage to the connectors.
2. See the documentation that comes with the optional embedded hypervisor flash device for setup and configuration information.
3. Check <https://serverproven.lenovo.com/> to validate that the embedded hypervisor device is supported for the server.
4. Make sure that the embedded hypervisor device is listed in the list of available boot options. From the management controller user interface, click **Server Configuration → Boot Options**.

For information about accessing the management controller user interface, see “Opening and Using the XClarity Controller Web Interface” section in the XCC documentation compatible with your server at:

[https://sysmgmt.lenovofiles.com/help/topic/lxcc\\_frontend/lxcc\\_overview.html](https://sysmgmt.lenovofiles.com/help/topic/lxcc_frontend/lxcc_overview.html)

5. Check <http://datacentersupport.lenovo.com> for any tech tips (service bulletins) related to the embedded hypervisor and the server.
6. Make sure that other software works on the server to ensure that it is working properly.

### **The power button does not work (server does not start)**

**Note:** The power button will not function until approximately 1 to 3 minutes after the server has been connected to ac power.

Complete the following steps until the problem is resolved:

1. Make sure that the power button on the server is working correctly:
  - a. Disconnect the server power cords.
  - b. Reconnect the server power cords.
  - c. Reseat the operator information panel cable, and then repeat steps 1a and 1b.
    - If the server starts, reseat the operator information panel.
    - If the problem remains, replace the operator information panel.

2. Make sure that:
  - The power cords are correctly connected to the server and to a working electrical outlet.
  - The LEDs on the power supply do not indicate a problem.
3. Reseat the power supplies.
4. Replace each power supply, restarting the server each time:
  - DIMMs
  - Power supplies
5. If you just installed an optional device, remove it, and restart the server. If the server starts, you might have installed more devices than the power supply supports.

### **Server does not power on**

Complete the following steps until the problem is resolved:

1. Check the event log for any events related to the server not powering on.
2. Check for any LEDs that are flashing amber.
3. Check the power LED on the system board.
4. Reseat the power supply.
5. Replace the power supply.

### **Server does not power off**

Complete the following steps until the problem is resolved:

1. Determine whether you are using an Advanced Configuration and Power Interface (ACPI) or a non-ACPI operating system. If you are using a non-ACPI operating system, complete the following steps:
  - a. Press Ctrl+Alt+Delete.
  - b. Turn off the server by pressing the power button and holding it down for 5 seconds.
  - c. Restart the server.
  - d. If the server fails POST and the power button does not work, disconnect the power cord for 20 seconds; then, reconnect the power cord and restart the server.
2. If the problem remains or if you are using an ACPI-aware operating system, suspect the system board.

## **Processor problems**

See this section to solve problems related to a monitor or video.

- [“The server goes directly to the POST event viewer when it is turned on.” on page 235](#)

### **The server goes directly to the POST event viewer when it is turned on.**

1. Check the light path diagnostics LEDs and the XCC event log, and resolve any errors that have occurred.
2. Make sure that the server supports all the processors and that the processors match in speed and cache size. You can view processor details from system setup. To determine if the processor is supported for the server, see <https://serverproven.lenovo.com/>
3. (Trained technician only) Make sure that processor 1 is seated correctly
4. (Trained technician only) Remove processor 2 and restart the server. (3 and 4)
5. Replace the following components one at a time, in the order shown, restarting the server each time:
  - a. (Trained technician only) Processor

- b. (Trained technician only) System board

## Serial-device problems

See this section to solve problems with serial ports or devices.

- “Number of displayed serial ports is less than the number of installed serial ports” on page 236
- “Serial device does not work” on page 236

### Number of displayed serial ports is less than the number of installed serial ports

Complete the following steps until the problem is solved.

1. Make sure that:
  - Each port is assigned a unique address in the Setup utility and none of the serial ports is disabled.
  - The serial-port adapter (if one is present) is seated correctly
2. Reseat the serial port adapter.
3. Replace the serial port adapter.

### Serial device does not work

1. Make sure that:
  - The device is compatible with the server.
  - The serial port is enabled and is assigned a unique address.
  - The device is connected to the correct connector.
2. Reseat the following components::
  - a. Failing serial device.
  - b. Serial cable.
3. Replace the following components:
  - a. Failing serial device.
  - b. Serial cable.
4. (Trained technician only) Replace the system board.

## Software problems

See this section to solve software problems.

1. To determine whether the problem is caused by the software, make sure that:
  - The server has the minimum memory that is needed to use the software. For memory requirements, see the information that comes with the software.  
  
**Note:** If you have just installed an adapter or memory, the server might have a memory-address conflict.
  - The operating system is on the ServerProven list (see <https://serverproven.lenovo.com/>) and supported by your hardware.
  - The software is designed to operate on the server.
  - Other software works on the server.
  - The software works on another server.
2. If you receive any error messages while you use the software, see the information that comes with the software for a description of the messages and suggested solutions to the problem.
3. Check the operating system logs for any events related to your software and attempt to resolve them.

4. Contact your place of purchase of the software.





---

## Appendix A. Hardware disassembling for recycle

Follow the instructions in this section to recycle components with compliance with local laws or regulations.

---

### Disassemble the server for chassis recycle

Follow the instructions in this section to disassemble the server before recycling the chassis.

#### About this task

##### Attention:

- Read [“Installation Guidelines” on page 59](#) to ensure that you work safely.
- Power off the server and disconnect all power cords for this task.
- Prevent exposure to static electricity, which might lead to system halt and loss of data, by keeping static-sensitive components in their static-protective packages until installation, and handling these devices with an electrostatic-discharge wrist strap or other grounding system.
- If the server is in a rack, remove it from the rack.
- If foot stands are installed on the server, rotate them inwards and lay the server on its side for easier operation.

- Step 1. Remove the hot-swap redundant power supply. See [“Remove a hot-swap power supply” on page 177](#).
- Step 2. Remove all the installed drives and fillers. See [“Remove a hot-swap drive” on page 88](#) or [“Remove a simple-swap drive” on page 85](#).
- Step 3. Remove the server cover. See [“Remove the server cover” on page 197](#).
- Step 4. Remove the security door. See [“Remove the security door” on page 195](#).
- Step 5. Remove the front bezel. See [“Remove the front bezel” on page 109](#).
- Step 6. Remove the front panel board assembly. See [“Remove the front panel board assembly ” on page 112](#).
- Step 7. Remove the optical drives. See [“Remove the 5.25-inch drive bay adapter assembly” on page 157](#) or [“Remove an optical drive or a tape drive” on page 150](#).
- Step 8. Remove the expansion drive cage. [“Remove the expansion drive cage” on page 95](#).
- Step 9. Remove the optical drive cage. See [“Remove the optical drive cage” on page 147](#).
- Step 10. Remove the T4 fillers. See [“Remove a T4 filler” on page 211](#).
- Step 11. Remove all the flash power modules. See [“Remove a flash power module” on page 103](#).
- Step 12. Remove the GPU filler. See [“Remove a GPU filler” on page 118](#).
- Step 13. Remove the air baffle. See [“Remove the air baffle” on page 77](#).
- Step 14. Remove the NVLink bridges. See [“Remove an NVLink bridge” on page 144](#).
- Step 15. Remove all the full-length GPU adapters. See [“Remove a full-length GPU adapter” on page 115](#).
- Step 16. Remove all the PCIe adapters. See [“Remove a PCIe adapter” on page 167](#).
- Step 17. Remove the PCIe adapter holders. See [“Remove a PCIe adapter holder” on page 164](#).
- Step 18. Remove the A2/L4 GPU air ducts. See [“Remove an A2/L4 GPU air duct” on page 75](#).
- Step 19. Remove all the fans. See [“Remove a hot-swap fan” on page 97](#).
- Step 20. Remove the fan cage. See [“Remove the fan cage assembly” on page 100](#).

- Step 21. Remove the backplanes or backplates. See [“Remove a 2.5-inch hot-swap drive backplane” on page 62](#), [“Remove a 3.5-inch hot-swap drive backplane” on page 69](#), or [“Remove a 3.5-inch simple-swap drive backplate” on page 71](#).
- Step 22. Remove all the M.2 drives from the M.2 boot adapter. See [“Remove an M.2 drive” on page 136](#)
- Step 23. Remove the M.2 boot adapter. See [“Remove the M.2 boot adapter” on page 133](#).
- Step 24. Remove the Remove the internal CFF adapter. See [“Remove the internal CFF adapter” on page 125](#).
- Step 25. Remove the intrusion switch. See [“Remove the intrusion switch” on page 129](#).
- Step 26. Remove the CMOS battery (CR2032). See [“Remove the CMOS battery \(CR2032\)” on page 81](#).
- Step 27. Remove all the PHMs. See [“Remove a processor and heat sink” on page 183](#).
- Step 28. Remove the system board. See [“Remove the system board” on page 200](#).
- Step 29. Remove the power distribution board. See [“Remove the power distribution board” on page 170](#).
- Step 30. Remove the foot stands. See [“Remove the foot stands” on page 107](#).
- Step 31. Remove the EIA brackets. See [“Remove the EIA brackets” on page 91](#).

After disassembling the server, recycle the unit in compliance with local regulations.

---

## Appendix B. Getting help and technical assistance

If you need help, service, or technical assistance or just want more information about Lenovo products, you will find a wide variety of sources available from Lenovo to assist you.

On the World Wide Web, up-to-date information about Lenovo systems, optional devices, services, and support are available at:

<http://datacentersupport.lenovo.com>

**Note:** IBM is Lenovo's preferred service provider for ThinkSystem.

---

### Before you call

Before you call, there are several steps that you can take to try and solve the problem yourself. If you decide that you do need to call for assistance, gather the information that will be needed by the service technician to more quickly resolve your problem.

#### Attempt to resolve the problem yourself

You can solve many problems without outside assistance by following the troubleshooting procedures that Lenovo provides in the online help or in the Lenovo product documentation. The Lenovo product documentation also describes the diagnostic tests that you can perform. The documentation for most systems, operating systems, and programs contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the documentation for the operating system or program.

You can find the product documentation for your ThinkSystem products at the following location:

<http://thinksystem.lenovofiles.com/help/index.jsp>

You can take these steps to try to solve the problem yourself:

- Check all cables to make sure that they are connected.
- Check the power switches to make sure that the system and any optional devices are turned on.
- Check for updated software, firmware, and operating-system device drivers for your Lenovo product. The Lenovo Warranty terms and conditions state that you, the owner of the Lenovo product, are responsible for maintaining and updating all software and firmware for the product (unless it is covered by an additional maintenance contract). Your service technician will request that you upgrade your software and firmware if the problem has a documented solution within a software upgrade.
- If you have installed new hardware or software in your environment, check <https://serverproven.lenovo.com/> to make sure that the hardware and software is supported by your product.
- Go to <http://datacentersupport.lenovo.com> and check for information to help you solve the problem.
  - Check the Lenovo forums at [https://forums.lenovo.com/t5/Datacenter-Systems/ct-p/sv\\_eg](https://forums.lenovo.com/t5/Datacenter-Systems/ct-p/sv_eg) to see if someone else has encountered a similar problem.

You can solve many problems without outside assistance by following the troubleshooting procedures that Lenovo provides in the online help or in the Lenovo product documentation. The Lenovo product documentation also describes the diagnostic tests that you can perform. The documentation for most systems, operating systems, and programs contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the documentation for the operating system or program.

## Gathering information needed to call Support

If you believe that you require warranty service for your Lenovo product, the service technicians will be able to assist you more efficiently if you prepare before you call. You can also see <http://datacentersupport.lenovo.com/warrantylookup> for more information about your product warranty.

Gather the following information to provide to the service technician. This data will help the service technician quickly provide a solution to your problem and ensure that you receive the level of service for which you might have contracted.

- Hardware and Software Maintenance agreement contract numbers, if applicable
- Machine type number (Lenovo 4-digit machine identifier)
- Model number
- Serial number
- Current system UEFI and firmware levels
- Other pertinent information such as error messages and logs

As an alternative to calling Lenovo Support, you can go to <https://support.lenovo.com/servicerequest> to submit an Electronic Service Request. Submitting an Electronic Service Request will start the process of determining a solution to your problem by making the pertinent information available to the service technicians. The Lenovo service technicians can start working on your solution as soon as you have completed and submitted an Electronic Service Request.

---

## Collecting service data

To clearly identify the root cause of a server issue or at the request of Lenovo Support, you might need collect service data that can be used for further analysis. Service data includes information such as event logs and hardware inventory.

Service data can be collected through the following tools:

- **Lenovo XClarity Provisioning Manager**

Use the Collect Service Data function of Lenovo XClarity Provisioning Manager to collect system service data. You can collect existing system log data or run a new diagnostic to collect new data.

- **Lenovo XClarity Controller**

You can use the Lenovo XClarity Controller web interface or the CLI to collect service data for the server. The file can be saved and sent to Lenovo Support.

- For more information about using the web interface to collect service data, see the “Downloading service data” section in the XCC documentation version compatible with your server at [https://sysmgt.lenovofiles.com/help/topic/lxcc\\_frontend/lxcc\\_overview.html](https://sysmgt.lenovofiles.com/help/topic/lxcc_frontend/lxcc_overview.html).
- For more information about using the CLI to collect service data, see the “ffdc command” section in the XCC documentation version compatible with your server at [https://sysmgt.lenovofiles.com/help/topic/lxcc\\_frontend/lxcc\\_overview.html](https://sysmgt.lenovofiles.com/help/topic/lxcc_frontend/lxcc_overview.html).

- **Lenovo XClarity Administrator**

Lenovo XClarity Administrator can be set up to collect and send diagnostic files automatically to Lenovo Support when certain serviceable events occur in Lenovo XClarity Administrator and the managed endpoints. You can choose to send diagnostic files to Lenovo Support using Call Home or to another service provider using SFTP. You can also manually collect diagnostic files, open a problem record, and send diagnostic files to the Lenovo Support Center.

You can find more information about setting up automatic problem notification within the Lenovo XClarity Administrator at [http://sysmgt.lenovofiles.com/help/topic/com.lenovo.lxca.doc/admin\\_setupcallhome.html](http://sysmgt.lenovofiles.com/help/topic/com.lenovo.lxca.doc/admin_setupcallhome.html).

- **Lenovo XClarity Essentials OneCLI**

Lenovo XClarity Essentials OneCLI has inventory application to collect service data. It can run both in-band and out-of-band. When running in-band within the host operating system on the server, OneCLI can collect information about the operating system, such as the operating system event log, in addition to the hardware service data.

To obtain service data, you can run the `getinfor` command. For more information about running the `getinfor`, see [http://sysmgmt.lenovofiles.com/help/topic/toolstr\\_cli\\_lenovo/onecli\\_r\\_getinfor\\_command.html](http://sysmgmt.lenovofiles.com/help/topic/toolstr_cli_lenovo/onecli_r_getinfor_command.html).

---

## Contacting Support

You can contact Support to obtain help for your issue.

You can receive hardware service through a Lenovo Authorized Service Provider. To locate a service provider authorized by Lenovo to provide warranty service, go to <https://datacentersupport.lenovo.com/serviceprovider> and use filter searching for different countries. For Lenovo support telephone numbers, see <https://datacentersupport.lenovo.com/supportphonenumber>. In the U.S. and Canada, call 1-800-426-7378.

In the U.S. and Canada, hardware service and support is available 24 hours a day, 7 days a week. In the U.K., these services are available Monday through Friday, from 9 a.m. to 6 p.m.

### Chinese Mainland product support

To contact product support in Chinese Mainland, go to: <http://support.lenovo.com.cn/lenovo/wsi/es/ThinkSystem.html>

You can also call 400-106-8888 for product support. The call support is available Monday through Friday, from 9 a.m. to 6 p.m.

### Taiwan product support

To contact product support for Taiwan, call 0800-016-888. The call support is available 24 hours a day, 7 days a week.



---

## Appendix C. Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area.

Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document is not an offer and does not provide a license under any patents or patent applications. You can send inquiries in writing to the following:

*Lenovo (United States), Inc.  
8001 Development Drive  
Morrisville, NC 27560  
U.S.A.  
Attention: Lenovo Director of Licensing*

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

---

## Trademarks

LENOVO, THINKSYSTEM, Flex System, System x, NeXtScale System, and x Architecture are trademarks of Lenovo.

Intel and Intel Xeon are trademarks of Intel Corporation in the United States, other countries, or both.

Internet Explorer, Microsoft, and Windows are trademarks of the Microsoft group of companies.

Linux is a registered trademark of Linus Torvalds.

All other trademarks are the property of their respective owners.

---

## Important notes

Processor speed indicates the internal clock speed of the microprocessor; other factors also affect application performance.

CD or DVD drive speed is the variable read rate. Actual speeds vary and are often less than the possible maximum.

When referring to processor storage, real and virtual storage, or channel volume, KB stands for 1 024 bytes, MB stands for 1 048 576 bytes, and GB stands for 1 073 741 824 bytes.

When referring to hard disk drive capacity or communications volume, MB stands for 1 000 000 bytes, and GB stands for 1 000 000 000 bytes. Total user-accessible capacity can vary depending on operating environments.

Maximum internal hard disk drive capacities assume the replacement of any standard hard disk drives and population of all hard-disk-drive bays with the largest currently supported drives that are available from Lenovo.

Maximum memory might require replacement of the standard memory with an optional memory module.

Each solid-state memory cell has an intrinsic, finite number of write cycles that the cell can incur. Therefore, a solid-state device has a maximum number of write cycles that it can be subjected to, expressed as total bytes written (TBW). A device that has exceeded this limit might fail to respond to system-generated commands or might be incapable of being written to. Lenovo is not responsible for replacement of a device that has exceeded its maximum guaranteed number of program/erase cycles, as documented in the Official Published Specifications for the device.

Lenovo makes no representations or warranties with respect to non-Lenovo products. Support (if any) for the non-Lenovo products is provided by the third party, not Lenovo.

Some software might differ from its retail version (if available) and might not include user manuals or all program functionality.

---

## Electronic emission notices

When you attach a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices that are supplied with the monitor.

Additional electronic emissions notices are available at:



## Taiwan Region BSMI RoHS declaration

單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (PB)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr <sup>6+</sup> )	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
機架	○	○	○	○	○	○
外部蓋板	○	○	○	○	○	○
機械組零件	-	○	○	○	○	○
空氣傳動設備	-	○	○	○	○	○
冷卻組零件	-	○	○	○	○	○
內存模組	-	○	○	○	○	○
處理器模組	-	○	○	○	○	○
電纜組零件	-	○	○	○	○	○
電源供應器	-	○	○	○	○	○
儲備設備	-	○	○	○	○	○
印刷電路板	-	○	○	○	○	○
光碟機	-	○	○	○	○	○
<p>備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。                      Note1 : “exceeding 0.1wt%” and “exceeding 0.01 wt%” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.</p> <p>備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。                      Note2 : “○”indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.</p> <p>備考3. “-”係指該項限用物質為排除項目。                      Note3 : The “-” indicates that the restricted substance corresponds to the exemption.</p>						0718

## Taiwan Region import and export contact information

Contacts are available for Taiwan Region import and export information.

**委製商/進口商名稱: 台灣聯想環球科技股份有限公司**  
**進口商地址: 台北市南港區三重路 66 號 8 樓**  
**進口商電話: 0800-000-702**



---

# Index

- 2.5-inch drive from 3.5-inch drive bay
  - replacing 65
- 2.5-inch drive from a 3.5-inch drive bay
  - removing 66
- 2.5-inch drive into a 3.5-inch drive bay
  - installing 67

## A

- air baffle
  - installing 79
  - removing 77
  - replacing 77

## B

- backplane
  - connectors 39–40
  - replacing 62, 69
- backplate
  - connectors 41

## C

- cable routing
  - CFF RAID adapter 52
  - front panel 50
  - front USB 51
  - GPU 52
  - M.2 boot adapter 53
  - optical drive 54
  - PCIe slot 8 54
  - power distribution board 55
  - tape drive 56
- carrier 187
- chassis 239
- CMOS battery
  - install 83
  - remove 81
  - replacing 81
- collecting service data 242
- completing
  - parts replacement 214
- connector
  - drive backplane 39
  - drive backplate 39
- connectors
  - backplanes 39–40
  - backplates 41
- contamination, particulate and gaseous 8
- CPU
  - installing 189
  - removing 183
  - separating 187
- CR2032 81
- creating a personalized support web page 241
- custom support web page 241

## D

- devices, static-sensitive
  - handling 62
- DIMM

- replacing 140
- disassembling 239
- drive
  - replacing 85
- drive backplane connectors 39
- drive backplate connectors 39

## E

- EIA bracket
  - installing 93
  - removing 91
  - replacing 91
- enable
  - TCM 208
  - TPM 208
- Ethernet
  - controller
    - troubleshooting 218
- Ethernet controller problems
  - solving 218
- expansion drive cage
  - installing 96
  - removing 95
  - replacing 95

## F

- fan
  - install 99
  - remove 97
- fan cage
  - install 101
- fan cage assembly
  - remove 100
- fan problems 221
- fan, fan cage
  - replacement 97
- firmware
  - update 9
- firmware updates 9
- flash power module
  - installing 105
  - removing 103
  - replacing 103
- foot stands
  - installing 108
  - removing 107
  - replacing 106
- form factor 1
- front bezel
  - installing 111
  - removing 109
  - replacing 109
- front panel 16, 21
- front panel board assembly
  - installing 113
  - removing 112
  - replacing 112
- front view 16
- Full-length 115

## G

- gaseous contamination 8
- Getting help 241
- GPU adapter
  - installing 117
  - removing 115
  - replacing 115
- GPU filler
  - installing 120
  - removing 118
  - replacing 118
- guidelines
  - options installation 59
  - system reliability 61

## H

- handling static-sensitive devices 62
- hard disk drive problems 219
- hardware service and support telephone numbers 243
- heat sink
  - installing 189
  - removing 183
  - separating 187
- heat sink nut 121, 123
  - installing 123
- help 241
- hot-swap drive
  - installing 89
  - removing 88
- hot-swap drive backplane
  - installing 64, 70
  - removing 62, 69
  - replacing 62, 69
- hot-swap power supply
  - installing 180
  - removing 177

## I

- ID label 1
- important notices 246
- install
  - CMOS battery 83
  - fan 99
  - fan cage 101
- installation
  - guidelines 59
- installation guidelines 59
- installing
  - 2.5-inch drive into a 3.5-inch drive bay 67
  - air baffle 79
  - CPU 189
  - EIA bracket 93
  - expansion drive cage 96
  - flash power module 105
  - foot stands 108
  - front bezel 111
  - front panel board assembly 113
  - GPU adapter 117
  - GPU filler 120
  - heat sink 189
  - heat sink nut 123
  - hot-swap drive 89
  - hot-swap drive backplane 64, 70
  - hot-swap power supply 180
  - internal CFF adapter 127
  - intrusion switch 131
  - memory module 142
  - microprocessor 189
  - microprocessor heat sink module 189

- optical drive 153
- optical drive cage 148
- PCIe adapter 168
- PCIe adapter holder 165
- PEEK T30 nut 123
- PHM 189
- power distribution board 171
- processor 189
- processor-heat-sink module 189
- server cover 199
- simple-swap drive 86
- simple-swap drive backplate 73
- slim optical drive 160
- system board 203
- T30 nut 123
- T4 filler 212
- tape drive 153
- insufficient PCIe resource
  - solving 232
- internal cable routing 49
- internal CFF adapter
  - installing 127
  - removing 125
- internal CFF RAID/HBA/Expander adapter
  - replacing 125
- introduction 1
- intrusion switch
  - installing 131
  - removing 129
  - replacing 129

## K

- keyboard problems 222

## M

- M.2 boot adapter
  - installing 134
  - replacing 133
- M.2 drive
  - installing 138
  - replacing 136
- memory module
  - removing 140
  - replacing 140
- memory module, install 142
- memory modules
  - removal 140
- microprocessor
  - installing 189
  - removing 183
  - separating 187
- microprocessor heat sink module
  - installing 189
  - removing 183
  - separating 187
- monitor problems 228, 235
- mouse problems 222

## N

- network
  - problems 229
- network access label 1
- network activity LED 21
- notes, important 246
- notices 245
- NVLink bridge
  - installing 146

replacing 144

## O

observable problems 229  
optical drive  
  installing 153  
  removing 150, 157  
  replacing 150  
optical drive cage  
  installing 148  
  removing 147  
  replacing 147  
optical-drive bay 16  
optical-drive eject/close button 16  
optical-drive manual-eject hole 16  
optical-drive status LED 16  
optional-device problems 232

## P

particulate contamination 8  
parts list 42  
parts replacement, completing 214  
PCIe  
  troubleshooting 232  
PCIe adapter  
  installing 168  
  removing 167  
  replacing 166  
PCIe adapter holder  
  installing 165  
  removing 164  
  replacing 164  
PEEK T30 nut 123  
  installing 123  
PHM  
  installing 189  
  removing 183  
  separating 187  
power button 21  
power cords 47  
power distribution board  
  installing 171  
  removing 170  
  replacing 170  
Power distribution board 41  
Power distribution board connectors 41  
power off the server 13  
power on the server 13  
power problems 217  
power status LED 21  
problem determination 215  
problems  
  Ethernet controller 218  
  fan 221  
  hard disk drive 219  
  keyboard 222  
  monitor 228, 235  
  mouse 222  
  network 229  
  observable 229  
  optional devices 232  
  PCIe 232  
  power 217  
  power on and power off 234  
  serial-device 236  
  software 236  
  USB device 222  
  video 228, 235  
processor  
  installing 189

removing 183  
processor-heat-sink module  
  installing 189  
  removing 183

## R

rear view 24  
rear view LED 26  
recycle 239  
recycling 239  
redundant power supply unit  
  replacing 176  
remove  
  CMOS battery 81  
  fan 97  
  fan cage assembly 100  
  M.2 boot adapter 133  
  M.2 drive 136  
  NVLink bridge 144  
removing  
  2.5-inch drive from a 3.5-inch drive bay 66  
  air baffle 77  
  CPU 183  
  EIA bracket 91  
  expansion drive cage 95  
  flash power module 103  
  foot stands 107  
  front bezel 109  
  front panel board assembly 112  
  GPU adapter 115  
  GPU filler 118  
  heat sink 183  
  hot-swap drive 88  
  hot-swap drive backplane 62, 69  
  hot-swap power supply 177  
  internal CFF adapter 125  
  intrusion switch 129  
  memory modules 140  
  microprocessor 183  
  microprocessor heat sink module 183  
  optical drive 150, 157  
  optical drive cage 147  
  PCIe adapter 167  
  PCIe adapter holder 164  
  PHM 183  
  power distribution board 170  
  processor 183  
  processor-heat-sink module 183  
  server cover 197  
  simple-swap drive 85  
  simple-swap drive backplate 71  
  system board 200  
  T4 filler 211  
  tape drive 150, 157  
removing, memory module 140  
replacement  
  fan, fan cage 97  
replacing  
  2.5-inch drive from 3.5-inch drive bay 65  
  air baffle 77  
  backplane 62, 69  
  CMOS battery 81  
  DIMM 140  
  drive 85  
  EIA bracket 91  
  expansion drive cage 95  
  flash power module 103  
  foot stands 106  
  front bezel 109  
  front panel board assembly 112  
  GPU adapter 115  
  GPU filler 118

- hot-swap drive backplane 62, 69
- internal CFF RAID/HBA/Expander adapter 125
- intrusion switch 129
- M.2 boot adapter 133
- M.2 drive 136
- memory module 140
- NVLink bridge 144
- optical drive 150
- optical drive cage 147
- PCIe adapter 166
- PCIe adapter holder 164
- power distribution board 170
- redundant power supply unit 176
- server cover 197
- simple-swap-drive backplate 71
- system board 200
- T4 filler 211
- tape drive 150
- replacing heat sink nut 121
- retainer on M.2 boot adapter
  - adjusting 137

## S

- safety v
- safety inspection checklist vi, 60
- Secure Boot 210
- security
  - integrated cable lock 38
  - padlock 38
  - security
    - security door lock 38
- security advisories 13
- separating
  - carrier 187
  - CPU 187
  - heat sink 187
  - microprocessor 187
  - microprocessor heat sink module 187
  - PHM 187
- serial number 206
- serial-device problems 236
- server components 15
- server cover
  - installing 199
  - removing 197
  - replacing 197
- server locks
  - locations 38
- server power on or power off problems 234
- service and support
  - before you call 241
  - hardware 243
  - software 243
- service data 242
- simple-swap drive 160
  - installing 86
- simple-swap drive backplate
  - installing 73
  - removing 71
- simple-swap drives
  - removing 85
- simple-swap-drive backplate
  - replacing 71
- slim optical drive
  - installing 160
- software problems 236
- software service and support telephone numbers 243
- solving
  - Ethernet controller problems 218
  - insufficient PCIe resource 232
  - solving power problems 217
  - static-sensitive devices

- handling 62
- storage-drive bay 16
- support web page, custom 241
- system board
  - installing 203
  - removing 200
  - replacing 200
- system board components 33
- system board LED 35
- system board switches and jumpers 36
- system error LED 21, 35
- system ID button 21
- system ID LED 21, 35
- system power LED 35
- system reliability guidelines 61

## T

- T30 nut 123
  - installing 123
- T4 filler
  - installing 212
  - removing 211
  - replacing 211
- Taiwan Region import and export contact information 247
- tape drive
  - installing 153
  - removing 150, 157
  - replacing 150
- TCM 208
- Tech Tips 13
- telephone numbers 243
- Torx T30 nut 121
- TPM 208
- trademarks 246
- troubleshooting 228, 232, 235–236
  - by symptom 218
  - fan problems 221
  - hard disk drive problems 219
  - keyboard problems 222
  - mouse problems 222
  - network problems 229
  - observable problems 229
  - power on and power off problems 234
  - serial-device problems 236
  - symptoms-based troubleshooting 218
  - USB-device problems 222
  - video 228, 235
- Trusted Cryptographic Module 208
- Trusted Platform Module 208

## U

- UEFI Secure Boot 210
- updating,
  - machine type 206
- USB-device problems 222

## V

- video problems 228, 235

## W

- warranty 1
- working inside the server
  - power on 61



**Lenovo**